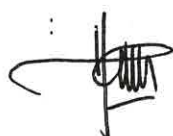


c. Review and Approval

Reviewed and approved by	
Signature	: 
Name	: Hamidah . binfi . Hama
Designation	: Workshop In-Charge
Date	: 4 SEPT 2023

d. Acceptance (FOR QA USE ONLY)

Accepted by	
Signature	:
Name	:
Designation	:
Date	:
Remark (if any)	

e. Registration and Update (FOR QA USE ONLY)

- 1. Internal Publication Masterless : Date: _____
- 2. GAMS Portal : Date: _____
- 3. Requestor notice : Date: _____

- 39-A-95-61-14-01A-66AA-K Flotation bag (forward float assembly) - Repair procedure
- 39-A-95-61-14-01A-91LA-K Flotation bag (forward float assembly) - Unfold/fold procedures
- 39-A-95-61-14-02A-921A-K Inflation / deflate valve (forward)
- 39-A-95-61-15-00A-31AA-K Aft float assembly (left/right) - D
- 39-A-95-61-15-00A-530A-K Aft float assembly (left/right) - D
- 39-A-95-61-15-00A-710A-K Aft float assembly (left/right) - A
- 39-A-95-61-15-01A-364A-K Flotation bag (aft float assembly)
- 39-A-95-61-15-01A-66AA-K Flotation bag (aft float assembly)
- 39-A-95-61-15-01A-91LA-K Flotation bag (aft float assembly)
- 39-A-95-61-15-02A-921A-K Inflation / deflate valve (aft float)
- 39-A-95-61-16-00A-520A-K Forward left cover - Remove procedure
- 39-A-95-61-16-00A-720A-K Forward left cover - Install procedure
- 39-A-95-61-17-00A-520A-K Forward right cover - Remove procedure
- 39-A-95-61-17-00A-720A-K Forward right cover - Install procedure
- 39-A-95-61-18-00A-520A-K Aft left cover - Remove procedure
- 39-A-95-61-18-00A-720A-K Aft left cover - Install procedure
- 39-A-95-61-19-00A-520A-K Aft right cover - Remove procedure
- 39-A-95-61-19-00A-720A-K Aft right cover - Install procedure
- 39-B-95-61-00-00A-034A-K Emergency flotation system (Aerazur) - Technical data (physical breakdown)

Flotation bag (forward float assembly) - Repair procedure

CAUTIONS

- Make sure that the damage to repair has not a dimension which is more wide than that permitted.
- Make sure that the total repaired area must not be more than the 1 % of the full float bag-surface. Make sure also that the quantity of the applied repair patches is not more than five.

CAUTION

Make sure that you obey these precautions to get the best result when you apply the adhesive:

- The ambient temperature is between 13 thru 27 °C
- The ambient humidity is 65 % maximum

Acknowledge

Table of contents

3	Flotation bag (forward float assembly) - Repair patch application
---	---

References

Table 1 References

Data Module	Title
-------------	-------