

Continuing Airworthiness Notice (CAN)					
AN No. / Rev No. CAN 22 / R0					
Date	10-Jun-2020				

To: Fire and Rescue Department (FRDM) AW189 Pilot with GAM Limited Certification Authorisation Approval and GAM Engineering Manager CC: GAM Accountability Manager, GAM Quality Assurance Manager

From: Continuing Airworthiness Management (CAM) Manager

Subject: Pre-Flight/Daily Inspection Checklist

1. REFERENCE

AW189 Aircraft Maintenance Programme (AMP) JBPM/CAMO/AMP/AW189 Issue 2 Rev 0 Date 05 September 2019 or later approved revisions.

2. APPLICABILITY

9M-BOE (49045) & 9M-BOF (49053)

3. INTRODUCTION

Pre-flight/Daily inspection is the inspection carried out before flight to ensure that the aircraft is fit for the intended flight. The inspections as listed in the AMP Chapter 16.0 shall only be performed by the authorised maintenance personnel or by an authorised pilot when aircraft is away from base station. The Pre-Flight in the AMP do not replace the Pre-Flight Inspections in Rotorcraft Flight Manual (RFM) requirement list, which must be performed by the pilot.

This notice is issued as a reminder for the compliance of the Pre-Flight/Daily inspection before the aircraft may be released for service.

4. REQUIREMENT

- a. The Pre-flight/Daily inspection shall be performed before flight in accordance with Chapter 16 of AMP referenced above. Refer Appendix 1. The Pre-Flight in the AMP do not replace the Pre-Flight Inspections in Rotorcraft Flight Manual (RFM) requirement list, which must be performed by the pilot.
- b. The inspection shall be performed by authorised maintenance personnel. If aircraft is away from base station, the inspection may also be performed by the authorised pilot.
- c. The Daily Inspection column in the Aircraft Journey Log (AJL) then shall be filled and signed by the applicable personnel upon completion.
- d. The aircraft shall only be released for service upon satisfactory completion of the inspection and appropriate AJL column has been duly filled and signed.

Kindly be informed and adhered to the requirement.

Thank you.

Zaty Nadhira Binti Mohamed Zuhari

CAM Manager

zaty@galaxyaerospace.my



Continuing Airworthiness Notice (CAN)					
CAN No. / Rev No.	CAN 22 / R0				
Date 10-Jun-2020					

APPENDIX 1

Ů	JABATAN BOMBA DAN PENYELAMAT MALAYSIA									
DOCUMENT TITLE	AIRCRAFT MAIN	TENANCE PR	OGRAMME	AIRCRAFT TYPE	AGUSTAWESTLAND AW189					
PAGE TITLE	PRE-FLIGHT / TURN AROUND / DAILY INSPECTION			REFERENCE	JBPM/CAMO/AMP/AW189	ISSUE	2	REVISION	0	
CHAPTER	16.0	PAGE	3 of 4	DATE	05 SEPTEMBER 2019		•	•		

NO	ITEM	INSPECTION REQUIREMENTS	REMARKS				
CHECKS	CHECKS						
DAILY II	DAILY INSPECTIONS - ENGINE MAINTENANCE PROGRAM						
01	Oil tank Servicing	Check the engine oil level, service, as necessary Refer: EMP TASK 72-00-00-600-802	DI				
02	Fault Isolation	Check and disposition FADEC Maintenance Messages Refer: EMP TASK 72-00-00-810-809	DI				
AFTER I	AFTER LAST FLIGHT INSPECTION - CORROSION CONTROL PROGRAMME - MILD INSPECTION						
03	CP-019 Tail Rotor Restoration	Wash and clean the tail rotor head and related equipment Refer: ACCP 89-A-20-21-01-00A-258A-D	DI				
04	CP-020 Main Rotor Restoration	Wash and clean the main rotor head and related equipment Refer: ACCP 89-A-20-21-01-00A-258A-D	DI				



Continuing Airworthiness Notice (CAN)				
CAN No. / Rev No. CAN 22 / R0				
Date 10-Jun-2020				

JABATAN BOMBA DAN PENYELAMAT MALAYSIA									
DOCUMENT TITLE	AIRCRAFT MAINTENANCE PROGRAMME			AIRCRAFT TYPE	AGUSTAWESTLAND AW189				
PAGE TITLE	PRE-FLIGHT / TURN AROUND / DAILY INSPECTION			REFERENCE	JBPM/CAMO/AMP/AW189	ISSUE	2	REVISION	0
CHAPTER	16.0	PAGE	4 of 4	DATE	05 SEPTEMBER 2019				

NO	ITEM	INSPECTION REQUIREMENTS	REMARKS			
OPTION	OPTIONAL OPERATION / MISSION EQUIPMENT					
05	Rescue Hoist Cable	GVI of the maximum length of cable used during the day operation for damage and condition. Carried out after the last flight of the day or before the first flight of the day if the rescue hoist is used or it is envisaged to be used. Refer: AMPI 89-A-25-91-01-06A-310B-A AMPI 89-A-25-93-00-02A-310A-A	DI			
06	Rescue Hoist D-Lock Hook	GVI for damage Refer: AMPI 89-A-25-91-01-07A-310A-A AMPI 89-A-25-93-00-03A-310A-A	DI			
07	Rescue Hoist Slide-Lock Hook	GVI for damage Refer: AMPI 89-A-25-91-01-07A-310A-A AMPI 89-A-25-93-00-03A-310A-A	DI			