

RECORD OF TEMPORARY REVISIONS

ACTIVE TEMPORARY REVISIONS

The following Temporary Revisions are still active and must be retained in your printed manual.

For Temporary Revisions, changes from the basic issue are printed in red.

TR N°	Page	Approval	Note
2-3	2-6, 2-9	EASA Approval N° R.A. 01396 dated 22 October 2007	_
5-2	5-5A, 5-5, S52-iA, S52-i, S52-1A, S52-1, S52-6, S52-7	Approved with NDC-139G9350-010 dated 23 September 2020 under the authority of DOA ref. EASA.21J.005	_

INACTIVE TEMPORARY REVISIONS

The following Temporary Revisions are inactive and must not be retained in your printed manual:

TR N° Page Approval Note 5-1 S11-8A, S11-8B, S11-21, S11-22, S11-24, S11-25 P. EASA 10072085 S10-24, S11-25 Approved with NDC-139G0257-026 P. EASA 10072085 Introduced with RFM Issue 2 Revision 25.
S11-21, S11-22, NDC-139G0257-026 Issue 2 Revision 25.



This Page Intentionally Left Blank



CHECKS

 Main and tail rotor tie downs — Removed. (if present)

AREA N°1 (Helicopter Nose)

Nose exterior — Condition.

Pitot-Static Probe (Left side) — Cover removed, condition and un-obstructed.

 Left side brake lines in brake — Condition. pedal area (looking through bottom transparent panel)

Nose landing gear — Condition, shock strut extension, leaks, tire pressure.

6. Ventilation air intakes (in — Un-obstructed. landing gear bay)

7. Nose compartment access — Latched and Secure.

8. Pitot-Static Probe (Right side) — Cover removed, condition and obstructions.

 Right side brake lines in brake — Condition. pedal area (looking through bottom transparent panel)

AREA N°2 (Fuselage - Right Hand Side)

Windshield and roof — Condition, cleanliness.
 transparent panel

11. Windscreen wiper → — Condition.

Fuselage exterior — Condition.

13. Pilot cabin door
 — Condition, cleanliness, window secure. Check window for presence of cracks.

14. Passenger cabin door — Condition, cleanliness.



This Page Intentionally Left Blank



This Page Intentionally Left Blank

- 54. Main rotor components and General condition. blades
- 55. Left side emergency exits → Confirm secure.
- 56. Drains and vent lines → Free of obstructions.
- 57. Fuel tank sump area (Left side)
- Confirm no leaks.
- 58. Main landing gear
- Condition, shock strut extension, leaks, tire pressure.

59. Passenger door

- Secure.
- 60. Cowling and fairings →
- Condition.
- 61. Co-pilot cabin door
- Condition, cleanliness, window secure. Check window for presence of cracks.
- 62. Windshield and roof transparent panel
- Condition and cleanliness.
- 63. Windscreen wiper →
- Condition.

AREA N°7 (Cabin and Cockpit Interior)

- 64. Passenger Emergency exits Verify secure.

65. Cabin interior

Equipment and cargo secure.

66. First Aid Kit →

- On board.
- 67. Cabin fire extinguisher → Secure, charge.
- 68. Passenger doors

controls -

- Secure.
- 69. Pilot and Copilot safety belt Condition. and inertia reel.
- 70. Pilot and Copilot seat Secure.
- 71. Pilot and
 - Copilot flight Condition and secure.
- 72. Lower and lateral transparent Integrity, cleanliness and no panels
 - signs of brake fluid.