



**(F6177)**

26 quai C. Pasqua - 92300 Levallois-Perret - France  
Tél. +33 1 58 63 16 90 - Fax: +33 1 58 63 16 18

# **MAINTENANCE MANUAL WITH ILLUSTRATED PARTS LIST**

## **AIRCRAFT BATTERY**

**427CK-1**

**(SAFT PART NUMBER 024055-000)**

**(ELDEC PART NUMBER BA34-02)**

**(SAFRAN PART NUMBER BX00201-03)**

Date of creation: Jan 17/2002

**24-32-09**

edition 11  
Mar 09/2022



**Component Maintenance Manual  
427CK-1**

This document and all information contained herein are the property of Saft. Its use is restricted solely to the maintenance of Saft batteries and may under no circumstances be used for any other manufacturer's products. No person may, in whole or in part, duplicate, use or disclose this information for any other purpose without the prior written consent of Saft.



Component Maintenance Manual  
427CK-1

**RECORD OF REVISIONS**

Rev. n°	Issue date	Inserted		Rev. n°	Issue date	Inserted	
		Date	By			Date	By
1	Feb 28/1999	Feb 28/1999	Saft				
2	Apr 30/2001	Apr 30/2001	Saft				
3	Mar 31/2003	Mar 31/2003	Saft				
4	Jan 31/2005	Jan 31/2005	Saft				
5	Sep 15/2005	Sep 15/2005	Saft				
6	Jul 30/2011	Jul 30/2011	Saft				
7	Jul 19/2013	Jul 19/2013	Saft				
8	Jul 29/2015	Jul 29/2015	Saft				
9	Oct 15/2018	Oct 15/2018	Saft				
10	Jul 21/2020	Jul 21/2020	Saft				
11	Mar 09/2022	Mar 09/2022	Saft				



**Component Maintenance Manual  
427CK-1**

PAGE INTENTIONALLY LEFT BLANK



**Component Maintenance Manual  
427CK-1**

**RECORD OF TEMPORARY REVISIONS**

Rev. n°	Issue date	Inserted		Rev. n°	Issue date	Inserted	
		Date	By			Date	By
24-9	07/19/06	07/19/06	SAFT				
24-13	12/08/09	12/08/09	SAFT				



**Component Maintenance Manual  
427CK-1**

PAGE INTENTIONALLY LEFT BLANK



Component Maintenance Manual  
427CK-1

**SERVICE BULLETIN LIST**

Service bulletin		Incorporation into CMM		Title
Number	Rev.	Date / No Effect	Rev.	
SB02-02	2	No Effect	-	INSPECT/TEST APU BATTERY
SB24-32-6	3	No Effect	-	INSTALLATION OF LABEL UPDATING BOMBARDIER PART NUMBER TO GL511-2301-5 AND GOODRICH POWER SYSTEMS PART NUMBER TO BX00201-03
SB-24-32-4	1	Jul 30/2011	6	INSTALLATION OF LABEL UPDATING BOMBARDIER PART NUMBER TO GL511-2301-3 AFTER INSTALLATION OF THE NEW HARNESS ASSEMBLY AND MOUNTING HARDWARE
SB0213	3	No Effect	-	INSPECTION AND TIGHTENING OF THE BATTERY BOX COVER LATCH ASSEMBLIES, BATTERY SAFT P/N 024055-000
SB 02-03	0	No Effect	-	REPLACE EXISTING APU BATTERY HARNESS ASSEMBLY, P/N 024119-000



**Component Maintenance Manual  
427CK-1**

PAGE INTENTIONALLY LEFT BLANK



### LIST OF EFFECTIVE PAGES

TITLE PAGE		<a href="#">Mar 09/2022</a>	DESCRIPTION AND	1	<a href="#">Mar 09/2022</a>
	T - 2	<a href="#">Mar 09/2022</a>	OPERATION	2	<a href="#">Mar 09/2022</a>
				3	<a href="#">Mar 09/2022</a>
				4	<a href="#">Mar 09/2022</a>
RECORD OF REVISIONS	ROR-1	<a href="#">Mar 09/2022</a>			
	ROR-2	Blank	TESTING AND FAULT ISOLATION	1001	<a href="#">Mar 09/2022</a>
				1002	<a href="#">Mar 09/2022</a>
RECORD OF TEMPORARY REVISIONS	RTR-1	<a href="#">Mar 09/2022</a>		1003	<a href="#">Mar 09/2022</a>
	RTR-2	Blank		1004	Blank
SERVICE BULLETIN LIST	SBL-1	<a href="#">Mar 09/2022</a>	DISASSEMBLY	3001	<a href="#">Mar 09/2022</a>
	SBL-2	Blank		3002	Blank
LIST OF EFFECTIVE PAGES	LEP-1	<a href="#">Mar 09/2022</a>	CLEANING	4001	<a href="#">Mar 09/2022</a>
	LEP-2	<a href="#">Mar 09/2022</a>		4002	<a href="#">Mar 09/2022</a>
TABLE OF CONTENTS	TOC-1	<a href="#">Mar 09/2022</a>			
	TOC-2	<a href="#">Mar 09/2022</a>			
	TOC-3	<a href="#">Mar 09/2022</a>			
	TOC-4	Blank			
LIST OF ILLUSTRATIONS	LOI-1	<a href="#">Mar 09/2022</a>			
	LOI-2	Blank			
INTRODUCTION	Intro-1	<a href="#">Mar 09/2022</a>			
	Intro-2	<a href="#">Mar 09/2022</a>			
	Intro-3	<a href="#">Mar 09/2022</a>			
	Intro-4	<a href="#">Mar 09/2022</a>			
	Intro-5	<a href="#">Mar 09/2022</a>			
	Intro-6	Blank			

## Component Maintenance Manual 427CK-1

INSPECTION/CHECK	5001	<a href="#">Mar 09/2022</a>	ILLUSTRATED	10001	<a href="#">Mar 09/2022</a>
	5002	<a href="#">Mar 09/2022</a>	PARTS LIST	10002	<a href="#">Mar 09/2022</a>
	5003	<a href="#">Mar 09/2022</a>		10003	<a href="#">Mar 09/2022</a>
	5004	<a href="#">Mar 09/2022</a>		10004	<a href="#">Mar 09/2022</a>
	5005	<a href="#">Mar 09/2022</a>		10005	<a href="#">Mar 09/2022</a>
	5006	<a href="#">Mar 09/2022</a>		10006	<a href="#">Mar 09/2022</a>
	5007	<a href="#">Mar 09/2022</a>			
	5008	<a href="#">Mar 09/2022</a>	STORAGE	15001	<a href="#">Mar 09/2022</a>
	5009	<a href="#">Mar 09/2022</a>	(INCLUDING	15002	<a href="#">Mar 09/2022</a>
	5010	<a href="#">Mar 09/2022</a>	TRANSPORTATION)	15003	<a href="#">Mar 09/2022</a>
				15004	<a href="#">Mar 09/2022</a>
ASSEMBLY	7001	<a href="#">Mar 09/2022</a>			
	7002	<a href="#">Mar 09/2022</a>			
	7003	<a href="#">Mar 09/2022</a>			
	7004	Blank			
FITS AND CLEARANCES	8001	<a href="#">Mar 09/2022</a>			
	8002	Blank			
SPECIAL TOOLS, FIXTURES, EQUIPMENT AND CONSUMABLES	9001	<a href="#">Mar 09/2022</a>			
	9002	<a href="#">Mar 09/2022</a>			

### TABLE OF CONTENTS

<b>RECORD OF REVISIONS</b>	<b>ROR-1</b>
<b>RECORD OF TEMPORARY REVISIONS</b>	<b>RTR-1</b>
<b>SERVICE BULLETIN LIST</b>	<b>SBL-1</b>
<b>LIST OF EFFECTIVE PAGES</b>	<b>LEP-1</b>
<b>TABLE OF CONTENTS</b>	<b>TOC-1</b>
<b>LIST OF ILLUSTRATIONS</b>	<b>LOI-1</b>
<b>INTRODUCTION</b>	<b>-INTRO-1</b>
1. General	INTRO-1
2. Definitions	INTRO-1
3. Safety	INTRO-1
3-1. Physical	INTRO-1
3-2. Electrical	INTRO-1
3-3. Chemical	INTRO-1
4. Ground applications	INTRO-2
5. Placing a new battery in service - initial commissioning	INTRO-2
6. Battery ratings capacity	INTRO-2
7. Recycling	INTRO-2
8. End of life cells	INTRO-2
9. Measurements	INTRO-3
9-1. Units of measure	INTRO-3
9-2. Measurement conversion table	INTRO-4
9-3. Temperature conversion guide	INTRO-4
9-4. Abbreviations	INTRO-5
<b>DESCRIPTION AND OPERATION</b>	<b>1</b>
1. Overview	1
2. Technical data	1
2-1. Characteristics	1
3. Description	1
4. Operation	2
4-1. Climatic requirement	2
4-2. Maintenance	2
5. Charge	2
5-1. Constant current charge	3
5-2. Active standby mode (use of a trickle charge)	3
<b>TESTING AND FAULT ISOLATION</b>	<b>1001</b>
1. Introduction	1001
2. Battery faults	1001
2-1. Battery electrical faults	1001
2-2. Cell faults	1002
2-3. Physical faults	1003
<b>DISASSEMBLY</b>	<b>3001</b>
1. Introduction	3001
1-1. General	3001
1-2. Safety	3001
1-3. Job set-up information	3001
2. Disassembly of the battery	3001
2-1. Removal of the cover complete	3001
2-2. Removal of the cell assembly	3001

2-3. Removal of the sensor connector complete	3001
2-4. Removal of the liner-spacer kit	3001
2-5. Removal of the power connector complete	3001

### **CLEANING** ----- **4001**

1. Introduction	4001
2. Safety	4001
3. Equipment	4001
3-1. Standard tools	4001
3-2. Special tools	4001
3-3. Consumables	4001
4. Light cleaning	4001
4-1. Procedure	4001
5. Thorough cleaning	4001
5-1. Procedure	4001
5-2. Lubrication	4002

### **INSPECTION/CHECK** ----- **5001**

1. Introduction	5001
2. Maintenance intervals	5001
2-1. Periodical check	5001
2-2. Regular check	5001
2-3. General overhaul	5001
3. Recording	5001
4. Safety	5001
5. Equipment	5001
5-1. Standard tools	5001
5-2. Special tools	5001
6. Periodical check	5002
6-1. Visual inspection	5003
6-2. Insulation check	5003
6-3. Nut tightness	5004
6-4. Open circuit voltage check	5004
6-5. Polarization test	5004
6-6. Residual discharge	5004
6-7. Adjust electrolyte level	5004
6-8. Supplementary test	5005
7. Regular check	5006
7-1. Cell shorting	5007
7-2. Capacity check	5007
8. General overhaul	5008
8-1. Component inspection	5009
8-2. Replacement of faulty components	5009
8-3. Sensor connector check	5009
8-4. Vent-valve test	5010

### **ASSEMBLY** ----- **7001**

1. Introduction	7001
2. Safety	7001
3. Equipment	7001
3-1. Standard tools	7001
3-2. Special tools	7001
4. Battery Assembly	7001
4-1. Installation of the liner-spacer kit and sensor connector complete	7001
4-2. Installation of the power connector complete	7002
4-3. Installation of the cell assembly	7003
4-4. Recording	7003

### **FITS AND CLEARANCES** ----- **8001**

1. Introduction	8001
2. Torque table	8001



**Component Maintenance Manual  
427CK-1**

**SPECIAL TOOLS, FIXTURES, EQUIPMENT AND CONSUMABLES ----- 9001**

1. Introduction -----	9001
2. Standard tools -----	9001
3. Special tools -----	9001
4. Consumables -----	9002

**ILLUSTRATED PARTS LIST -----10001**

1. Introduction -----	10001
1-1. General -----	10001
1-2. Alpha numerical index -----	10001
1-3. Detailed parts list -----	10001
2. Alpha numerical index -----	10003
3. Detailed part list -----	10004

**STORAGE (INCLUDING TRANSPORTATION) -----15001**

1. Introduction -----	15001
1-1. General -----	15001
1-2. Storage room -----	15001
1-3. Climatic conditions -----	15001
2. Storage -----	15001
2-1. Inactive long-term storage -----	15001
2-2. Inactive standby storage -----	15001
3. Storage of spares -----	15004
3-1. Spare cells -----	15004
3-2. Spare O-rings, gaskets, and vent-valves -----	15004
4. Transportation procedure -----	15004



**Component Maintenance Manual  
427CK-1**

PAGE INTENTIONALLY LEFT BLANK

### LIST OF ILLUSTRATIONS

INTRO-1	<a href="#">INTRO-1: Universal Recycling Symbols</a>	INTRO-2
1	<a href="#">1 - 427CK-1 Nickel-Cadmium Aircraft Battery</a>	page 2
5001	<a href="#">5001 - Periodical check</a>	page 5002
5002	<a href="#">5002 - Position of syringe in cell vent seat</a>	page 5005
5003	<a href="#">5003 - Regular check</a>	page 5006
5004	<a href="#">5004 - General overhaul</a>	page 5008
7001	<a href="#">7001 - Liner-spacer kit</a>	page 7001
7002	<a href="#">7002 - Sensor connector assembly</a>	page 7002
7003	<a href="#">7003 - Battery layout</a>	page 7003
IPL-1	<a href="#">IPL-1 - 427CK-1 Nickel-Cadmium Aircraft Battery</a>	page 10004
15001	<a href="#">15001 - Standby storage period</a>	page 15002
15002	<a href="#">15002 - Inactive standby storage</a>	page 15003



**Component Maintenance Manual  
427CK-1**

PAGE INTENTIONALLY LEFT BLANK



### INTRODUCTION

#### 1. General

This manual provides the information necessary for an experienced shop technician to maintain Saft nickel-cadmium batteries. It describes the construction of the battery as well as the techniques used to operate, maintain, overhaul, and generally care for the battery. Following these instructions will make sure of optimal performances and life of the Saft batteries.

All aircraft batteries require checking and maintenance in order to make sure they are safe when installed and perform their required functions, especially in emergency conditions on board the aircraft. Maintenance permit to identify and correct any issues. Proper battery maintenance assures a low probability of failure. It achieves high levels of MTBUR and MTBF. Failure prevention on board the aircraft make sure of safe operation, reduces delays and operational costs.

Every effort has been made to provide complete and accurate instructions. If a situation should arise that is not adequately described in this manual, please contact Saft via the Internet at [www.saftbatteries.com/](http://www.saftbatteries.com/) or at one of the following addresses:

Saft America Inc. (V09052)  
711 Gil Harbin Industrial Boulevard  
Valdosta, Georgia 31601 - USA  
Tel: +1 (229) 247-2331  
Fax: +1 (229) 247-8486

Saft (F6177)  
26 quai C. Pasqua  
92300 Levallois-Perret - France  
Tel: +33 1 58 63 16 00  
fax: +33 1 58 63 16 18

**Website** All Saft technical documentation, distributors and shops can be found at [www.saftbatteries.com/cmm](http://www.saftbatteries.com/cmm).

#### 2. Definitions

**WARNING:** WARNINGS ADVISE TO USE OF MATERIALS, PROCEDURES, OR LIMITS, WHICH MUST BE FOLLOWED PRECISELY TO AVOID PERSONAL INJURIES, OR EFFECT SAFETY OF FLIGHT.

**CAUTION:** CAUTIONS CALL ATTENTION TO PROCEDURES WHICH MUST BE FOLLOWED TO AVOID DAMAGE TO EQUIPMENT OR PARTS.

**NOTE:** NOTES call attention to procedures which make the job easier.

#### 3. Safety

**CAUTION:** EXCEPT FOR THOSE STEPS THAT REQUIRE THE BATTERY TO BE CHARGED, DO ALL STEPS ON DISCHARGED BATTERIES (REFER TO [Residual discharge](#) PARAGRAPH) TO AVOID THE POSSIBILITY OF ELECTRIC SHOCK. TIGHTEN VENT-VALVES ([230](#)) BEFORE THE START OF THE DISCHARGE. BATTERY CELLS DELIVER VERY HIGH CURRENT WHEN SHORT-CIRCUITED. BE CAREFUL. REMOVE RINGS, WATCHES, NECKLACES, METALLIC BELTS OR OTHER JEWELRY TO AVOID ELECTRIC SHOCK.

**CAUTION:** DO NOT TILT THE BATTERY WHILE DOING MAINTENANCE, ANY CONTACT OF SKIN WITH ELECTROLYTE CAN CAUSE SEVERE BURNS.

Local safety regulations should be followed as safety regulations are country-dependent.

There are three types of risks.

##### 3-1. Physical

- Handling: the battery is heavy. Use proper technique when lifting heavy loads. Bend your legs and not your back.
- Wear protective shoes.

##### 3-2. Electrical

- Do not wear rings, watches, chains, belt buckles, necklaces or any other conductive objects.
- Use insulated tools.

##### 3-3. Chemical

- For a complete listing of hazards, refer to the Battery Information Sheet (BIS) available on Saft's website at [www.saftbatteries.com/cmm](http://www.saftbatteries.com/cmm)
- Electrolyte is very corrosive and can damage the skin. Use proper personal protective equipment (PPE) such as gloves and an apron. If it touches the skin, flush affected area with large quantities of water. After flushing begins, remove all contaminated clothing.
- Electrolyte is very dangerous to the eyes, use protective goggles. If the electrolyte comes in contact with the eyes, flush with water for 15 to 30 minutes and get immediate medical aid.
- Saft recommends the use of an amphoteric solution (both acidic and basic behavior) and chelator (able to trap cations as a chelate complex) to neutralize electrolyte according to the local regulation.

- Electrolyte ingestion can cause damage to the throat and the respiratory tract. Do not try to vomit. Get medical aid immediately.
- Skin contact with nickel can cause chronic eczema.
- Inhalation of cadmium oxide can cause dry throat, headaches, vomiting, chest pain, and difficulties breathing. If inhaled, get fresh air. If stops breathing, give artificial respiration. If breathing becomes difficult, give oxygen. Get medical aid immediately.
- Potassium hydroxide in the electrolyte can cause eczema.

### 4. Ground applications

Saft batteries can be used in ground applications for starting gas turbine generators, powering ground mobile equipment, or in shop testing equipment. The same principles used in flight operations apply when the battery is used in ground applications. Ventilation of the battery during ground use can be accomplished through a ventilation system or by simply removing the cover (only in a well-ventilated area). Check with your local authorities for regulations in effect.

### 5. Placing a new battery in service - initial commissioning

**NOTE:** Whether or not the battery has been subject to disassembly and reassembly, before to issue in service and installation, check the tightness of all nuts ([140](#) and [160](#)) to verify that torque values correspond with those specified (refer to chapter [Nut tightness](#)).

Before installation of the battery into the aircraft for service:

- If initial commissioning is performed within 12 months then do [Visual inspection](#), [Insulation check](#), [Nut tightness](#), [Charge](#) [Adjust electrolyte level](#), and repeat [Insulation check](#).
- If initial commissioning is performed after 12 months do [Charge](#) and [Regular check](#).

Starting date for this period is the date of manufacturing (DMF).

### 6. Battery ratings capacity

Nickel-cadmium batteries are rated in terms of capacity in ampere-hours (Ah) (rated capacity).

American Standard AS8033 defines capacity as "the dischargeable ampere-hours (Ah) available from a fully charged cell/battery at any specified discharge rate/temperature condition".

Other definitions for battery ratings can be found in EN2570, IEC 60952 and RTCA DO 293.

A battery rated for 1C<sub>1</sub> Ah indicates that the battery is rated at a value based upon a discharge time of 1 hour at +23 °C ± 3 °C (+73.4 °F ± 5.4 °F).

### 7. Recycling

All batteries eventually lose their ability to perform and are eligible for scrapping and recycling. Saft takes environmental matters seriously and advocates proper recycling of nickel-cadmium batteries and their components. To that end, Saft operates recycling facilities in both Europe and North America.

Nickel-cadmium batteries contain nickel, cadmium, and potassium hydroxide and should be disposed of properly. In all cases, rely on local and national regulations for proper battery disposal and/or shipping to an appropriate recycling location.

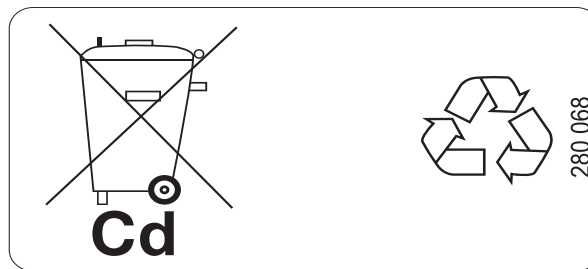


Figure INTRO-1: Universal Recycling Symbols

You can find the nearest recycling collection point on our website at [www.saftbatteries.com](http://www.saftbatteries.com).

### 8. End of life cells

EASA and FAA regulations 'Part 145', require that end of life cells must be disposed of in a manner that does not allow them to be returned to service. The following procedure provides a means to comply with these regulations.

While other authority requirements may be less explicit, Saft recommends that the following procedures be adopted in order to make sure that end of life cells cannot be re-used:

- Make sure that appropriate protective measures (refer to [Safety](#) paragraph and the Battery Information Sheet (BIS)) are taken.
- Make sure that the cell(s) is (are) fully discharged (refer to [Cell shorting](#) paragraph)
- Break or cut the terminals. In the event of electrolyte leakage, make sure that appropriate spill clean-up measures are observed as described in the Battery Information Sheet (BIS).
- Individually bag each cell in a liquid proof bag and dispose of the cell in accordance with applicable transport, health and safety and recycling regulations (Refer to [Recycling](#) paragraph).

### 9. Measurements

The measurements given in this manual comes from the original manufacturer drawings.

This CMM uses the international system (SI) of units for quantities and values. Additionally US Imperial units are given in parenthesis.

#### 9-1. Units of measure

##### 9-1-1. SI Units

A	Ampere
Ah	Ampere hours
Bar	Bar
C <sub>1</sub> A	Rated current
C <sub>1</sub> Ah	Rated capacity for an hour
cm <sup>3</sup>	Centimeter cube
g	Gram
h	Hour
m	Meter
min	Minute
N	Newton
N.m	Newton meter
Pa	Pascal
V <sub>DC</sub>	Volt direct current
°C	Degree Celsius
%	Per cent
Ω	Ohm
μS/cm	Micro-Siemens per centimeter

##### 9-1-2. US Imperial Units

ft	Foot
in	Inch
in.Hg	Inch of Mercury
lb	Pound
lbf.in	Pound force inch
psi	Pound per square inch
°F	Degree Fahrenheit

### 9-1-3. Multiplying Prefixes

da	Deca
h	Hecto
k	Kilo
M	Mega
m	Milli
μ	Micro

### 9-2. Measurement conversion table

#### 9-2-1. From SI unit to US Imperial unit

1 Bar	14.504 psi
1 cm	0.3937 in
1 cm <sup>2</sup>	0.1550 in <sup>2</sup>
1 cm <sup>3</sup>	0.06 in <sup>3</sup>
1 g	0.0353 oz
1 g/l	0.000578 oz/in <sup>3</sup>
1 hPa	0.01450 psi
1 kg	2.2046 lb
1 kg/l	0.578 oz/in <sup>3</sup>
1 mm	0.0394 in
1 N	0.2248 lbf
1 N.m	8.8507 lbf.in

#### 9-2-2. From US Imperial unit to SI unit

1 gal (U.S.)	3.7854 l
1 in	2.54 cm
1 in	25,4 mm
1 in <sup>2</sup>	6.4516 cm <sup>2</sup>
1 in <sup>3</sup>	16.4 cm <sup>3</sup>
1 in.Hg	33.864 hPa
1 lb	0.4536 kg
1 lbf	4.4482 N
1 lbf.in	0.1130 N.m
1 lbf.ft	1.3558 N.m
1 oz	28.3495 g
1 oz/in <sup>3</sup>	1,771.25 g/l
1 oz/in <sup>3</sup>	1.771 kg/l
1 psi	68.948 hPa
1 psi	0.0689 Bar

### 9-3. Temperature conversion guide

#### 9-3-1. From degrees Fahrenheit (°F) to degrees Celsius (°C)

Celsius = (Fahrenheit - 32) x 0.5555

#### 9-3-2. From degrees Celsius (°C) to degrees Fahrenheit (°F)

Fahrenheit = (Celsius x 1.8) + 32

### 9-4. Abbreviations

The abbreviations given below are used in this manual:

ASD	AeroSpace and Defence Industries Association of Europe
ATA	Air Transport Association of America
dia.	diameter
DMF	Date of Manufacturing
EASA	European Air Safety Authority
FAA	Federal Aviation Authority
fig.	figure
IATA	International Transport Air Association
IEC	International Electrotechnical Commission
IMDG	International Maritime Dangerous Goods
ipl	illustrated parts list
max.	maximum
mfr	manufacturer
min.	minimum
MTBF	Mean Time Between Failure
MTBUR	Mean Time Between Unscheduled Removal
n°	number
p/n	part number
para.	paragraph
PPE	Personal Protective Equipment
ref.	refer to
RTCA	Radio Technical Commission for Aeronautics
s/a	subassembly
SI	International System of Unit
TBD	To Be Defined
V	Voltage



**Component Maintenance Manual  
427CK-1**

PAGE INTENTIONALLY LEFT BLANK

### DESCRIPTION AND OPERATION

#### 1. Overview

The batteries are connected to the aircraft system:

- According to the aircraft manufacturer, to start the engine or the APU.
- On the ground, to provide power before electrical power is supplied to the aircraft systems.
- In flight, if a malfunction or a failure occurs in the power supply system.

#### 2. Technical data

##### 2-1. Characteristics

Battery characteristics are indicated in the table below.

Technical data	Values
Type of cells	CVK420KA
Number of cells	21
Nominal voltage	25.2 V
Rated capacity C <sub>1</sub> Ah	42 Ah
Charge or discharge current 1 C <sub>1</sub> A	42 A
Charge current 0.5 C <sub>1</sub> A	21 A
Charge current 0.1 C <sub>1</sub> A	4.2 A
Electrolyte	Solution of KOH
Electrolyte level	20 mm (0.79 in)
Consumable volume of electrolyte per cell	80 cm <sup>3</sup> (4.88 in <sup>3</sup> )
End of charge voltage	1.55 V / per cell
End of life criterion in %	100 %
End of life criteria	1 hour
Battery maximum weight	39 kg (86 lbs)
Battery terminals	Connector according to ISO 5064/11 or MS 3509

**Table 1 - Battery characteristics**

#### 3. Description

**NOTE:** The item numbers are those of the detailed parts list chapter (Refer to [Detailed part list](#)).

The [427CK-1](#) Saft nickel-cadmium battery consists of a box complete ([010](#)), containing [21](#) individual cells [CVK420KA](#). These cell assemblies ([150](#)) are connected in series to get a [25.2 V](#) nominal voltage. Individual cells are enclosed in a polyamide container that provides insulation, allowing them to be fitted side-by-side in the battery box. Cells are interconnected with rigid, highly conductive, nickel-plated copper links ([050](#) to [110](#)). Each link is held in position by nickel-plated copper nuts ([140](#) and [160](#)) and washer ([145](#) and [165](#)) on the cells' terminals. Inside the battery box, individual cell assemblies ([150](#)) are held in position by partitions, liners-spacers kit ([030](#)), and a cover complete ([020](#)).

The power connector complete ([260](#)) connects the battery to the aircraft DC power.

The cover complete ([020](#)), which can be removed, is attached to the box complete ([010](#)) by 5 latches.

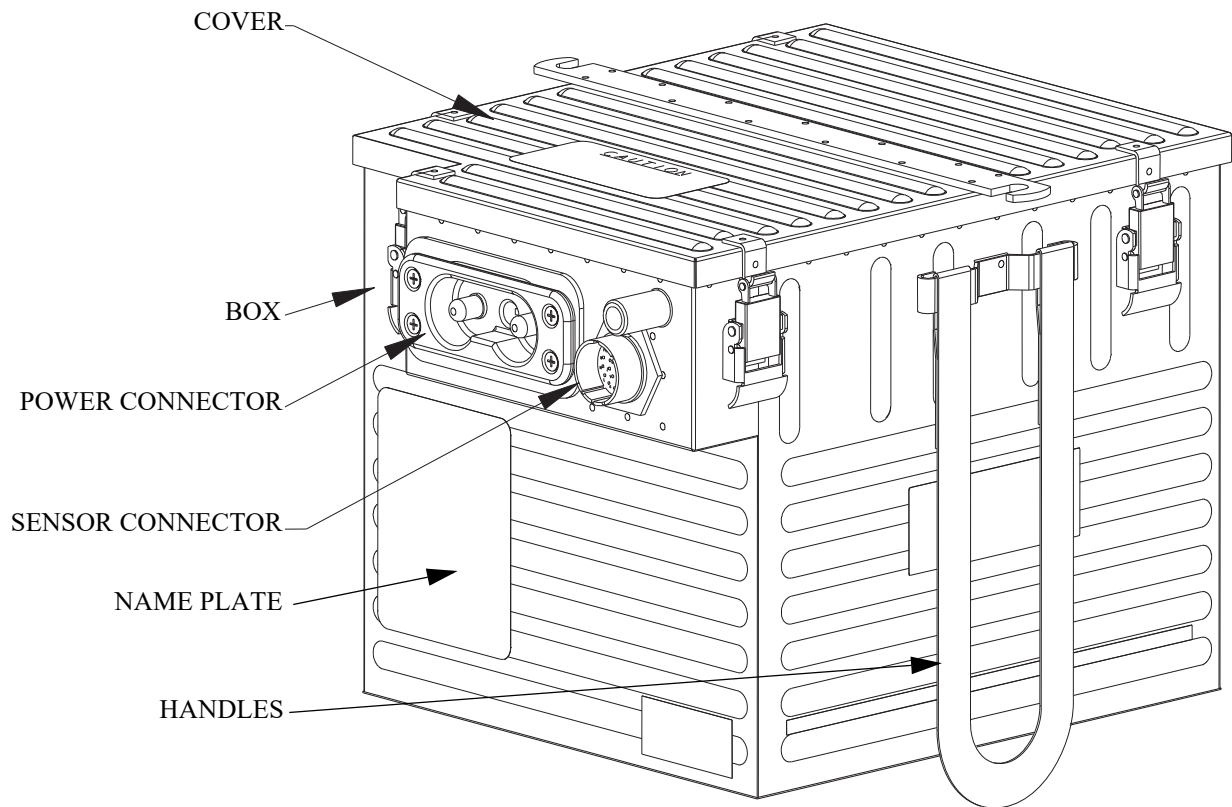


Figure 1 - [427CK-1](#) Nickel-Cadmium Aircraft Battery

## 4. Operation

### 4-1. Climatic requirement

Although Saft nickel-cadmium batteries are capable of operating in a wide temperature range  $-40^{\circ}\text{C}$  to  $+71^{\circ}\text{C}$  ( $-40^{\circ}\text{F}$  to  $+160^{\circ}\text{F}$ ), optimum performance is reached between  $+5^{\circ}\text{C}$  and  $+45^{\circ}\text{C}$  ( $+41^{\circ}\text{F}$  to  $+113^{\circ}\text{F}$ ). Charging is inefficient at temperatures below  $-30^{\circ}\text{C}$  ( $-22^{\circ}\text{F}$ ) and is not recommended above  $+57^{\circ}\text{C}$  ( $+135^{\circ}\text{F}$ ). Charging must be stopped at temperatures above  $+71^{\circ}\text{C}$  ( $+160^{\circ}\text{F}$ ).

Unless otherwise stated, charge and discharge testing should be done when the battery temperature is between  $+15^{\circ}\text{C}$  and  $+35^{\circ}\text{C}$  ( $+59^{\circ}\text{F}$  to  $+95^{\circ}\text{F}$ ).

Pressure 750 to 1060 hPa (22.15 to 31.3 in.Hg).

Relative humidity < 85 %.

### 4-2. Maintenance

All maintenance, including charging and discharging, should be done specifically in accordance with the instructions contained in this manual or a corresponding Component Maintenance Manual (CMM). If a CMM exists for a battery, that information will supersede the contents of this manual and this OMM will become supplemental.

## 5. Charge

The charge, also named maintenance charge, is done in 2 steps:

- Step 1: called "charge" or "main charge" is a constant current charge with three possible rates
- Step 2: called "overcharge" or "final charge" is also a constant current charge with only one possible rate



### 5-1. Constant current charge

**NOTE:** Check cell voltage at the beginning of the charge. If any cell indicates an immediate voltage rise above 1.5 V, add 5 cm<sup>3</sup> (0.3 in<sup>3</sup>) of distilled or deionized water [M01](#) to that cell.

**NOTE:** Always apply the main charge for the minimum duration.

Starting with a discharged battery:

- Remove the cover complete ([020](#)).
- Loosen, but do not remove, all vent-valve assemblies ([230](#)).
- Charge using one of the methods shown in the table below (step 1) main charge.
- After the minimum charge duration is reached, measure the voltage on each cell assembly ([150](#)) and compare the values with the end of (step 1) main charge criteria in the table below.
- During the last 15-30 minutes of the (step 2) final charge cycle, [Adjust electrolyte level](#).

Charge of the battery				
(step 1) Main Charge			(step 2) Final Charge	
Current	Minimum duration	End of main charge criteria	Current and time	Minimum voltage criteria
0.1 C <sub>1</sub> A ( <a href="#">4.2 A</a> )	10 h	Every cell > 1.5 V or 12 h which ever comes first	<a href="#">4.2 A</a> for 4 h	<a href="#">1.55 V / per cell</a>
0.5 C <sub>1</sub> A ( <a href="#">21 A</a> )	2 h	Every cell > 1.55 V or 2 h 30 min which ever comes first	<a href="#">4.2 A</a> for 4 h	<a href="#">1.55 V / per cell</a>
1.0 C <sub>1</sub> A ( <a href="#">42 A</a> )	1 h	Every cell > 1.57 V or 1 h 15 min which ever comes first	<a href="#">4.2 A</a> for 4 h	<a href="#">1.55 V / per cell</a>

**Table 2 - Charge rates**

Example: main charge (step 1) at [42 A](#) during 1 h:

- If the voltage of each cell is lower than 1.57 V, continue the charge for 15 minutes maximum (0.25 h) and stop if the voltage reaches 1.57 V before 15 minutes. Then continue with the final charge (step 2).
- If the voltage of each cell is higher than 1.57 V, continue with the final charge (step 2).

### 5-2. Active standby mode (use of a trickle charge)

The battery is continuously charged to an overcharge condition. Saft does not recommend this method, however some operators take responsibility for its use.

This method is not reliable due to quantity and inaccuracy of water consumption.

Example: if a 40 Ah battery remains on a continuous trickle charge of 3 mA/Ah for one month, the total consumption of water is 35 cm<sup>3</sup> (2.1 in<sup>3</sup>) per cell.

**WARNING:** THIS MAY CREATE CONDITIONS FOR A THERMAL RUNAWAY WITH ALL ITS CONSEQUENCES (UN-SCHEDULED REMOVAL WITH THE POSSIBILITY OF THE TOTAL LOSS OF THE BATTERY AND A DELAYED OR CANCELED FLIGHT).

The operator must adjust the electrolyte level before placing the battery on board the aircraft. Otherwise the risk of a battery incident exists (cells dry out before the normal end of the interval maintenance).



**Component Maintenance Manual  
427CK-1**

PAGE INTENTIONALLY LEFT BLANK

### TESTING AND FAULT ISOLATION

#### 1. Introduction

This chapter is a maintenance guide for the technician.

It shows, for the main causes of failure, either removed for unscheduled maintenance or during scheduled maintenance, the procedures to apply by referring to the corresponding chapter of the CMM. In no case can this diagnosis help replace the technician's expertise or a training on the functioning of the batteries.

#### 2. Battery faults

##### 2-1. Battery electrical faults

Problem	Probable cause	Correction
(1) Zero battery open-circuit voltage	(a) Defective electrical connector (no contact made)  (b) Link broken	Check electrical contacts, links and tightness of nuts (refer to <a href="#">Inspection/check</a> ).
(2) Zero volt with the battery set to "discharge"	(a) Battery fully discharged  (b) Battery circuit open or contacts defective  (c) Cell completely dry	Do an insulation check (refer to <a href="#">Inspection/check</a> )  Examine the contacts and links. Make sure the terminal nuts are tight (refer to <a href="#">Inspection/check</a> ). Refer to related subsequent steps.  Replace the cell.
(3) Low insulation	(a) Leakage of electrolyte	Disassemble and clean the battery (refer to <a href="#">Disassembly</a> and <a href="#">Cleaning</a> ). Do an electrolyte level check (refer to <a href="#">Inspection/check</a> ).

**Table 1001 - Battery electrical faults**

### 2-2. Cell faults

Problem	Probable cause	Correction
(1) Too much water decrease for all battery cells.	(a) Charge much more than the limit or too much charge at high temperature.  (b) Previous maintenance has not been done.	Examine the cause of excessive charge. If necessary, adjust to normal operating temperature (refer to <a href="#">Description and operation</a> ).  Note the cell location and check the level of water consumption versus other cells at the next maintenance.
(2) High water dispersion: water consumption in one or more cell(s) is very different from the other cells in the battery.	(a) more than 30 % above the average value of added water in all cells: leaking cell(s).  (b) less than 30 % below the average value of added water in all cells: cell(s) with damaged separator(s).	Disassemble the battery (refer to <a href="#">Disassembly</a> ). Clean the battery (refer to <a href="#">Cleaning</a> ). Replace the cell(s). Charge and do an electrolyte level check (refer to <a href="#">Inspection/check</a> ).  Do the <a href="#">Supplementary test</a> (refer to <a href="#">Inspection/check</a> ). If necessary, replace the cell(s).
(3) A cell has a higher voltage at the start of charge than is defined in paragraph <a href="#">Charge</a> chapter <a href="#">Description and operation</a> .	(a) Dry cell.	When the defect occurs, add 5 cm <sup>3</sup> (0.3 in <sup>3</sup> ) of distilled water <a href="#">M01</a> to the cell. Do not adjust more accurately until the end of the charge.
<b>NOTE:</b> If you charge a cell with a quantity of electrolyte which is not sufficient, this can cause the temperature to increase too much.		
(4) A cell has a lower voltage at the end of charge than is defined in paragraph <a href="#">Charge</a> chapter <a href="#">Description and operation</a> .	(a) The cell was operated at temperatures and charge rates outside the limits, and the separator is damaged.  (b) Usual wear after long operation	Replace the cell (refer to <a href="#">Disassembly, Assembly AND Storage (including transportation)</a> ).
(5) Low capacity cell.	(a) insufficient balancing  (b) Usual wear after long operation.  (c) Unusual operation, operation at high temperature or operation with low electrolyte.	Repeat <a href="#">Charge</a> and discharge at <a href="#">42 A</a> up to three times  Replace the cell (refer to <a href="#">Disassembly, Assembly AND Storage (including transportation)</a> ).  Do the applicable procedure (refer to <a href="#">Inspection/check</a> ).
(6) Cell with a swollen case.	(a) Cell operated with low electrolyte level; deterioration of separators and damaged plates.	Replace the cell (refer to <a href="#">Disassembly</a> ).
(7) Cell with zero voltage when the battery circuit is open.	(a) Short-circuited cell.	Replace the cell (refer to <a href="#">Disassembly</a> ).

Table 1002 - Cell faults

### 2-3. Physical faults

Problem	Probable cause	Correction
(1) Leakage of electrolyte.	(a) Incorrect adjustment of electrolyte level.	Disassemble and clean the battery (refer to <a href="#">Disassembly</a> and <a href="#">Cleaning</a> chapters). Do an electrolyte level check (refer to <a href="#">Inspection/check</a> ).
	(b) Cell polarity incorrect during high-rate discharge (for example, during the engine start).	Disassemble and clean the battery (refer to <a href="#">Disassembly</a> and <a href="#">Cleaning</a> ). Do an electrolyte level check (refer to <a href="#">Inspection/check</a> ).
	(c) Too much charge at high temperature or too much current.	Investigate the cause of excessive charge. If necessary, adjust to normal operating temperature (refer to <a href="#">Description and operation</a> ). Disassemble and clean the battery (refer to <a href="#">Disassembly</a> and <a href="#">Cleaning</a> ).
	(d) The lower nut is not correctly tightened.	Do an electrolyte level check (refer to <a href="#">Inspection/check</a> ). Torque the lower nut (refer to <a href="#">Assembly</a> chapter)
(2) Electrolyte found in the battery box.	(a) Damaged cell case.	Replace the cell if necessary and refer to related subsequent steps.
	(b) Leakage of electrolyte.	Disassemble and clean the battery (refer to <a href="#">Inspection/check</a> and <a href="#">Cleaning</a> ). Do an electrolyte level check (refer to <a href="#">Inspection/check</a> ).
(3) Corrosion on the links.	(a) Operation in acidic air.	Make sure the battery test bench and the storage areas have no materials which can give off acid fumes.
	(b) Mechanical damage to nickel plating.	Replace the damaged links (refer to <a href="#">Disassembly</a> , <a href="#">Assembly</a> AND <a href="#">Storage (including transportation)</a> ).
(4) The links are too hot.	(a) Loose terminals nuts.	Make sure the nuts are torqued (refer to <a href="#">Inspection/check</a> ).
(5) Battery box & cover damages: - Scratches,  - Dents, deformations which affect fit or impede the electrical performances of the battery or any of its components, - Visible cracks to box or cover	(a) Various, transport	- Clean, make sure labels are readable, if not readable replace label(s)
	(b) Mechanical stress, drop, transport	- Replace battery box, cover, and affected component(s) refer to <a href="#">Disassembly</a> , <a href="#">Assembly</a> )
	(c) Mechanical stress, drop, transport	- Replace battery box and / or cover

**Table 1003 - Physical faults**



**Component Maintenance Manual  
427CK-1**

PAGE INTENTIONALLY LEFT BLANK

# DISASSEMBLY

## 1. Introduction

### 1-1. General

**NOTE:** Refer to [Testing and fault isolation](#) to identify possible causes of problems. This chapter gives the necessary level of disassembly to correct issues.

The instructions found in this chapter are designed to allow the maintenance personnel to completely disassemble the battery for the purpose of General Overhaul. However, some maintenance operations do not require complete disassembly. The figure and item numbers are those of the [Illustrated parts list](#).

### 1-2. Safety

Refer to chapter [Safety](#) for caution, risks, and proper personal protection equipments (PPE).

### 1-3. Job set-up information

#### 1-3-1. Standard tools

Refer to chapter [Standard tools](#) in [Special tools, fixtures, equipment and consumables](#).

#### 1-3-2. Special tools

When special tools are used in this chapter, they are identified by a code number listed in [Special tools, fixtures, equipment and consumables](#) chapter.

## 2. Disassembly of the battery

**NOTE:** All item numbers from the Illustrated Part List (IPL, Fig. 1) are referred by "(###)". Item numbers are linked by hyper-text to the IPL. Decimal of item numbers referred by "(###.#)" are for illustration aid only and are not listed in the IPL.

### 2-1. Removal of the cover complete

**CAUTION:** AVOID CONTACT BETWEEN THE COVER AND THE CELL TERMINALS OR LINKS.

- Undo the cover complete (020) retaining latches.
- Remove the battery cover complete (020).

### 2-2. Removal of the cell assembly

**NOTE:** To facilitate the reassembly of the battery take note of the placement and orientation of each cell assembly (150) and the links (050 to 110) before removal.

**NOTE:** To ease of removal of the cells, first remove the center cell in each row.

- Remove the nuts (140, and 160) and the washers (145, and 165) that attach links to the cell assembly (150) and power connector complete (260).
- Remove all links (050 to 110).
- Fully screw the cell extractor tool T04 onto a cell terminal then pull up to remove the cell assembly (150).

### 2-3. Removal of the sensor connector complete

**CAUTION:** SHOULD BE TAKEN NOT TO BEND EXCESSIVELY THE HEATER TABS. EXCESSIVE BENDING MAY PERMANENTLY DAMAGE THE HEATER CIRCUIT WITHIN.

- Remove the sensor connector cover (256) -if present-
- Remove the nuts (-257) attaching the thermostats T1 (250.3), T2 (250.6), & T3 (250.4) from the links (100).
- Remove the nut (255) from the sensor connector complete (250). From inside the box complete (010) remove the sensor connector complete (250).
- Remove the heaters (250.9) making sure not to bend the wire tabs.

### 2-4. Removal of the liner-spacer kit

- Remove each liner-spacer kit (030) taking note the location, position, and count (refer to figure: [7001 - Liner-spacer kit](#)).

### 2-5. Removal of the power connector complete

- Remove the power connector cover (265) -if present-
- Remove the power connector screws (280).
- Remove the power connector complete (260) and the power connector gasket (270).



**Component Maintenance Manual  
427CK-1**

PAGE INTENTIONALLY LEFT BLANK



### CLEANING

#### 1. Introduction

The instructions in this chapter are for the general cleaning of your Saft aircraft battery. The instructions under "Light Cleaning" are to be done each time the battery is removed from the aircraft, and can be accomplished with no disassembly of the battery. The section "[Thorough cleaning](#)" includes the instructions for the cleaning of a disassembled battery for the purpose of a General Overhaul.

#### 2. Safety

Refer to chapter [Safety](#) for caution, risks, and proper personal protection equipments (PPE).

#### 3. Equipment

##### 3-1. Standard tools

Refer to chapter [Standard tools](#) in [Special tools, fixtures, equipment and consumables](#).

##### 3-2. Special tools

When special tools are used in this chapter, they are identified by a code number listed in [Special tools, fixtures, equipment and consumables](#) chapter.

##### 3-3. Consumables

When consumables are used in this chapter, they are identified by a code number listed in [Special tools, fixtures, equipment and consumables](#) chapter.

#### 4. Light cleaning

On an assembled battery.

**CAUTION:** DO NOT USE SOLVENT, PETROLEUM SPIRITS (SOLVENTS) OR OTHER PRODUCT CONTAINING CHLORIDE FOR CLEANING THE BATTERY. THE USE OF SOLVENTS CAN DEGRADE METAL AND PLASTIC PARTS.

**NOTE:** All item numbers from the Illustrated Part List (IPL, Fig. 1) are referred by "(###)". Item numbers are linked by hypertext to the IPL. Decimal of item numbers referred by "(###.#)" are for illustration aid only and are not listed in the IPL.

##### 4-1. Procedure

**WARNING:** TO PREVENT INJURY WHEN USING COMPRESSED AIR, POINT AIRFLOW AWAY FROM THE BODY. USE SAFETY GOGGLES TO PREVENT EYE INJURY FROM AIRBORNE PARTICLES.

- Remove the battery cover complete (020).
- Check the battery vent tubes to make sure that they are clean and clear.
- Finger tight the vent-valve assembly (230) with the universal vent-valve wrench T01.
- Remove potassium carbonates (white deposits) from the top of all cell assembly (150) using a stiff bristle, non-metallic brush.
- Disperse residual salts and dust particles from the battery using blasts of clean, dry compressed air.
- Coat all nuts (140 and 160), washers (145 and 165), and links (050 to 110) with M02 (use a non-metallic paintbrush)

#### 5. Thorough cleaning

##### 5-1. Procedure

Fully disassemble the battery (refer to [Disassembly](#) chapter).

##### 5-1-1. Cell assembly

**CAUTION:** DO NOT SOAK THE CELLS IN WATER.

Make sure that the vent-valve assembly (230) is tight using the universal vent-valve wrench T01 according to [Fits and clearances](#).

Clean with warm water and a soft brush to easily remove all the electrolyte and mineral salts from the terminals, the cover and the sides of the cell cases.

Wipe the cell assembly (150) with a cloth and let dry.

### 5-1-2. Box and cover

Clean the Box and cover assembly (-005) with lightly soapy water M03, rub with a cloth and let dry.

### 5-1-3. Nuts, wave washers, and links

Clean the nuts (140 and 160), washers (145 and 165), and links (050 to 110) in soapy water M03 with a brush, rinse well with clean water and let dry.

### 5-1-4. Liner-spacer kit

Clean the liner-spacer kit (030) in warm water and let dry.

### 5-1-5. Power connector complete

**CAUTION:** DO NOT SUBMERGE THE CONNECTOR

Wipe clean the power connector complete (260) using damp cloth and let dry.

### 5-1-6. Sensor connector assembly

**CAUTION:** DO NOT SUBMERGE THE CONNECTOR

**CAUTION:** CARE MUST BE TAKEN NOT TO PULL ON WIRES, TWIST OR BEND THE HEATER TABS BACK AND FORTH.

Wipe clean the sensor connector assembly (250) wire harness and heater using damp cloth and let dry.

### 5-1-7. Vent-valve assembly

**CAUTION:** THE CLEANING OF THE VENT-VALVE MUST BE DONE WHEN THE CELLS ARE INSTALLED IN THE BOX.

**CAUTION:** VENT-VALVES SHALL REMAIN INSTALLED ON THE CELLS WHEN EVER THE CELLS ARE NOT INSTALLED IN THE BATTERY BOX.

#### 5-1-7-1. Removal of the vent-valve assembly

Remove the vent-valve assembly (230) with the universal vent-valve wrench T01.

Cover cell vent-valve hole using a lint free cloth to prevent unwanted debris from entering the cell.

Soak vent-valves in distilled water M01 for 30 min to 4 h to remove electrolyte salts from vent holes.

#### 5-1-7-2. Installation of the vent-valve assembly

Make sure the vent-valve assemblies (230) are in good condition. Replace the vent-valve assemblies (230) if they are worn.

Install the vent-valve assembly (230) with the universal vent-valve wrench T01 according to [Fits and clearances](#).

### 5-2. Lubrication

When the battery is clean (and after installation of the vent-valve assembly (230)), coat all upper nuts (140 and 160), washer (145 and 165), and links (050 to 110) with M02 (use a non-metallic paintbrush).

### INSPECTION/CHECK

#### 1. Introduction

This chapter includes the checks, the maintenance procedures, and the functional tests that must be done to use Saft batteries in flight and on the ground.

**NOTE:** All item numbers from the Illustrated Part List (IPL, Fig. 1) are referred by "(###)". Item numbers are linked by hyper-text to the IPL. Decimal of item numbers referred by "(###.#)" are for illustration aid only and are not listed in the IPL.

#### 2. Maintenance intervals

The aircraft manufacturer is responsible for defining the usage and function, including maintenance intervals, for aircraft batteries installed in its aircraft. Saft only provides recommendations that requires the agreement of the aircraft manufacturer.

**NOTE:** Maintenance steps must be completed in a battery shop.

Saft distinguishes between three types of maintenances: periodical check, regular check and general overhaul.

##### 2-1. Periodical check

The periodical check essentially consists of voltage and insulation checks, discharge of residual capacity and charge with electrolyte level adjustment. The main purpose of this periodical check is to add water which is consumed by electrolysis during battery overcharge. It is normally applied between regular checks but can be omitted if the water consumption measured at the regular check is within allowable limits.

##### 2-2. Regular check

The regular check is the same as the periodical check except that the battery is also deep-discharged ('balancing'), followed by a capacity check cycle.

##### 2-3. General overhaul

The general overhaul is the same as the regular check except that the battery is also disassembled and thoroughly cleaned and inspected.

#### 3. Recording

It is very important to record the battery check values (capacity, end of charge voltage, water consumption) for each cell as required in the battery logbook for each maintenance. It is recommended that an operator tracks these maintenance data in order to verify the interval is correct relative to that particular operation. This may also allow the interval to be extended if the data justifies it.

#### 4. Safety

Refer to chapter [Safety](#) for caution, risks, and proper personal protection equipments (PPE).

#### 5. Equipment

##### 5-1. Standard tools

Refer to chapter [Standard tools](#) in [Special tools, fixtures, equipment and consumables](#).

##### 5-2. Special tools

When special tools are used in this chapter, they are identified by a code number listed in [Special tools, fixtures, equipment and consumables](#) chapter.

### 6. Periodical check

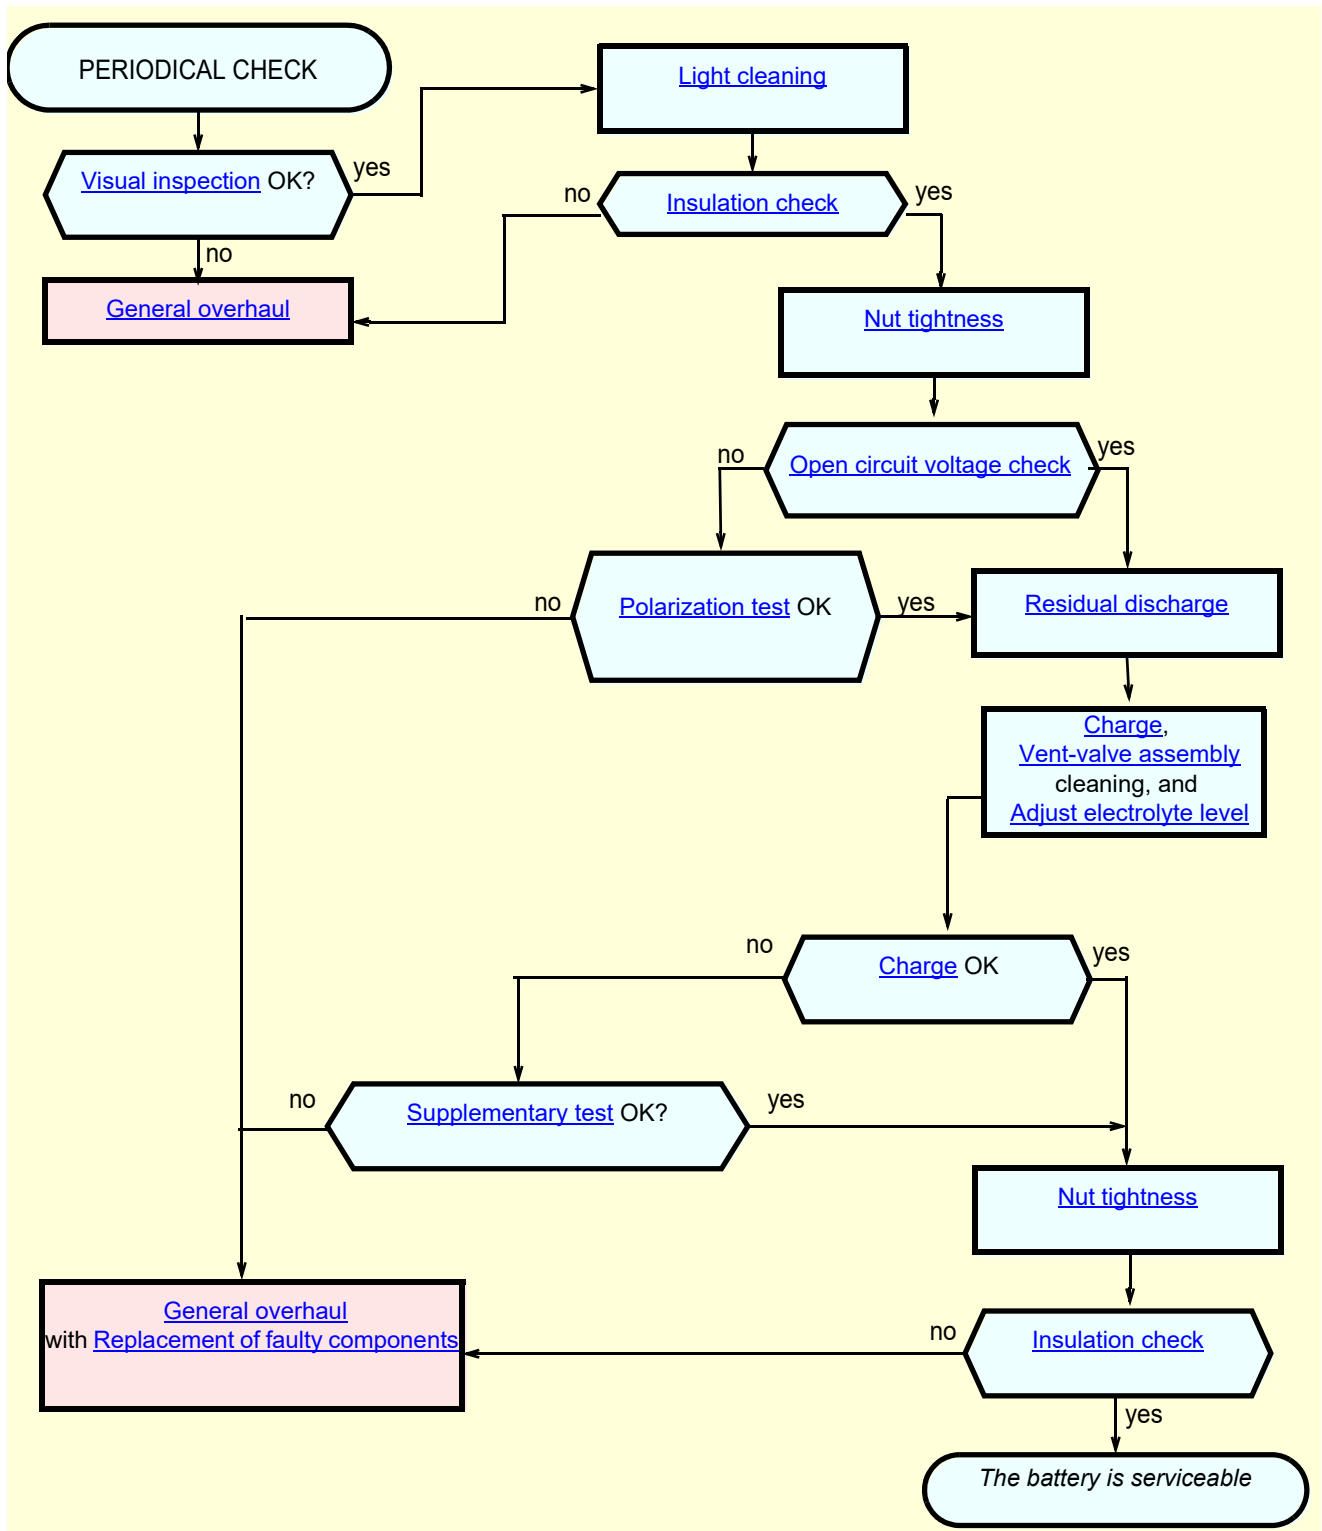


Figure 5001 - Periodical check

**NOTE:** Time periods are given as a guideline. Modify in accordance with operational experience. Periodic and Regular maintenance checks may be combined if operating hours permit.

Consult the airframe manufacturer for specific maintenance intervals or special procedures to be followed. Otherwise, at specific intervals according to aircraft use, or if electrolyte consumption exceeds the approved consumption levels between 2 regular checks, do this periodical check according to figure [5001 - Periodical check](#).

### 6-1. Visual inspection


**CAUTION:** WORN AIRCRAFT POWER CONNECTORS AND/OR LOOSE CONNECTIONS CAN GREATLY AFFECT THE PERFORMANCE OF THE BATTERY. A DEFECTIVE POWER CONNECTOR CAN CAUSE OVERHEATING, BATTERY SELF-DISCHARGE AS WELL AS LOW VOLTAGE IN SERVICE.

Visual inspection should be done each time the battery is removed for maintenance from the equipment.

- Remove the cover complete (020)
- Visually check each cell assembly (150) for evidence of electrolyte leakage. If OK proceed to [Light cleaning](#). If salt or traces of electrolyte is detected identify as NOT OK, proceed to [General overhaul](#). Excessive salt around terminal posts indicate possible leakage from the terminal O-ring. During [General overhaul](#), verify torque of the lower nut (167) (refer to chapter [Assembly](#)).
- Inspect the links (050 to 110), upper nuts (140 and 160), and washers (145 and 165). The hardware should be free of bends, tarnish, corrosion, burns, or any loss of nickel plating. Minor tarnish can be polished off with a fine wire brush. If OK proceed to [Light cleaning](#). If NOT OK proceed to [General overhaul](#) and replace defective hardware.
- Check the power connector complete (260) for evidence of arcing, corrosion, cracks, or cross-threaded terminals. If OK proceed to [Light cleaning](#). If NOT OK proceed to [General overhaul](#) and replace the defective power connector.
- Inspect the sensor connector assembly (250) for bent or loose pins, corrosion, cracks, faulty wire connections, evidence of arcing, or cracked or loose potting material. If OK proceed to [Light cleaning](#). If NOT OK proceed to [General overhaul](#) and replace the defective sensor connector.
- Inspect the temperature sensor and blanket harness assembly for obvious damage. This in no way replaces the full testing procedures found hereafter which ensures full operation of the sensor assembly. If OK proceed to [Light cleaning](#). If NOT OK proceed to [General overhaul](#) and replace the defective sensor connector assembly (250).
- Inspect the thermostat assemblies (as applicable) for any damaged or loose wire connections, cracks, dents, or other physical damage. If OK proceed to [Light cleaning](#). If NOT OK proceed to [General overhaul](#) and replace the defective sensor connector assembly (250).
- Visually check all wiring insulation to ensure there is no evidence of cracks, cuts, or bubbling. If OK proceed to [Light cleaning](#). If NOT OK proceed to [General overhaul](#) and replace the defective sensor connector. Any evidence of damage to the temperature sensor and/or heater blanket harness assembly requires the sensor connector assembly (250) replacement.
- Inspect the battery box complete (010) and cover complete (020) for any damage. Make sure the cover gasket (-025) is undamaged and fully secured to the cover assembly (-022). If OK proceed to [Light cleaning](#). If NOT OK proceed to [General overhaul](#) and replace the damaged box complete (010) or cover complete (020).

### 6-2. Insulation check

**NOTE:** A breakdown in electrical insulation between the cell assembly (150) and the battery box complete (010) will result in a "leakage" current, which over time will discharge the battery.

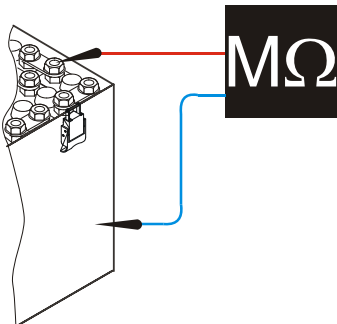

- Set the meg-ohmmeter to 250 VDC
- Measure the insulation between the positive terminal of each cell assembly (150) and the battery box complete (010).
- Measure the insulation between the power connector complete (260) positive pin and the battery box complete (010).
- Measure the insulation between each pin of the sensor connector complete (250) and the battery box complete (010).

Refer to the table below for the acceptance criteria.

250 KΩ	2 MΩ	10 MΩ	
Do a General Overhaul Check cause(s) per <a href="#">Testing and fault isolation</a>	Acceptable but <a href="#">Thorough cleaning</a> is recommended	Acceptable for in service battery For a new battery (direct from factory with no charge made by the customer) a <a href="#">Thorough cleaning</a> is recommended	Mandatory level of insulation for new or in service battery after <a href="#">Thorough cleaning</a>

**Table 5001 - Acceptance criteria for insulation check**

### 6-3. Nut tightness

Tighten and check the torque of all upper cell nuts (160) and the power connector complete (260) terminal nuts (140) (refer to [Fits and clearances](#)).

### 6-4. Open circuit voltage check

Measure the open circuit voltage of each cell assembly (150). If all the cells are > 1.05 volt, continue with [Residual discharge](#). Otherwise, do a [Polarization test](#).

### 6-5. Polarization test

Charge the battery at [4.2 A](#) for 1 hour 30 min.

Leave the battery on open circuit for 1 hour.

Measure the open circuit voltage of each cell assembly (150). If any cell voltage is zero volt or has a negative polarity, do a [General overhaul](#) with [Replacement of faulty components](#). If all the cells are above zero volt, continue with [Residual discharge](#).

### 6-6. Residual discharge

Discharge the battery at the [42 A](#) or [21 A](#) rate until each cell assembly (150) in the battery is discharged to 1.0 volt or below.

### 6-7. Adjust electrolyte level

**WARNING:** TAKE CARE NOT TO TILT CELLS WHILE VENT-VALVES ARE LOOSENED OR REMOVED. CONTACT OF ELECTROLYTE WITH SKIN CAN CAUSE BURNS (REFER TO CHAPTER [Safety](#)). IF CONTACT OCCURS, FLUSH AREA WITH LARGE AMOUNTS OF WATER FOR 15 TO 30 MINUTES. ELECTROLYTE IN THE EYES IS VERY SERIOUS. FLUSH WITH WATER AND CONTACT A DOCTOR IMMEDIATELY.

**CAUTION:** USING ANYTHING OTHER THAN DISTILLED OR DEIONIZED WATER [M01](#) IN NICKEL-CADMIUM CELLS WILL CAUSE ELECTROLYTE CONTAMINATION AND IRREVERSIBLE DAMAGE TO THE CELLS.

**CAUTION:** THE BATTERY MUST BE FULLY CHARGED BEFORE ADJUSTING THE ELECTROLYTE LEVEL. USE ONLY DISTILLED OR DEIONIZED WATER [M01](#) (REFER TO CHAPTER [Special tools, fixtures, equipment and consumables](#)).

DO NOT RE-USE WATER REMOVED FROM CELLS.

THE QUANTITY (IN CM<sup>3</sup>) REQUIRED TO LEVEL THE FIRST CELL WILL SERVE AS A GUIDE FOR REQUIREMENTS OF THE REMAINING CELLS BUT THE AMOUNT OF WATER REQUIRED FOR EACH CELL CAN VARY, SO CARRY OUT THIS CHECK ON A CELL BY CELL BASIS. EACH CELL MUST BE LEVELED INDIVIDUALLY. IF THE QUANTITY OF WATER ADDED PER CELL IS ABOVE 80 % OF THE ELECTROLYTE WATER VOLUME SHOWN IN THE SPECIFICATION TABLES (REFER TO CHAPTER [Technical data](#)), CHECK THE CHARGING SYSTEM. IF IT IS FUNCTIONING PROPERLY, SHORTEN THE TIME PERIOD BETWEEN SERVICING.

**CAUTION:** THE MAXIMUM AMOUNT OF ADDED WATER IS [80 cm<sup>3</sup> \(4.88 in<sup>3</sup>\)](#) per cell.

Always take appropriate precautions to prevent any foreign substances from entering the cell assembly (150). Anything other than distilled or deionized water [M01](#) that enters the cells will cause electrolyte contamination and will affect overall performance.

The amount of time that the vent-valve assemblies (230) are removed from the cell assembly (150) for maintenance should be limited to prevent as much air as possible from entering the cell. Carbon dioxide in the air will combine with the electrolyte to form potassium carbonate. Potassium carbonate will increase the internal resistance of the cells and thus decrease the performance at low temperatures and during high rate discharges. Always make sure that the vent-valve assemblies (230) are properly secured while the battery is in use.

Electrolyte level adjustment **must be done during the last 15-30 minutes** of the 4 hours overcharge at [4.2 A](#) rate of charge or last 15-30 minutes of the 5 hours at 0,1C1 for the supplementary test.

Adjust the level of electrolyte, one cell at a time, using the following instructions:

- 1. Remove the vent-valve assembly (230) with its O-ring with the vent-valve wrench T01.
- 2. Check the nozzle length before fitting it to the syringe (refer to paragraph [Special tools](#) for proper nozzle).
- 3. Insert the syringe T02 into the cell assembly (150) opening until the shoulder of the nozzle rests on the vent-valve seat per figure [5002 - Position of syringe in cell vent seat](#)

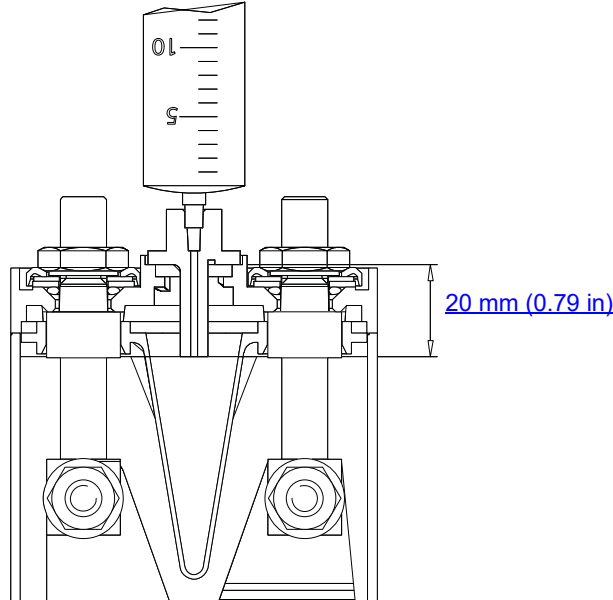


Figure 5002 - Position of syringe in cell vent seat

- 4. Withdraw the plunger and check for any liquid in the syringe. Any excess liquid in the cell will be drawn into the syringe until the electrolyte is level with the end of the nozzle. This is the correct level for the electrolyte. If the liquid level is too low, the syringe will remain empty, indicating that the end of the syringe nozzle did not reach the liquid in the cell. In this case, replenish low electrolyte using distilled water M01.
- 5. Draw 5 cm<sup>3</sup> (0.3 in<sup>3</sup>) of the distilled water M01 into the syringe and inject it into the cell.
- 6. With the syringe nozzle remaining on the vent-valve assembly (230) seat, slowly withdraw the plunger in the syringe one time again.
- 7. If the syringe remains empty, repeat steps 5 and 6, counting the number of 5 cm<sup>3</sup> (0.3 in<sup>3</sup>) injections required to achieve the correct level. Record the amount of water added to each cell on the maintenance record.
- 8. At the point in step 6 when some excess liquid is drawn into the syringe, the correct level for that cell has been reached. Expel the excess liquid into a separate container for disposal. **Do not re-use the liquid removed from cells.** Check with local authorities for proper disposal of hazardous waste.

### 6-8. Supplementary test

This test is used to confirm cell(s) fault(s):

- Continue to charge for an additional 5 h at 0.1C<sub>1</sub>A (4.2 A)
  - The individual cell voltage (CVK420KA) must be ≥ 1.55 V / per cell
  - [Adjust electrolyte level](#)
- If the voltage criteria is still not met within the 5h, replace the defective cell assembly (150). Follow [General overhaul](#)
- If cell(s) voltage(s) decreases by ≥ 0.03 V between the beginning and the end of the supplementary test, then replace the defective cell assembly (150). Follow [General overhaul](#).

**NOTE:** Cell voltage should be checked every 30 min. If the voltage criteria is reached before 5 h, you can stop the supplementary test.

### 7. Regular check

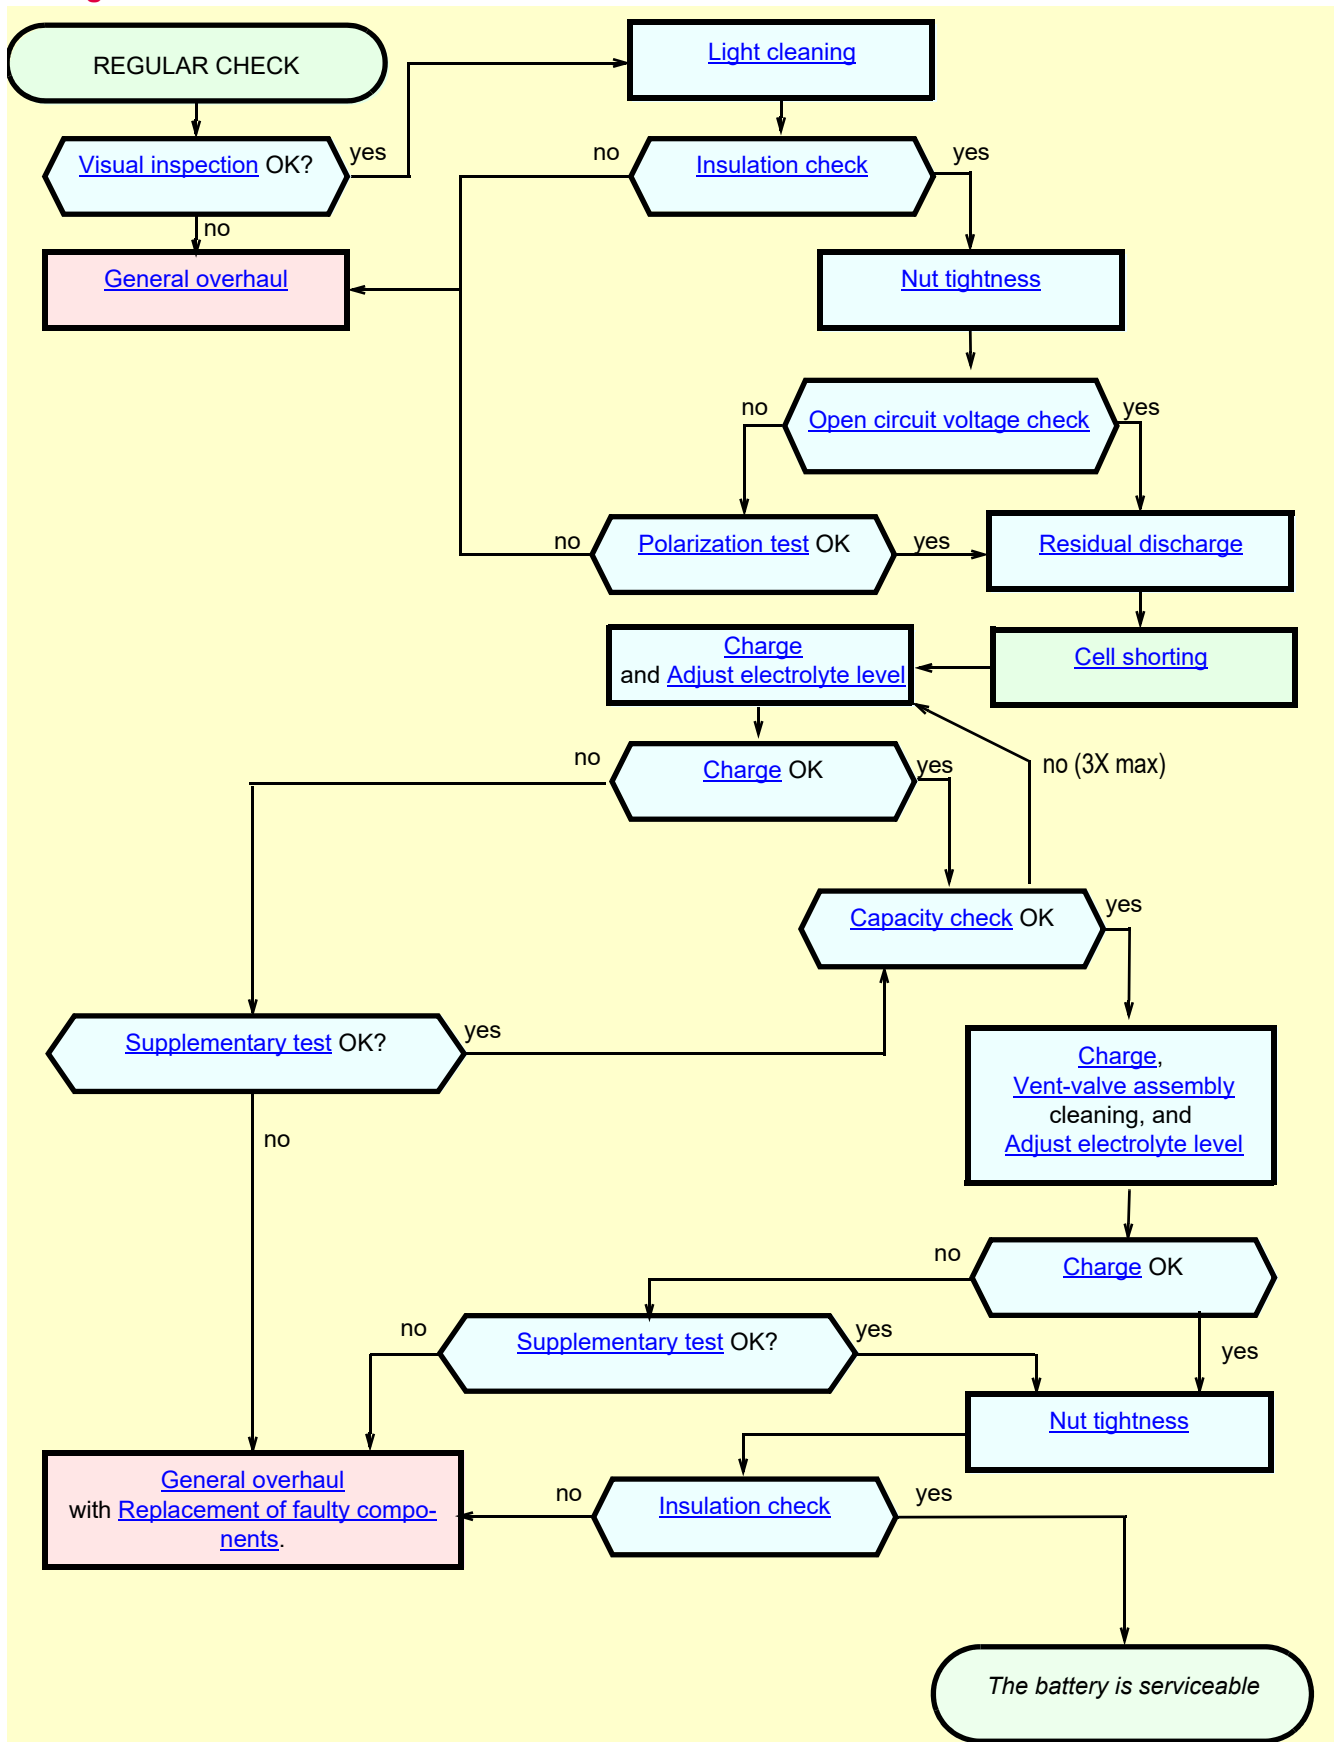


Figure 5003 - Regular check



Consult the airframe manufacturer and / or operator for specific maintenance intervals or special procedures to be followed. Otherwise, at specific intervals according to aircraft use, or AFTER A MAXIMUM OF 12 MONTHS, test the battery according to figure [5003 - Regular check](#).

**NOTE:** Time periods are given as a guideline. Modify in accordance with operational experience. Periodic and regular maintenance checks may be combined if operating hours permit.

### 7-1. Cell shorting

As each cell's voltage drops below 1.0 V, connect an equalizing resistor [T03](#) across each cell terminals. Leave the resistors in position for 12 to 24 hours to allow each cell to completely discharge and the battery to cool.

**NOTE:** As an alternative to the resistor, a shorting clip can be applied when the voltage has dropped to 0.5 V per cell.

**NOTE:** It is suggested to use a low charge 0.1 C<sub>1</sub>A ([4.2 A](#)) rate after cell shorting.

### 7-2. Capacity check

This procedure is used to calculate the battery capacity. It can be done in 2 different methods.

**NOTE:** If the capacity check is not OK, do: [Charge](#), [Adjust electrolyte level](#), and [Capacity check](#) loop 3 times maximum. If capacity check is still not OK then follow [General overhaul](#) to replace defective cells.

#### 7-2-1. Method 1

This method is suitable for devices that can record individual cell voltage and discharge current continuously over time.

- Discharge the battery at [42 A](#) and record the individual voltages of all cells.
- Record the time when each cell falls to 1.0 V. Once the cell voltage falls between 0.5 V and 1.0 V, apply equalizing resistor [T03](#) across the low-voltage-cell terminals.
- All cell voltages must be  $\geq 1.0$  V at [1 hour](#).

#### 7-2-2. Method 2

This method is especially suitable for battery shop that manually records the voltage using a multimeter.

- Discharge the battery at [42 A](#) for [1 hour](#).
- Record the voltage of each cell at the end of 1 h:
  - If the voltage of each cell is  $\geq 1.0$  V, then the capacity test is OK.
  - If any cell voltage is  $< 1.0$  V, the capacity test is NOT OK.

### 8. General overhaul

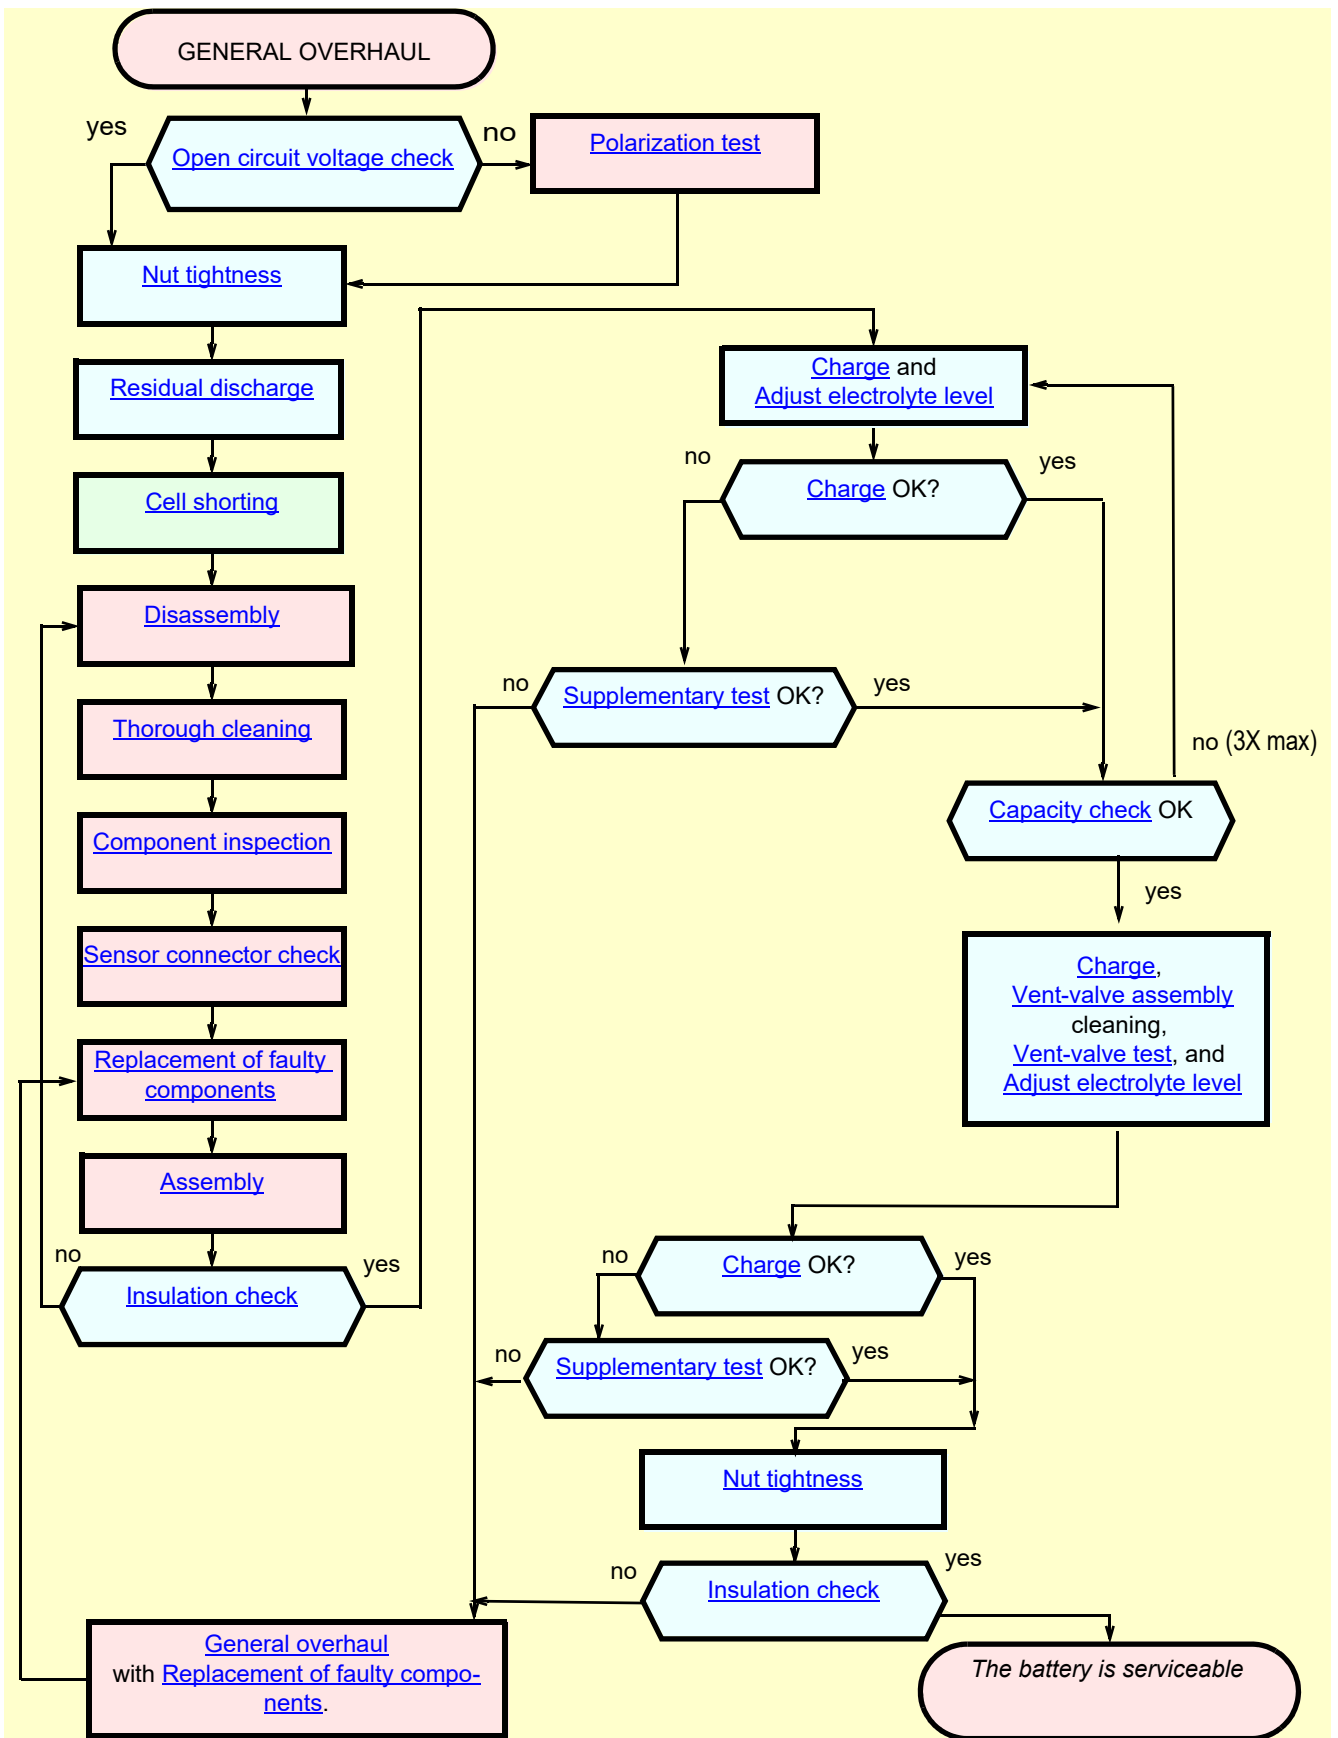


Figure 5004 - General overhaul

Consult the airframe manufacturer and / or operator for specific maintenance intervals or special procedures to be followed. Otherwise, at specific intervals according to aircraft use, or AFTER A MAXIMUM OF TWO YEARS, test the battery according to the figure [5004 - General overhaul](#).

### 8-1. Component inspection

#### 8-1-1. Cell assembly

Make sure that the cell assembly ([150](#)) lower terminal nuts ([167](#)) are tight (refer to [Fits and clearances](#) chapter).  
Verify that cell-containers show no leakage.

#### 8-1-2. Box complete

Make sure the box complete ([010](#)) sides are straight.

#### 8-1-3. Nuts, links, and wave washers

Discard nuts ([140](#) and [160](#)), links ([050](#) to [110](#)) and wave washers ([145](#) and [165](#)) that show signs of corrosion or damage.

#### 8-1-4. Power connector complete

Check the power connector complete ([260](#)) for evidence of arcing, corrosion, cracks, or cross-threaded terminals. Replace the defective power connector complete ([260](#)).

### 8-2. Replacement of faulty components

#### 8-2-1. Cells - 3/5 cells rule

Saft strongly recommends to change all the cells or replace the complete battery if:

**one or more cells are found to be faulty and 5 of the original cells in the battery has been previously changed during the previous maintenance,**

or

**3 or more cells are found to be faulty during the same maintenance.**

The 3/5 cells rule does not apply to the following failures:

- Mechanical failure such as terminal thread damage
- Cell leakage
- Cell short-circuit

**NOTE:** All cells to be replaced must be replaced by new Saft cell assemblies ([150](#)).

#### 8-2-2. Other components

Any other components that are to be replaced must be replaced by new Saft components.

### 8-3. Sensor connector check

**NOTE:** Erratic measurements observed constitute a failure of the check.

#### 8-3-1. Insulation check

Make sure that the insulation between each pin of the sensor connector complete ([250](#)) and all metal parts of the sensor is > 10 MΩ @ 250 V DC

#### 8-3-2. Sensor connector check

Do this test in a climatic chamber or equivalent device with the sensor connector complete ([250](#)) disassembled from the battery. Check the sensor connector according to the table below:

Check of	Between	Value
Resistor	J - positive	30.78 k $\Omega$ to 34.02 k $\Omega$
Resistor	X - negative	30.78 k $\Omega$ to 34.02 k $\Omega$
Resistor	H - middle point	30.78 k $\Omega$ to 34.02 k $\Omega$
Thermostat	c - W	open on rise @ +71 °C $\pm$ 5 °C (+160 °F $\pm$ 9 °F)
Thermostat	A - E	open on rise @ +14 °C $\pm$ 5 °C (+57 °F $\pm$ 9 °F)
Thermostat	E - U	open on rise @ +14 °C $\pm$ 5 °C (+57 °F $\pm$ 9 °F) R = 19.3 $\Omega$ to 23.3 $\Omega$ when closed
Thermistor	Y - K	2.21 K $\Omega$ to 2.70 K $\Omega$ @ +23 °C $\pm$ 2 °C (+73.4 °F $\pm$ 3.6 °F)
Thermistor	M - a	2.21 K $\Omega$ to 2.70 K $\Omega$ @ +23 °C $\pm$ 2 °C (+73.4 °F $\pm$ 3.6 °F)
Insulation	Each pin of the connector and all metal parts of the sensor connector	> 10 M $\Omega$ @ 250VDC

**Table 5002 - Sensor connector test**

### 8-4. Vent-valve test

**NOTE:** The vent-valve test is not necessary if the full set of used vent-valves is replaced by a brand new one each year during the General Overhaul.

**NOTE:** Vent-valves should be cleaned before testing (refer to [Vent-valve assembly](#) cleaning).

**NOTE:** If the vent-valve does not open during the test, increase the pressure slowly until the vent-valve opens (one time, to 1.4 bar or (20 psi max)) to ensure functionality, then repeat the full test

This test should be done while the battery is on charge.

Check the operation of the vent-valve assembly as follows:

- Install the vent-valve with its O-ring finger tight into the vent-valve adapter [T05](#) of the pressure test fixture.
- Immerse the vent-valve assembly ([230](#)) in water and slowly raise the air pressure.
- Test according to the table below, and change all vent-valve assembly ([230](#)) that do not pass the test.

Test	Check
O-ring	No distortion, split or cracks
air pressure < 0.14 bar (2 psi)	Vent-valve is closed (no bubble)
0.14 bar (2 psi) < air pressure < 0.7 bar (10 psi)	Vent-valve opens (bubbles observed)

**Table 5003 - Vent-valve test**

### ASSEMBLY

#### 1. Introduction

This section covers basic battery assembly procedures. In all cases, when reassembling a battery, all components should be clean and dry.

#### 2. Safety

Refer to chapter [Safety](#) for caution, risks, and proper personal protection equipments (PPE).

#### 3. Equipment

##### 3-1. Standard tools

Refer to chapter [Standard tools](#) in [Special tools, fixtures, equipment and consumables](#).

##### 3-2. Special tools

When special tools are used in this chapter, they are identified by a code number listed in [Special tools, fixtures, equipment and consumables](#) chapter.

#### 4. Battery Assembly

**NOTE:** All item numbers from the Illustrated Part List (IPL, Fig. 1) are referred by "(###)". Item numbers are linked by hyper-text to the IPL. Decimal of item numbers referred by "(###.#)" are for illustration aid only and are not listed in the IPL.

##### 4-1. Installation of the liner-spacer kit and sensor connector complete


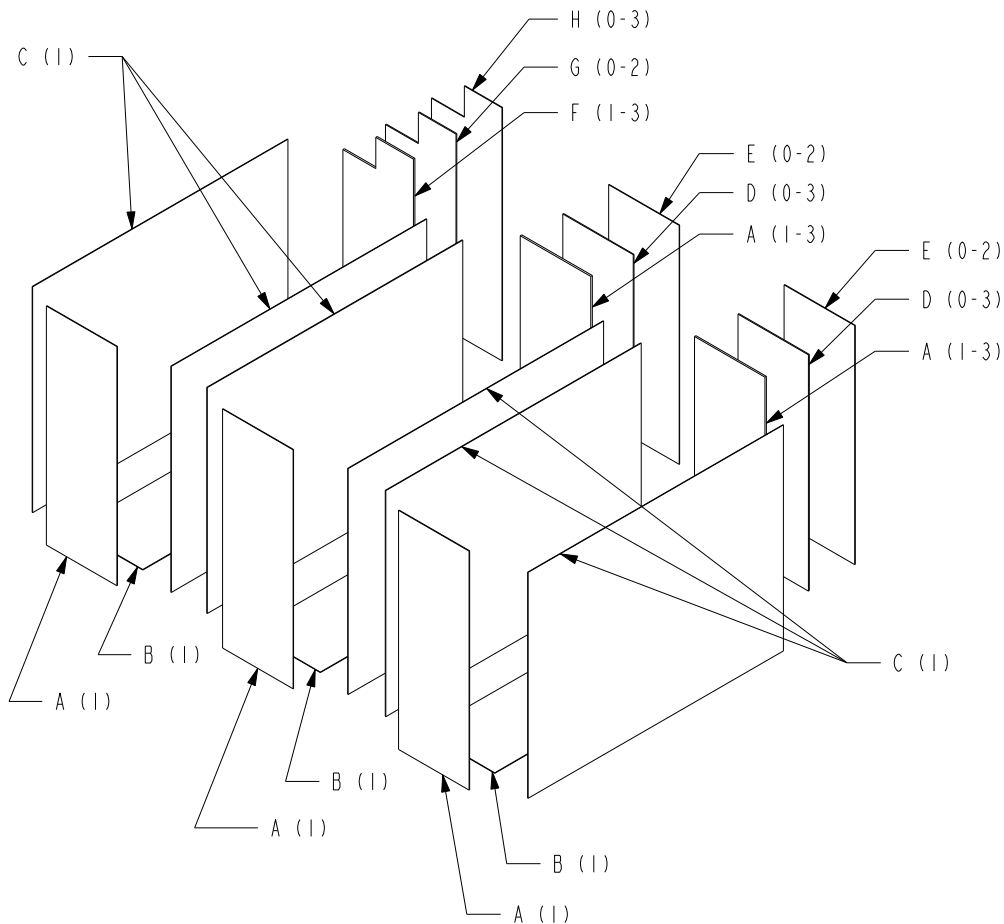


Figure 7001 - Liner-spacer kit

- Install the liner-spacer kit ([030](#)) in position per figure [7001 - Liner-spacer kit](#).

Item	Description	Dimension (in)	Unit per assembly
A	Liner-spacer	2.953 x 8.661 x 0.020	6
B	Liner-spacer	2.953 x 10.373 x 0.020	3
C	Liner-spacer	8.188 x 10.687 x 0.020	6
D	Liner-spacer	8.560 x 2.950 x 0.032	5
E	Liner-spacer	8.660 x 2.950 x 0.062	4
F	Liner-spacer, NOTCHED	9.17 x 2.95 x 0.020	3
G	Liner-spacer, NOTCHED	9.17 x 2.95 x 0.032	2
H	Liner-spacer, NOTCHED	9.17 x 2.95 x 0.062	3

**Table 7001 - Content of the liner-spacer kit**

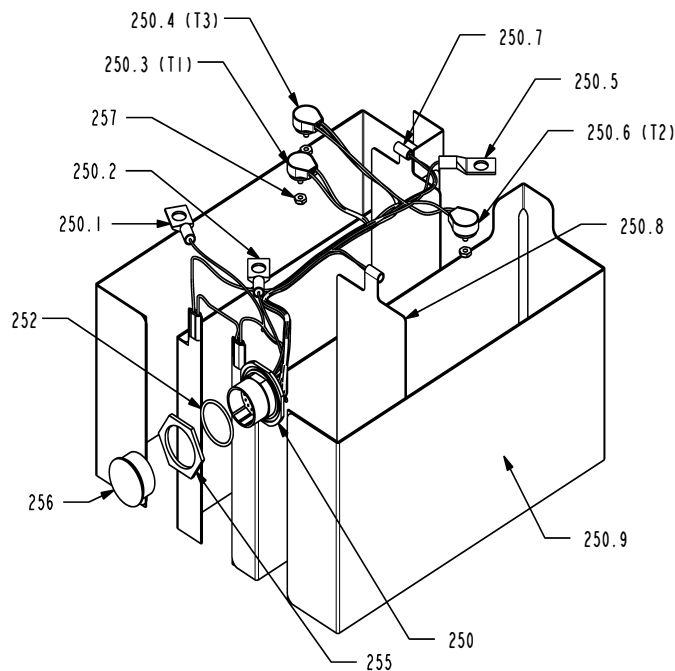

**Figure 7002 - Sensor connector assembly**

- Install the heater blankets (250.9) of sensor connector complete (250) per figure 7002 - Sensor connector assembly by locating the folds as illustrated. Make sure not to bend the heater tabs or damage the heater blankets (250.9) while feeding them through box complete (010) partitions
- Install the thermostats T1 (250.3), T2 (250.6), and T3 (250.4) onto links (100) using the nuts (-257), torque the nuts according to the Fits and clearances chapter.
- Install the connector of the sensor connector complete (250) and sensor connector O-ring (252) from inside the box complete (010).
- Secure the sensor connector complete using the sensor connector nut (255) from outside the box complete (010).
- Torque the nut according to the Fits and clearances chapter.
- Install the sensor connector cover (256). - if available-

**NOTE:** Remove the sensor connector cover (256) before flight.

#### 4-2. Installation of the power connector complete

- Install the power connector complete (260) and power connector gasket (270) from outside the box complete (010) into position with the screws (280).
- Torque the screws (280) according to the Fits and clearances chapter.
- Install the power connector cover (265). - if available-

**NOTE:** Remove power connector cover (265) before flight.

### 4-3. Installation of the cell assembly

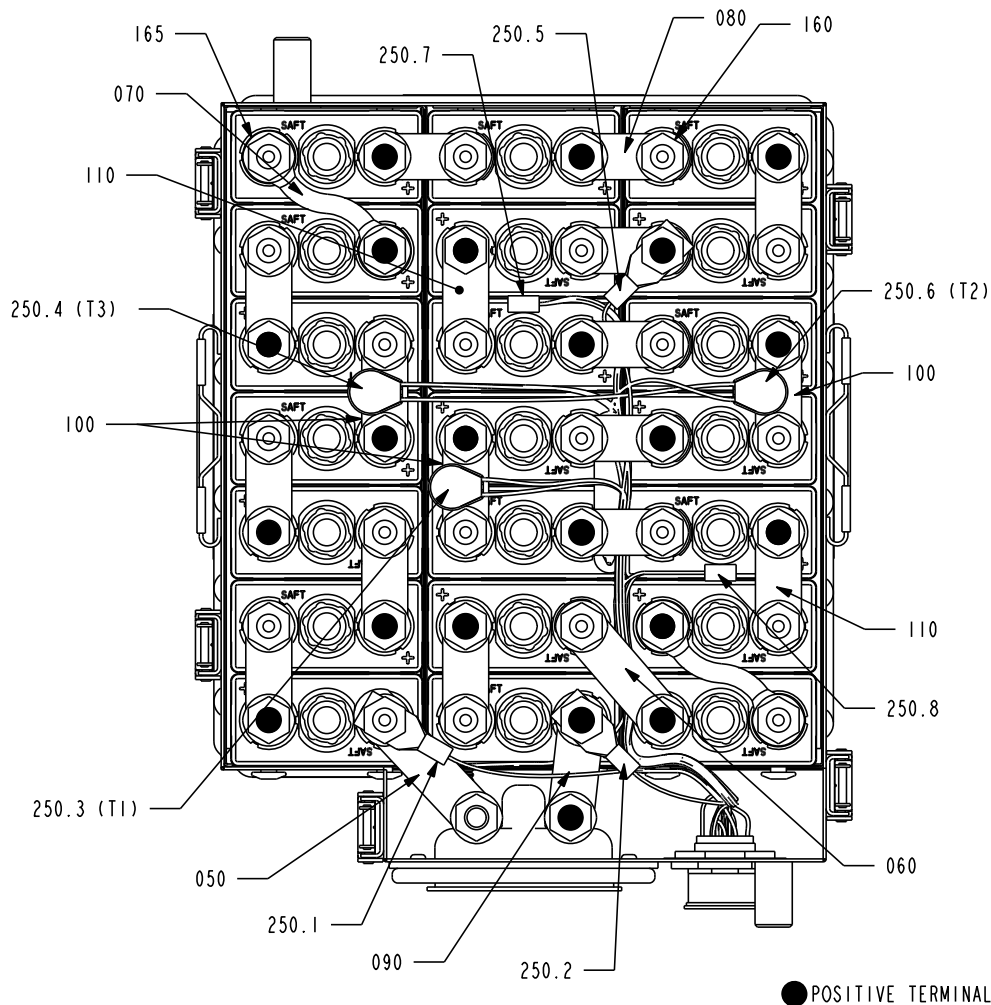


Figure 7003 - Battery layout

**CAUTION:** MAKE SURE CELL POLARITY IS CORRECT, DOUBLE CHECK CELL ORIENTATION PER FIGURE [7003 - Battery layout](#).

**NOTE:** To facilitate cell installation and make sure cell orientation is respected, first layout the cells outside the box per figure [7003 - Battery layout](#).

- Install the cell assemblies ([150](#)) starting from the end of each row following the polarity orientation per figure [7003 - Battery layout](#).
- Install sensor plates (250.7) and (250.8) as shown in figure [7003 - Battery layout](#).
- Install the last cell into position by carefully pushing onto both cell terminals at once using a block of soft wood (if the cell insertion is too difficult, remove one or two liner-spacers).
- Verify the polarity of each cell per figure [7003 - Battery layout](#).
- Check the tightness of the cell terminals lower nuts ([167](#)) are torqued according to the [Fits and clearances](#) chapter.
- Lightly lubricate the terminals and the links with [M02](#) (use a non-metallic paintbrush).
- Install links ([100](#)) with T1 (250.3), T2 (250.6), and T3 (250.4) mounted per figure [7003 - Battery layout](#).
- Install links ([050](#), [060](#), [070](#), [080](#), [090](#), and [110](#)) per figure [7003 - Battery layout](#).
- Install lugs (250.1) and (250.2) as shown in per figure [7003 - Battery layout](#).
- Install the washers ([145](#) and [165](#)) and nuts ([140](#) and [160](#)) finger tight.
- Torque the nuts ([140](#) and [160](#)) according to the [Fits and clearances](#) chapter.
- Lightly lubricate the nuts ([140](#) and [160](#)), the washers ([145](#) and [165](#)), and links ([050](#) to [110](#)) with [M02](#) (use a non-metallic paintbrush).
- Install the cover complete ([020](#)) and attach it.

### 4-4. Recording

- Fill out the log book (or equivalent).



**Component Maintenance Manual  
427CK-1**

PAGE INTENTIONALLY LEFT BLANK



### FITS AND CLEARANCES

#### 1. Introduction

The torque values below are "lubricated torque" values.

Use [M02](#) to lightly grease the terminal and nut threads before assembly and torque.

#### 2. Torque table

IPL FIG ITEM N°	NAME	TORQUE VALUE	
		N.m	lbf.in
<a href="#">140, 160</a>	Upper nut, M10 x 1.25	12.0 to 14.0	106 to 124
<a href="#">167</a>	Lower nut, M10 x 1.25	4.5 to 5.4	40 to 48
<a href="#">255</a>	Sensor connector nut, D38999/28-6 F-C	7.5 to 9.0	66 to 80
<a href="#">-257</a>	Thermostat nut, locking #6-32	1.0 to 1.2	9 to 11
<a href="#">280</a>	Power connector screw, #8-32	2.1 to 2.5	19 to 22

Table 8001 - Torque table



**Component Maintenance Manual  
427CK-1**

PAGE INTENTIONALLY LEFT BLANK

### SPECIAL TOOLS, FIXTURES, EQUIPMENT AND CONSUMABLES

#### 1. Introduction

This chapter is divided into two parts:

- The first part provides the list of special tools, fixtures and equipment needed to do the steps listed in the other chapters.
- The second part provides the listing of consumables used in this manual.

All listed items are identified in this manual by a standard code number:

- Txx for tools, fixtures and equipment.
- Mxx for consumable materials.

#### 2. Standard tools

The following items are recommended to do the procedures described in this manual. When necessary, equivalent substitutes may be used.

- Safety gloves.
- Protective goggles.
- Safety shoes.
- Eye wash.
- Protective apron.
- Constant current charger (DC current range 0-60 A, minimum open DC voltage 40 V)
- Constant current load bank (DC current range 0-60 A, DC voltage range 1-40 V)
- Meg-ohmmeter (0-50 MΩ @ 250 V DC)
- Multimeter (Volt, Ω, mA) 3.5 digits 2,000 counts 3.5 digits 1 % or better
- Climatic chamber if the battery has a sensor
- Torque wrench (insulated) 0-15 N.m (0-133 lbf.in)
- Standard mechanic's tools.
- Stiff bristle brush (non-metallic)
- Small paintbrush (non-metallic)
- Dry, compressed air source [less than 1.4 bar (20 psi)]
- Soft, lint free, clean cloth (at least two required)

#### 3. Special tools

**NOTE:** Equivalent tools can be used.

A special tool kit (P/N 416161) is available from Saft containing special tools including; T01, T02, T03, and T04. The tools are housed in a polypropylene box and each tool is insulated to make sure of optimum safety for the technician.

TOOL CODE	DESCRIPTION	(F6177) P/N	V09052 P/N
T01	Universal vent-valve wrench	413876	093365-000
T02	Syringe assembly with <b>MS</b> nozzle <a href="#">20 mm (0.79 in)</a>	416232 (assembly of 105112 & 104184)	020916-001
T03	1.2 Ω 3 W equalizing resistors	164829	
T04	Universal or M10 cell extraction tool	416159	017556-000
T05	vent-valve testing adapter for <b>MS</b> valve	458728	024398-000

Table 9001 - Special tools

### 4. Consumables

**NOTE:** Equivalent alternatives can be used for list items.

This paragraph describes the consumables used in the CMM.

MATERIAL CODE	DESIGNATION PART NUMBER AND SPECIFICATION	MANUFACTURER OR SUPPLIER (NAME, ADDRESS, CODE)
M01	Distilled or deionized water (specification at +20°C (+68°F)): Clear, colorless and odorless while boiling Conductivity < 33 μS/cm 5 < pH < 7 Mn-COD < 30 mg/l (1.7 X 10 <sup>-5</sup> oz/in <sup>3</sup> ) (Chemical Oxygen Demand under potassium permanganate methodology): methodology to evaluate organic or mineral pollution) Chlorines Cl- < 5 mg/l (2.9 X 10 <sup>-6</sup> oz/in <sup>3</sup> ) Sulfates SO4-- < 10 mg/l (5.8 X 10 <sup>-6</sup> oz/in <sup>3</sup> ) Temperature for analysis and specifications are at +20°C (+68°F).  STORAGE: dry and clean container without any corrosion and damage; Temperature: +20°C ± 5°C (+68°F ± 12°F). Over 1 year of storage, do an analysis of the liquid.	Local vendor or in house production
M02	Neutral petroleum jelly Density @ +60°C (+140°F) Range = 0.840 - 0.866kg/l (0.486 - 0.500 oz/in <sup>3</sup> ) Melting Point Range = +46°C to +52°C (+115°F to +126°F) Acidity/Alkalinity = Neutral to Litmus	Mineral vaseline NATO: S 743 F: AIR 3565 US: VV-P-236A UK: DEF 2333
M03	Mild soap	Local vendor

#### 9002 - Consumable materials

### ILLUSTRATED PARTS LIST

#### 1. Introduction

##### 1-1. General

The Illustrated Parts List (IPL) contains a list and illustrations of the assemblies and detailed parts of the unit in disassembly sequence.

To find the illustration for a part if the part number is known, refer to the [Alpha numerical index](#) and look for the part number and the corresponding figure and item number. Refer to the [Detailed part list](#) and look for the first figure and item number found in the [Alpha numerical index](#) for that part. If this figure shows the part in a section or system of the equipment other than the one necessary, refer to the other figure numbers listed in the Numerical Index.

To determine the part number of a given part, refer to the illustration showing the assembly including this part. Note the item number of the illustrated part and refer to the [Detailed part list](#) which indicates its part number and identification.

##### 1-2. Alpha numerical index

In this index, part numbers are classified from left to right, each character (letter, number, hyphen) being considered separately.

The part number column contains all part numbers included in the [Detailed part list](#).

##### 1-3. Detailed parts list

###### 1-3-1. Figure and item number

Each assembly, sub-assembly and parts with a part number that is included in the parts list is given as an item number.

The figure number linked to the item number is shown on the first line at the top of each page.

Numbered parts of assemblies and sub-assemblies included in the list but not illustrated are identified by a hyphen (-) preceding the item number.

An index letter shown before the item number refers to the figure showing the modified portion of the applicable part.

Manufacturer's Part Number: a manufacturer's part number is given to each assembly and detail part, whether illustrated or not.

Nomenclature: the nomenclature is given with an indenture, to show how the parts and the assemblies are related to the overall assembly. These are the details:

1 2 3 4 5 6 7

Assembly

. Detailed parts for assembly

. Sub-assembly

. Attaching parts and/or storage parts for sub-assembly

\* \* \*

. . Detailed parts for sub-assembly

. . Sub-sub-assembly

. . Attaching parts and/or storage parts for sub-sub-assembly

\* \* \*

. . . Detailed parts for sub-sub-assembly

The attaching parts are shown directly after the assembly of the part thereof. They are listed under the same indent number as the item they are attached to, are identified by the words "Attaching Parts" and are followed by three asterisks.

The manufacturer's code or the abbreviation NP (not procurable) are placed at the extreme right-hand side of the first line of the parts list column.

###### 1-3-2. Effectivity code

A numerical index indicates the effectivity of sub-assemblies and detailed parts lists in relation to the next level assembly (ies) or sub-assembly (ies).

When the effectivity is fully applicable, the usage code column remains blank.

The use code for assemblies and detailed parts refers to the figure/item number of the next higher assembly (ies) or sub-assembly (ies). Example: Effectivity 1A, 1B, 1C is written 1ABC.

### **1-3-3. Units per assembly**

The units per assembly column shows the quantity of units required for one next level assembly.

In some cases, the information is replaced by the abbreviation RF (for reference) or AR

### 2. Alpha numerical index

Part Number	Airline Stock Number	Figure Number	Item Number	Quantity per battery
D38999-28-6 F-C			255	1
M25988-3-028			252	1
MS90376-20R			256	1
009384-000			270	1
012536-002			240	21
015575-000			080	6
015579-000			140 160 167	86
018346-000			265	1
018567-000			090	7
018568-000			060	1
018569-000			070	2
021740-000			260	1
021870-000			210	42
021871-000			200	84
023388-001			170	21
023388-002			180	21
023619-000			230	21
023707-000			015	2
024104-000			010	1
024106-000			020	1
024119-000			250	1
024169-000			050	1
024170-000			100	3
024187-000			150	21
024711-000			030	1
025502-000			110	2
091181-002			220	21
093169-000			257	3
093616-000			280	4
093900-000			145 165	44

-: Item not illustrated

### 3. Detailed part list

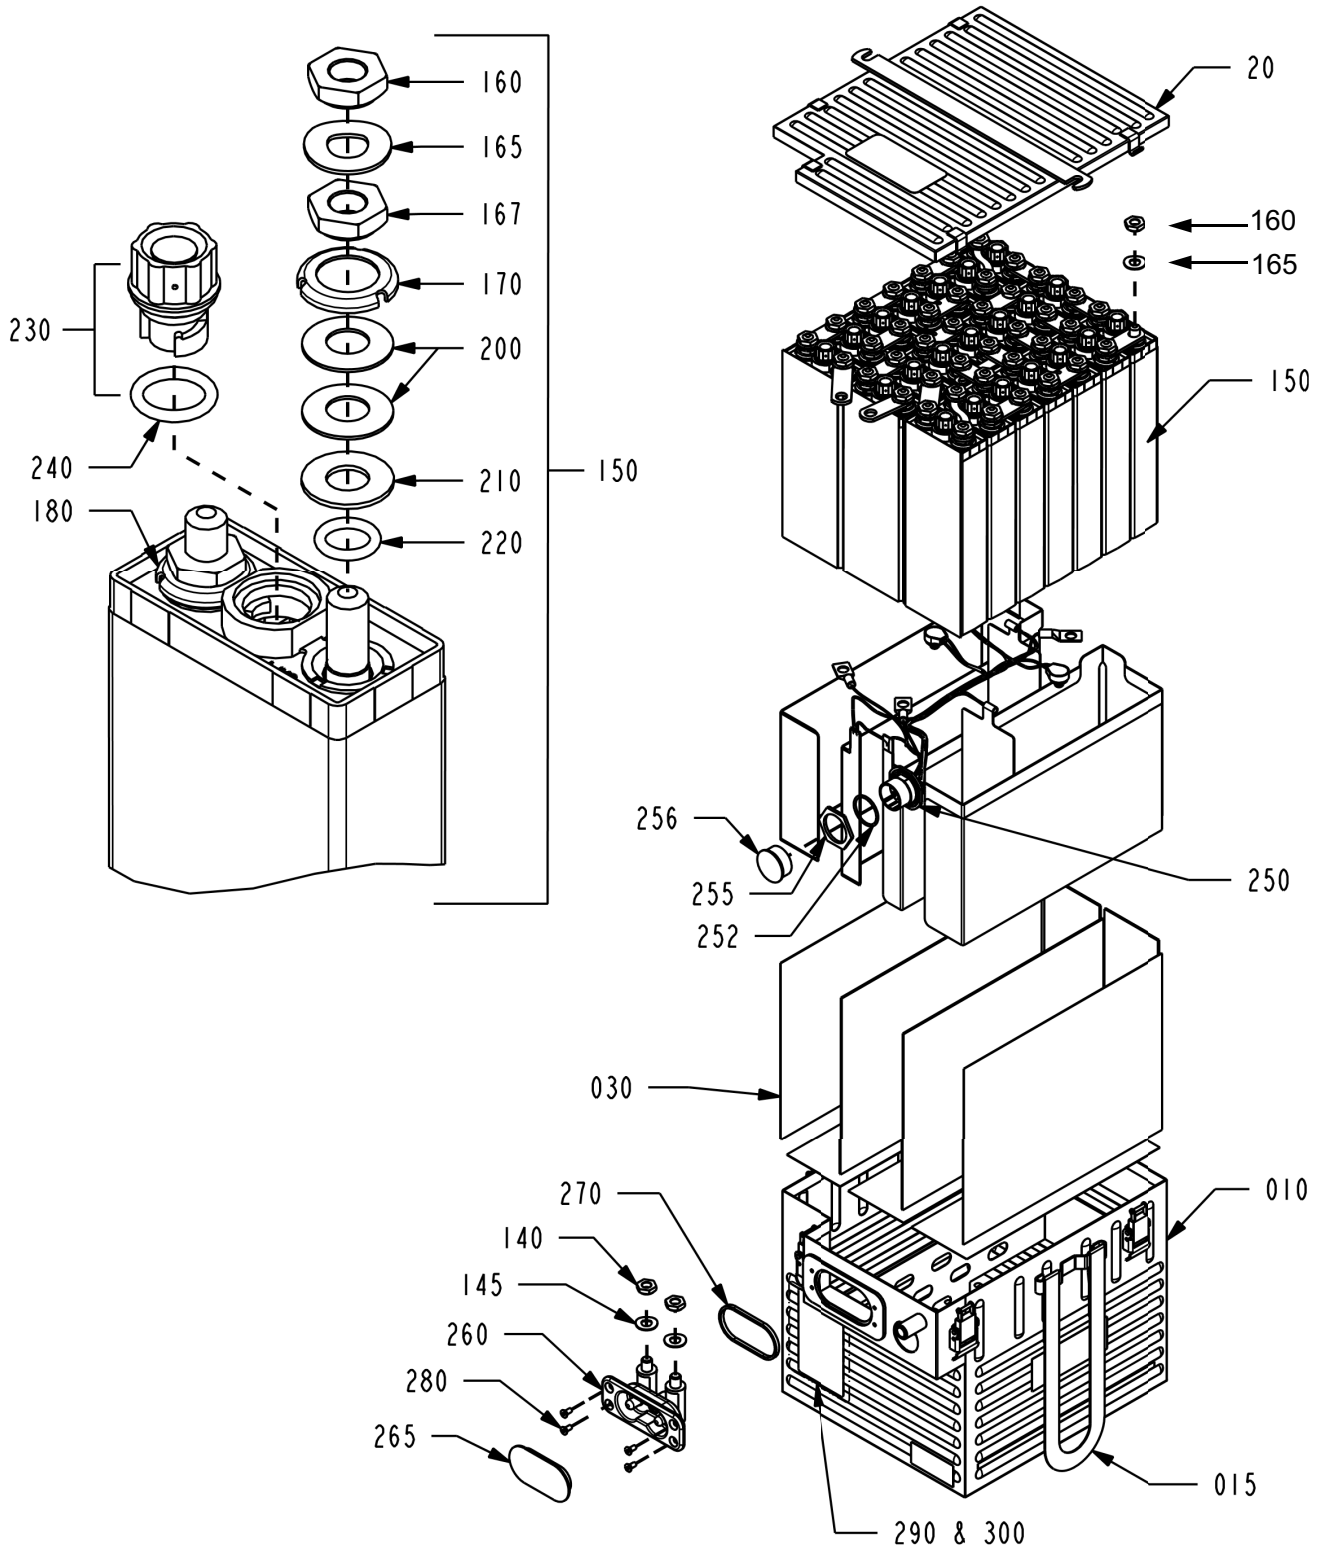


Figure IPL-1 - [427CK-1](#) Nickel-Cadmium Aircraft Battery



## Component Maintenance Manual 427CK-1

Figure Number	Item Number	Part Number	Airline Stock Number	Nomenclature							Unit per assembly
				1	2	3	4	5	6	7	
1	-001	024055-000		BATTERY, <a href="#">427CK-1</a> WITH CELLS <a href="#">CVK420KA</a>							RF
	-005	-		. BOX AND COVER COMPLETE							NP 1
	010	024104-000		. . BOX COMPLETE, MARKED							1
	015	023707-000		. . HANDLE, STRAP							2
	020	024106-000		. . COVER COMPLETE, MARKED							1
	-022	-		. . . COVER ASSEMBLY							NP 1
	-025	-		. . . COVER GASKET							NP 1
	030	024711-000		. LINER-SPACER KIT							1
	050	024169-000		. LINK, INTER-CELL							1
	060	018568-000		. LINK, INTER-CELL							1
	070	018569-000		. LINK, INTER-CELL							2
	080	015575-000		. LINK, INTER-CELL							6
	090	018567-000		. LINK, INTER-CELL							7
	100	024170-000		. LINK, INTER-CELL							3
	110	025502-000		. LINK, INTER-CELL							2
	140	015579-000		. NUT, M10 X 1.25							2
	145	093900-000		. WAVE WASHER							2
	150	024187-000		. CELL ASSEMBLY, <a href="#">CVK420KA</a> WITH HARDWARE							21
	160	015579-000		. . NUT, M10 X 1.25							2
	165	093900-000		. . WAVE WASHER							2
	167	015579-000		. . NUT, M10 X 1.25							2
	170	023388-001		. . WASHER, POSITIVE POLARITY, RED							1
	180	023388-002		. . WASHER, NEGATIVE POLARITY, BLUE							1
	200	021871-000		. . WASHER, BELLEVILLE							4
	210	021870-000		. . WASHER, FLAT							2
	220	091181-002		. . O-RING							2
	230	023619-000		. . VENT-VALVE ASSEMBLY							1
	240	012536-002		. . . O-RING VENT-VALVE							1
	250	024119-000		. SENSOR CONNECTOR COMPLETE							1
	252	M25988-3-028		. . SENSOR CONNECTOR O-RING, M25988/3-028							1
	255	D38999-28-6 F-C		. . SENSOR CONNECTOR NUT, D38999/28-6 F-C							1
	256	MS90376-20R		. . SENSOR CONNECTOR COVER							1
	-257	093169-000		. . NUT, LOCKING #6-32							3
	260	021740-000		. POWER CONNECTOR COMPLETE							1

## Component Maintenance Manual 427CK-1

Figure Number	Item Number	Part Number	Airline Stock Number	Nomenclature 1 2 3 4 5 6 7	Unit per assembly
	265	018346-000		. POWER CONNECTOR COVER,	1
	270	009384-000		. POWER CONNECTOR GASKET	1
	280	093616-000		. POWER CONNECTOR SCREW, #8-32	4
	290	NP		. NAME PLATE LABEL (V09052, 025052-126) NP	1
	300	NP		. NAME PLATE OVERLAY (V09052, 023395-000) NP	1

-. Item not illustrated

NP: Not Procurable

RF: For reference purpose

# STORAGE (INCLUDING TRANSPORTATION)

## 1. Introduction

### 1-1. General

This document describes different methods of storage conditions recommended for a battery which has been cleaned and serviced and is not immediately placed in service on-board an aircraft.

Proper storage conditions and packaging makes sure that the equipment is protected against environmental damages.

### 1-2. Storage room

Keep the batteries and spares in a dry and clean room isolated from detrimental agents such as: dirt, dust, dampness, vibration, and corrosive atmosphere.

Lead-acid batteries must not be stored in the same room as Saft Ni-Cd batteries.

### 1-3. Climatic conditions

The recommended temperature range is  $+20\text{ }^{\circ}\text{C} \pm 15\text{ }^{\circ}\text{C}$  ( $+68\text{ }^{\circ}\text{F} \pm 27\text{ }^{\circ}\text{F}$ ).

Pressure 750 to 1060 hPa (22.15 to 31.3 in.Hg).

Relative humidity < 85 %.

## 2. Storage

### 2-1. Inactive long-term storage

#### 2-1-1. Procedure

Before placing a battery into inactive long-term storage, the battery must successfully complete [Regular check](#) or [General over-haul](#) and be in a discharged condition (refer to [Residual discharge](#) and [Cell shorting](#)). There is no need of maintenance operation during the storage period. It is not necessary to short circuit the battery. No revalidation is required during the storage.

**NOTE:** If [Climatic conditions](#) are met and the packaging protects the battery from mechanical damages, environmental contaminants (i.e.: dirt, dust, vibrations, or corrosive atmosphere), and is airtight, then a 10 year storage period is allowed (if not airtight, a 2 year storage period is allowed).

The batteries are stored in a normal vertical position as described in paragraphs [Storage room](#) and [Climatic conditions](#).

#### 2-1-2. Action at the end of long-term storage

For batteries under long-term storage and before installation of the battery into the aircraft for service:

- If storage time is less than or equal to 12 months, then do [Visual inspection](#), [Insulation check](#), [Nut tightness](#), [Charge](#), [Adjust electrolyte level](#), and repeat [Insulation check](#).
- If storage time is over 12 months do [Charge](#) followed by [Regular check](#).

### 2-2. Inactive standby storage

#### 2-2-1. Scope

The inactive standby storage allows the battery to be stored in a "ready to be installed on the aircraft" condition.


#### 2-2-2. Procedure

**CAUTION:** IF THE FOLLOWING CONDITIONS ARE NOT MET, THERE IS A RISK OF PLACING A BATTERY ON BOARD AN AIRCRAFT THAT DOES NOT MEET THE EMERGENCY REQUIREMENTS.

**NOTE:** The temperature is the average temperature during the storage period.

**NOTE:** If the battery was previously stored at a temperature below the ambient temperature, condensation may occur. Before installing do [Insulation check](#).

Maintain the battery per CMM procedures. Store the battery fully charged (refer to [Charge](#)) in a dedicated room (refer to [Storage room](#) and [Climatic conditions](#)) to be able to be installed in the aircraft without further check any time during an inactive standby storage period. The battery may be kept in inactive standby storage for a period of 90 days maximum corresponding to 80% available capacity (refer to figure [15001 - Standby storage period](#)).

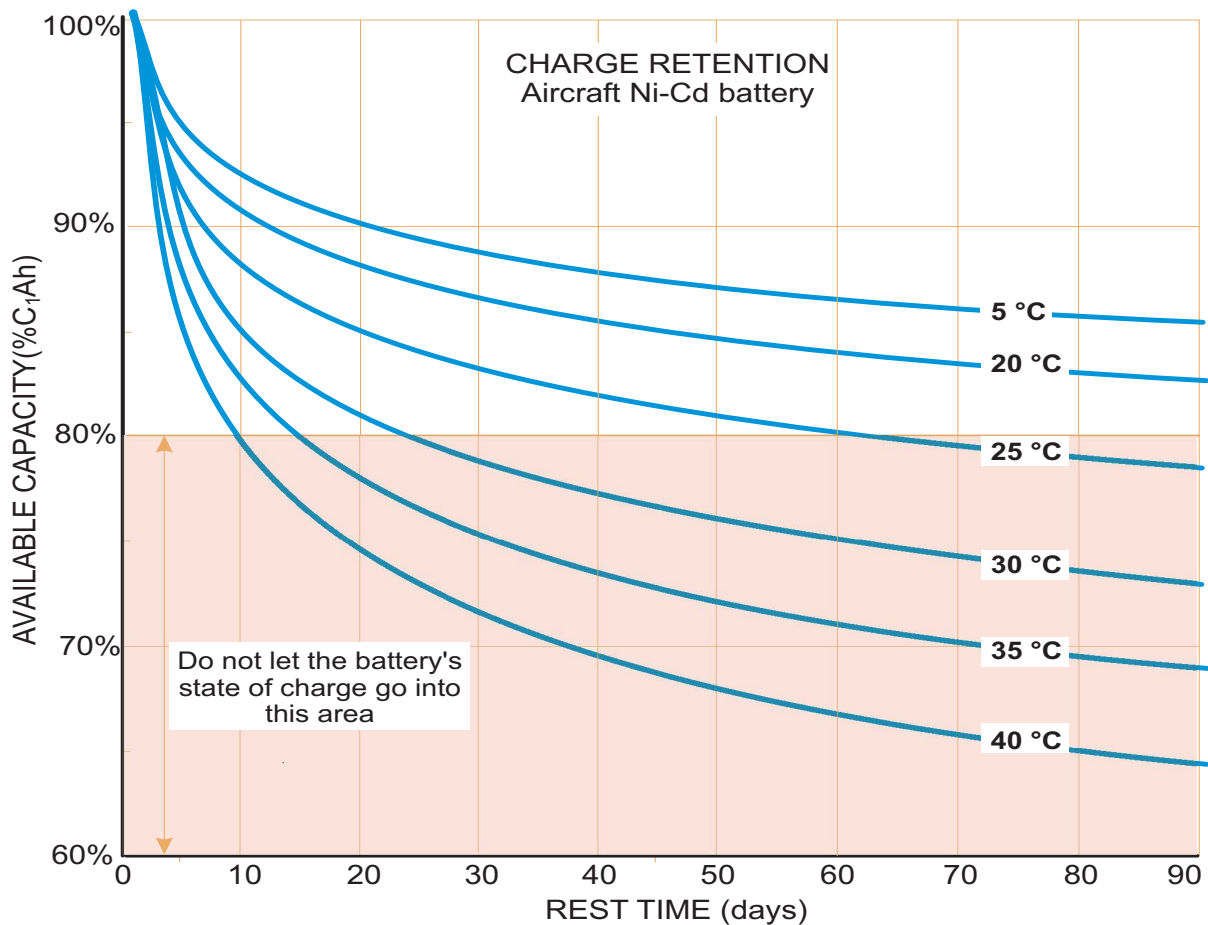

**Figure 15001 - Standby storage period**

### 2-2-2-1. Definitions

- The [Inactive standby storage](#) period is a maximum 90 days (3 months) for average room temperature < +23 °C (+73.4 °F).
- Total standby storage duration is 9 standby storage periods or 810 days (27 months).

### 2-2-2-2. Examples of standby storage period

- 24 days at an average room temperature of +30 °C (+86 °F)
- 60 days at an average room temperature of +25 °C (+77 °F)

### 2-2-3. Refresh charge

The [Inactive standby storage](#) period can be prolonged by applying refresh charge (at the end of the period). The refresh charge is defined as a short charge at 0.1C<sub>1</sub>A, 0.5C<sub>1</sub>A, or 1C<sub>1</sub>A until the voltage reaches the values given in the Table [15002 - Inactive standby storage](#) below.

CHARGE rate	VOLTAGE (end of refresh charge)
0.1 C <sub>1</sub> A ( <a href="#">4.2 A</a> )	1.50 V x <a href="#">21</a> cells
0.5 C <sub>1</sub> A ( <a href="#">21 A</a> )	1.55 V x <a href="#">21</a> cells
1.0 C <sub>1</sub> A ( <a href="#">42 A</a> )	1.57 V x <a href="#">21</a> cells

**Table 15001 - Charge rate for refresh charge**

The battery can receive the refresh charge two (2) times maximum during each standby storage period. The time necessary to reach the required voltage should be very short. **Do not overcharge at 0.1C<sub>1</sub>A for 4 hours.**

### 2-2-4. Action at the end of standby storage periods (refer to figure [15002 - Inactive standby storage](#))

**NOTE:** During any standby storage periods the battery is serviceable.

### 2-2-4-1. At the end of standby storage period 1, 2, 4, 5, 7, or period 8


- Do a [Refresh charge](#) and continue 1 more standby storage period
- Or install the serviceable battery into the aircraft without any further maintenance
- Or place the battery into [inactive long-term storage](#) refer to the procedure

### 2-2-4-2. At the end of standby storage period 3 and period 6

- Install the serviceable battery into the aircraft without any further maintenance
- Or continue standby storage:
  - if the temperature is  $\leq +30\text{ }^{\circ}\text{C}$  ( $+86\text{ }^{\circ}\text{F}$ ), do [Insulation check](#) + [Residual discharge](#) + [Charge](#) + [Adjust electrolyte level](#) + [Insulation check](#) to continue [inactive standby storage](#)
  - if the temperature is  $> +30\text{ }^{\circ}\text{C}$  ( $+86\text{ }^{\circ}\text{F}$ ) then do a [Regular check](#) to continue [inactive standby storage](#)
- Or place the battery into [inactive long-term storage](#)

### 2-2-4-3. At the end of standby storage period 9

- Install the serviceable battery into the aircraft without any further maintenance
- Or do a [Regular check](#) and place the battery into [inactive long-term storage](#)

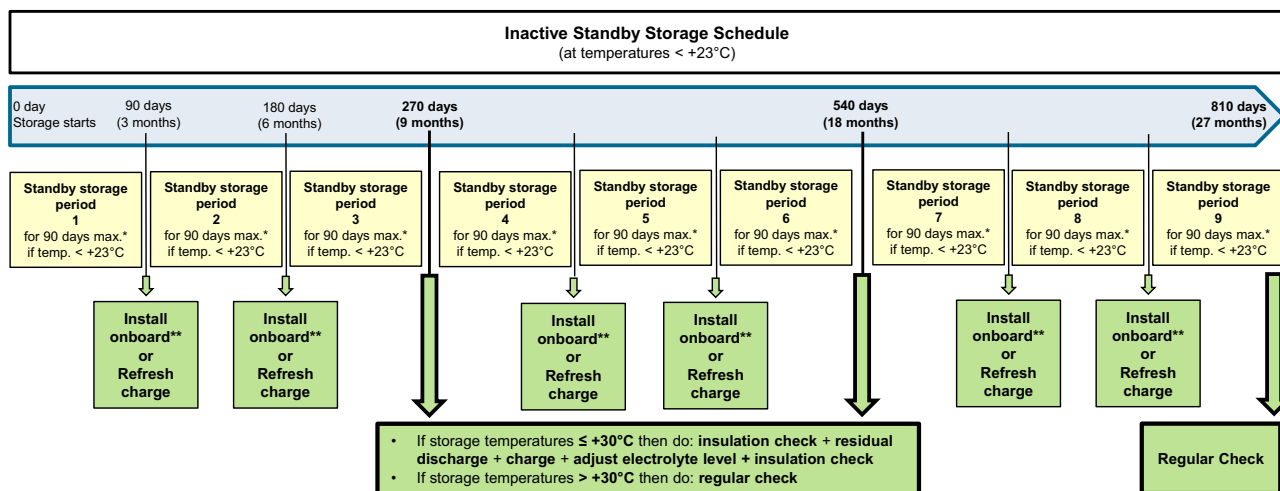

\* If temperatures are  $\geq +23^{\circ}\text{C}$  standby storage periods will be shorter, refer to Figure 15001

\*\* The battery can be installed on board the aircraft at any time during the standby storage period

**Figure 15002 - Inactive standby storage**

### 2-2-4-4. Example (figure 15002 - Inactive standby storage)

**NOTE:** Standby storage period is shorter if the temperature is higher; refer to figure 15001 - Standby storage period to adjust the standby storage period duration based on average storage room temperature.

- The initial standby storage period @  $+20\text{ }^{\circ}\text{C}$  ( $+77\text{ }^{\circ}\text{F}$ ) of a fully charged battery is 90 days (3 months) maximum without any other required operations the capacity will remain over 80% state of charge.
- After 90 days (3 months) of storage @  $+20\text{ }^{\circ}\text{C}$  ( $+77\text{ }^{\circ}\text{F}$ ), 1st [Refresh charge](#). An additional 90 days (3 months) of storage can then be added for a total duration of 180 days (6 months).
- After 180 days (6 months) of storage @  $+20\text{ }^{\circ}\text{C}$  ( $+77\text{ }^{\circ}\text{F}$ ), 2nd [Refresh charge](#). An additional 90 days (3 months) of storage can then be added for a total duration of 270 days (9 months).
- At the end of standby storage period of 90 days (3 months) or 180 days (6 months) either:
  - Do a [Refresh charge](#) to continue 1 more standby storage period.
  - Or install the serviceable battery into the aircraft without any further maintenance.
  - Or place the battery into [inactive long-term storage](#).
- At the end of standby storage period of 270 days (9 months) or 540 days (18 months) either:
  - Install the serviceable battery into the aircraft without any further maintenance.
  - Or continue standby storage:
    - If the temperature is  $\leq +30\text{ }^{\circ}\text{C}$  ( $+86\text{ }^{\circ}\text{F}$ ) do [Insulation check](#) + [Residual discharge](#) + [Charge](#) + [Adjust electrolyte level](#) + [Insulation check](#) to continue [inactive standby storage](#).
    - If the temperature is  $> +30\text{ }^{\circ}\text{C}$  ( $+86\text{ }^{\circ}\text{F}$ ) then do a [Regular check](#) to continue standby storage.
  - Or place the battery into [inactive long-term storage](#)
- At the end of standby storage period 810 days (27 months):
  - Install the serviceable battery into the aircraft without any further maintenance.
  - Or do a [Regular check](#) and place the battery into [inactive long-term storage](#)

### 3. Storage of spares

#### 3-1. Spare cells

Spare cells must be stored in a vertical upright position, filled, and discharged condition (electrolyte levels are not visible in discharged cells). It is not necessary to short circuit the cells. The vent-valves must be installed. The storage conditions are the same as those given in paragraph [Inactive long-term storage](#). No maintenance operation is needed during storage. Before installation in a battery, cells must be visually inspected for damage or leakage and cleaned and maintained as necessary in accordance with [Visual inspection](#).

#### 3-2. Spare O-rings, gaskets, and vent-valves

##### 3-2-1. O-rings and gaskets

Six (6) years of storage period starts from the date of manufacture unless otherwise specified on the packaging. The O-rings and gaskets should be protected from exposure to the air, light, and high humidity < 85 %. Storage life depends on temperature. It is recommended to store the parts in a cool area < +25 °C (+77 °F). Above +35 °C (+95 °F), storage life is reduced to 5 years. Before use the O-rings or gaskets it must be inspected. In case of visible signs of damage, distortion, or deterioration, the part must be discarded.

##### 3-2-2. Vent-valves with O-rings

Six (6) years of storage period starts from the date of manufacture unless otherwise specified on the packaging. The vent-valves and O-rings should be protected from exposure of air, light and high humidity (< 85 %). Storage life depends on temperature. It is recommended to store the parts in a sealed container (non-PVC) in a cool area < +25 °C (+77 °F). Above +35 °C (+95 °F), storage life is reduced to 5 years. Before use the vent-valves and O-rings it must be inspected. In case of visible signs of damage, deformation, or deterioration, the vent-valve and O-ring must be discarded.

##### 3-2-3. Other spares parts

Other spare parts protected from external contamination (i.e. dirt, dust, dampness, vibration, corrosive atmosphere) and high humidity (> 85%), may be stored for unlimited periods. Before use, parts must be inspected. Parts showing any visible signs of damage, distortions, or deteriorations must be discarded.

### 4. Transportation procedure

The battery is normally discharged before packing. If it is necessary to transport a charged battery, make sure that the output terminals are protected against short circuit.

The battery should be packed vertically in its original container. If the original container is not available, the international and/or local packaging regulations applicable to the mode of transport and destination must be followed.

According to the IATA / IMDG dangerous goods regulations, Saft ships all existing nickel-cadmium batteries or cells for aircraft under the classification UN2795 (wet, filled with alkali).