


Manual number:
MAN-3G6205G09132
REV. A

Pag. 1 of 17

GSE & TOOL MANUAL

TITLE

TROLLEY ADAPTER, SWASHPLATE SUPPORT P/N 3G6205G09132

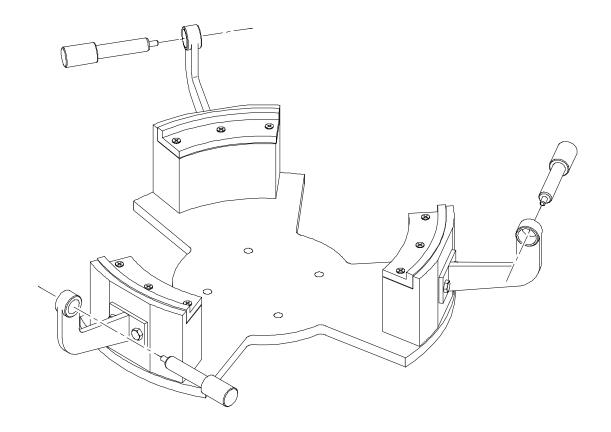



Manual number:
MAN-3G6205G09132
REV. A

Pag. 2 of 17

REVISION HISTORY

| REV | CHANGE DESCRIPTION | DATE |
|-----|--------------------|------------|
| А | First issue | 10/11/2021 |
| | | |



Manual number: MAN-3G6205G09132 REV. A

Pag. 3 of 17

SUMMARY

| SUMI | MARY. | | 3 |
|------|---------|--------------------------------------|-----|
| LIST | OF TAI | 3LE | 4 |
| LIST | OF FIG | URE | 4 |
| 1. | SCOPE | | 5 |
| 1.1 | I. AF | PPLICABILITY | 5 |
| 1.2 | 2. OI | 3JECT | 5 |
| 1.3 | 3. W | ARNING AND SAFETY INSTRUCTIONS | 5 |
| 2. | DOCU | MENTS | 6 |
| 2.1 | 1. AF | PPLICABLE DOCUMENTS | 6 |
| 2.2 | 2. AC | CRONYMS USED | 6 |
| 3. | DESCF | RIPTION | 7 |
| 4. | TOP AS | SSEMBLY DRAWINGS | 7 |
| 5. | IDENTI | FICATION | 7 |
| 6. | OVERA | ALL DIMENSIONS | 8 |
| 7. | WEIGH | Т | 8 |
| 8. | MAIN F | PARTS | 9 |
| 9. | MAIN F | EATURES DESCRIPTION | 9 |
| 10. | WAR | NING AND SAFETY NOTES | .10 |
| 10. | .1. W | ARNING NOTE | .10 |
| 10 | .2. SA | AFETY NOTES | .11 |
| 11. | STO | RAGE | .12 |
| 11. | .1. LU | JBRICATION BEFORE STORAGE | .12 |
| 11. | .2. S | FORAGE CONFIGURATION | .12 |
| 12. | MAIN | NTENANCE | .12 |
| 12 | .1. CI | EANING | .12 |
| | 12.1.1. | SPECIAL TOOLS, FIXTURE AND EQUIPMENT | .12 |
| | 12.1.2. | PART REQUIREMENTS | .12 |
| | 12.1.3. | MANUAL CLEANING | .12 |
| 12 | .2. Cl | HECKS | .13 |
| | 12.2.1. | SPECIAL TOOLS, FIXTURE AND EQUIPMENT | .13 |
| | 12.2.2. | VISUAL EXAMINATION | .13 |
| | 12.2.3. | PERIODICAL CHECKS | .14 |
| | 12.2.4. | DIMENSIONAL CHECKS | .14 |
| | 12.2.5. | SPECIAL CHECKS SUMMARY | .14 |
| 12 | .3. RI | EPLACEMENT | .14 |
| | 12.3.1. | REPLACEMENT PROCEDURES | .14 |
| | | | |



Manual number:
MAN-3G6205G09132
REV. A

Pag. 4 of 17

| 13. | CALIBRATION14 |
|---------|--|
| _ | |
| 14. | SHELF LIFE |
| 15. | SPARE PARTS15 |
| 16. | CE MARKING16 |
| ANNE | X A17 |
| | |
| | |
| | |
| LIST | OF TABLE |
| Table | 1 – Warning Instruction5 |
| Table 2 | 2 – Applicable Documents6 |
| Table : | 3 – Warning Note10 |
| Table 4 | 4 – Visual Check13 |
| Table : | 5 – Spare Parts16 |
| | |
| | |
| LIST | OF FIGURE |
| Figure | 1 – Trolley adapter, swashplate support7 |
| Figure | 2 – LHD Identification tag with P/N7 |
| Figure | 3 – Main Parts9 |
| Figure | 4 – Safety Notes11 |
| Figure | 5 – Spare Parts15 |



Manual number:
MAN-3G6205G09132
REV. A

Pag. 5 of 17

1. SCOPE

1.1. APPLICABILITY

The contents of this document are meant to provide information on the P/N 3G6205G09132 TROLLEY ADAPTER, SWASHPLATE SUPPORT.

1.2. OBJECT

The object of this document is to describe the AGE and its components, its main features and it will also provide all needed maintenance requirements to keep in service the P/N 3G6205G09132 TROLLEY ADAPTER, SWASHPLATE SUPPORT.

1.3. WARNING AND SAFETY INSTRUCTIONS

A number of symbols are used throughout this document to indicate information to which the user should pay attention to. These are indicated below along with the specific meaning.

| Warning | Indicates a danger that might arise from a product and might result in severe injuries or even death, if no precautions are taken. |
|---------|--|
| Caution | Indicates a potentially dangerous situation, which might result injury or damage to the equipment. |
| Notice | Indicates a note providing information to help the reader during the procedure. |

Table 1 – Warning Instruction



Manual number:
MAN-3G6205G09132
REV. A

Pag. 6 of 17

2. DOCUMENTS

2.1. APPLICABLE DOCUMENTS

The following table lists the applicable documents

| REF | REFERENCE OF DOCUMENT | TITLE |
|------|-----------------------|-------|
| N.A. | N.A. | N.A. |

Table 2 – Applicable Documents

2.2. ACRONYMS USED

The main acronyms used in this document are listed below:

| LHD | Leonardo Helicopter Division |
|-----|------------------------------|
| | |

HC Helicopter
P/N Part Number
S/N Serial Number
N.A. Not Applicable



Manual number:
MAN-3G6205G09132
REV. A

Pag. 7 of 17

3. DESCRIPTION

This tool is used in conjunction with the multipurpose trolley to support the swashplate assy during the repair activities.

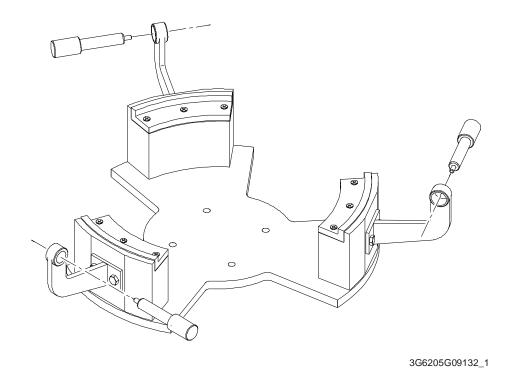


Figure 1 – Trolley adapter, swashplate support

4. TOP ASSEMBLY DRAWINGS

Refer to P/N 3G6205G09132 TROLLEY ADAPTER, SWASHPLATE SUPPORT.

5. IDENTIFICATION

The tool identification P/N is marked on the LHD identification tag.

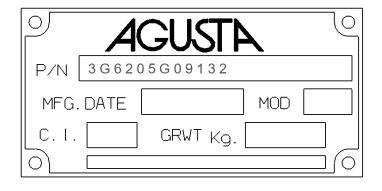


Figure 2 – LHD Identification tag with P/N



Manual number:
MAN-3G6205G09132
REV. A

Pag. 8 of 17

6. OVERALL DIMENSIONS

Length: 465 mmWidth: 465 mmHeight: 165 mm

7. WEIGHT


Total Weight: Not available



Manual number:
MAN-3G6205G09132
REV. A

Pag. 9 of 17

8. MAIN PARTS

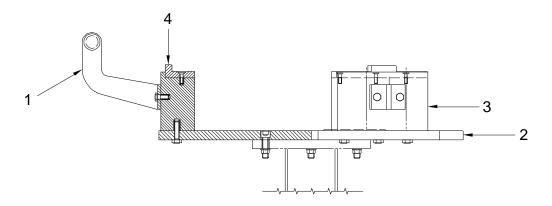

3G6205G09132_2

Figure 3 – Main Parts

The main parts of the TROLLEY ADAPTER, SWASHPLATE SUPPORT are:

- 1. Fitting assy
- 2. Base
- 3. Support
- 4. Protection

9. MAIN FEATURES DESCRIPTION

The tool is composed of a round base (2, <u>Figure 3</u>) with four holes to interface it with the multipurpose trolley and three fitting assies (1) to interface it with the swashplate.



Manual number:
MAN-3G6205G09132
REV. A

Pag. 10 of 17

10. WARNING AND SAFETY NOTES

10.1. WARNING NOTE

| Warning Caution | Use this equipment only for the purpose that it is designed for. Any other use can result in injury or serious material damage to the components. |
|------------------|--|
| Notice | The Manual can never integrally replace the adequate competence of the user. |
| Warning Caution | Before and after each use of the equipment is necessary to perform the checks required. Do not operate with a tool damaged or partially completed, or partially assembled. |
| Notice | This Manual provides guidelines and instructions of the equipment that are in addition to - but are not intended to replace or modify but only to integrate - any general or specific rule, regulation, decree or law that is in force in the place where the equipment is in use. |

Table 3 – Warning Note



Manual number:
MAN-3G6205G09132
REV. A

Pag. 11 of 17

10.2. SAFETY NOTES

Remember to wear protective overalls, safety shoes, protective gloves and glasses during all operational and maintenance phases.







Figure 4 - Safety Notes



Manual number:
MAN-3G6205G09132
REV. A

Pag. 12 of 17

11. STORAGE

The Tool shall be properly stored to provide protection from external weather conditions, damage and dirty particles.

Ensure that the tool parts are clean before storage.

11.1. LUBRICATION BEFORE STORAGE

Apply the Grease (MIL-PRF-23827) on all threaded parts before tool storage.

11.2. STORAGE CONFIGURATION

The tool has no particular storage configuration.

12. MAINTENANCE

NOTE: Correct regular maintenance allows preventing most faults and safeguards of tool performance in time, thereby making it last longer.

Every year carry out regular maintenance on a regular basis as detailed in this manual.

NOTE: Inspection intervals for tool parts placed inside in ready storage is 12 months.

12.1. CLEANING

Before inspection and after each use, carry out the cleaning of the tool components.

12.1.1. SPECIAL TOOLS, FIXTURE AND EQUIPMENT

No special tools, fixture and equipment are required for cleaning.

12.1.2. PART REQUIREMENTS

The parts to clean should be free from the moisture, emulsified water, soaps and metal shavings that can develop of corrosive acids.

They must also be free from wide grease and / or slosh deposits.

12.1.3. MANUAL CLEANING

- A. Clean thoroughly all metal surfaces with a clean lint-free cloth (Local supply) moistened with Cleaning Solvent (MIL-PRF-680C, Type II) to do general spot cleaning of large groups areas. For nylon or Teflon surfaces, the use of a biodegradable, water dilutable cleaning compound (MIL-PRF-87937 D, Type II) is required.
- B. Repeat the cleaning process again by means another clean lint-free cloth (Local supply).
- C. Drying.
 - Verify that the solvent should not be trapped in the cavity. Normally, the solvent evaporates at room temperature in a satisfactory manner.



Manual number:
MAN-3G6205G09132
REV. A

Pag. 13 of 17

12.2. CHECKS

Before and after each use or at least every year, carry out the check of kit component.

Before each use ensure that the manual is available to the operator, in the event of loss, request a copy to Leonardo Helicopters Division.

The Tool kit shall be submitted to following checks to guarantee the functionality.

All required checks shall be registered on CHECK RECORDS Table. Ref. TLC_Table 1

After each use of tool ensure to have registered the number of uses on HISTORICAL USES RECORD Table. Ref. *TLC_Table 2*

The Tool Log Card template contained in the Annex A of this manual can be replaced with any other log card template in use in the plant where the equipment is in use.

12.2.1. SPECIAL TOOLS, FIXTURE AND EQUIPMENT

No special tools, fixture and equipment are required for the checks.

12.2.2. VISUAL EXAMINATION

NOTE: Replace the parts that do not obey the inspection requirements.

Restore the marking of the parts that results damaged or not readable.

All required visual checks are listed on Table 4

| PERIODICY | | CHECK TYPE | COMPONENTS |
|------------------------|--------------------|---|------------|
| | | Evidence of impact; | All |
| | | Crushing or stripping | All |
| | | Cracks | All |
| | | Dents | All |
| | Z | Wear | All |
| | VISUAL EXAMINATION | Distortions | All |
| BEFORE | | Corrosion | All |
| AND AFTER EVERY USE | | Loose or defective attaching parts (warning flag) | All |
| | /ISD/ | Unsticking of parts | All |
| | <i>></i> | Damage to the threads | All |
| | | Marking | All |
| | | Damage to the pins and to the shell | N.A. |
| | | Damage to the insulation sleevers and wires | N.A. |

Table 4 – Visual Check



Manual number:
MAN-3G6205G09132
REV. A

Pag. 14 of 17

12.2.3. PERIODICAL CHECKS

Not Applicable.

12.2.4. DIMENSIONAL CHECKS

Not Applicable.

12.2.5. SPECIAL CHECKS SUMMARY

Not Applicable.

12.3. REPLACEMENT

All the parts for which it is allowed the components replacement are listed in Paragraph 15.

12.3.1. REPLACEMENT PROCEDURES

The replacement of parts of the kit does not require specific procedures.

13. CALIBRATION

No Calibration is required.

14. SHELF LIFE

Not Applicable.



Manual number:
MAN-3G6205G09132
REV. A

Pag. 15 of 17

15. SPARE PARTS

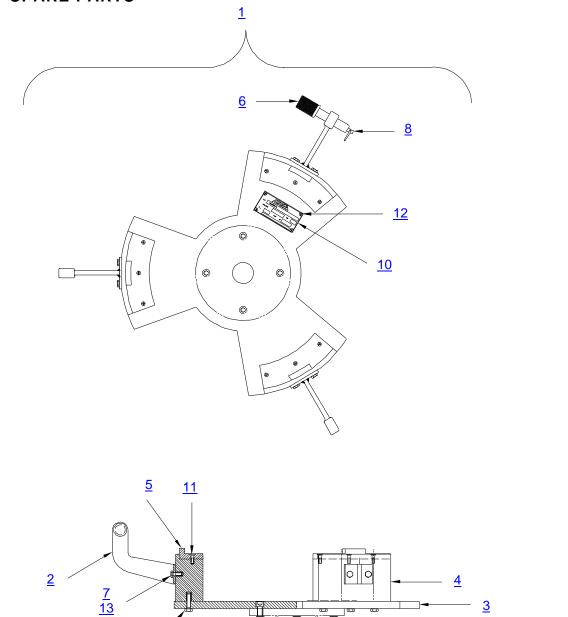


Figure 5 – Spare Parts

₩

3G6205G09132_3

<u>9</u> 14



Manual number:
MAN-3G6205G09132
REV. A

Pag. 16 of 17

| ITEM | P/N | DESCRIPTION | Q.TY |
|------|---------------|-------------------------------------|------|
| 1 | 3G6205G09132 | TROLLEY ADAPTER, SWASHPLATE SUPPORT | REF. |
| 2 | 3G6205G09631 | FITTING ASSY | 3 |
| 3 | 3G6205G09751 | BASE | 1 |
| 4 | 3G6205G09832 | SUPPORT ASSY | 3 |
| 5 | 3G6205G09952 | PROTECTION | 3 |
| 6 | 3G6205G10051 | PIN | 3 |
| 7 | AN4-5A | BOLT, MACHINE | 6 |
| 8 | AN415-6 | PIN LOCK | 3 |
| 9 | AN5-10A | BOLT, MACHINE | 9 |
| 10 | A304A001A1 | PLATE, IDENTIFICATION | 1 |
| 11 | MS24694-C52 | SCREW, MACHINE | 9 |
| 12 | MS35207-226 | SCREW, MACHINE | 4 |
| 13 | NAS1149D0463K | WASHER, FLAT | 6 |
| 14 | NAS1149D0563K | WASHER, FLAT | 9 |

Table 5 – Spare Parts

16. CE MARKING

No CE marking is required for the P/N 3G6205G09132 TROLLEY ADAPTER, SWASHPLATE SUPPORT.



Manual number:
MAN-3G6205G09132
REV. A

Pag. 17 of 17

ANNEX A TOOL LOG CARD



TOOL LOG CARD

ISSUE -/- Pag. **1** of **3**

| TOOL KIT P/N: [1] | TOOL KIT DESCRIPTION: [2] | TOOL KIT S/N: [3] |
|-------------------|---------------------------|-------------------|
| TOOL P/N: [4] | TOOL S/N: [5] | REMARKS: [6] |

| | Section 1: CHECKS RECORD | | | | | | |
|-------------|--------------------------|--------------|-------|-----------|------------|------------|------------------------|
| [7] | [8] | [9] | [10] | [11] | [12] | [13] | CERTIFICATION [14] |
| N° check | DATE | P/N TO CHECK | CHECK | FREQUENCY | RESULT | NOTE | STAMP & SIGNATURE [15] |
| 1 | | | | | | | |
| 2 | | | | | | | |
| 3 | | | | | | | |
| 4 | | | | | | | |
| 5 | | | | | | | |
| 6 | | | | | | | |
| 7 | | | | | | | |
| 8 | | | | | | | |
| 9 | | | | | | | |
| 10 | | | | | | | |
| | | | | | FINAL ACCE | TANCE [16] | |

| FINAL ACCEPTANCE [16] | | | | |
|-----------------------|------|-----------|--|--|
| STAMP & SIGNATURE | [17] | DATE [18] | | |
| | | | | |
| | | | | |

TLC_Table 1



TOOL LOG CARD

ISSUE -/- Pag. **2** of **3**

| TOOL KIT P/N: [1] | TOOL KIT DESCRIPTION: [2] | TOOL KIT S/N: [3] |
|---------------------------|---------------------------|-------------------|
| TOOL P/N [:] [4] | TOOL S/N: [5] | REMARKS: |

| | Section 2: HISTOR | | |
|-------|-------------------|------|------------------------|
| [19] | [8] | [6] | CERTIFICATION [13] |
| N°USE | DATE | NOTE | STAMP & SIGNATURE [14] |
| 1 | | | |
| 2 | | | |
| 3 | | | |
| 4 | | | |
| 5 | | | |
| 6 | | | |
| 7 | | | |
| 8 | | | |
| 9 | | | |
| 10 | | | |

| RICAL USES RECORD | | | | | | | | |
|-------------------|-------|------|------|-----|----------------------|------|--|--|
| ' | [19] | [8] | | [6] | CERTIFICATION | [13] | | |
| | N°USE | DATE | NOTE | | STAMP & SIGNATURE | [14] | | |
| | 11 | | | | | | | |
| | 12 | | | | | | | |
| | 13 | | | | | | | |
| | 14 | | | | | | | |
| | 15 | | | | | | | |
| | 16 | | | | | | | |
| | 17 | | | | | | | |
| | 18 | | | | | | | |
| | 19 | | | | | | | |
| | 20 | | | | | | | |

TLC_Table 2



TOOL LOG CARD

ISSUE -/- Pag. **3** of **3**

| LOG CARD FILLING INSTRUCTIONS | | | |
|---|--|------|--|
| FIELD # | HEADER | NOTE | |
| 1 | Part number of the tool Kit | | |
| 2 | Tool Kit denomination | | |
| 3 | Serial Number of the tool Kit | | |
| 4 | Part Number of the tool (part of kit) | | |
| 5 Serial Number of the tool (if applicable) | | | |
| 6 | Indicate any details of the use | | |
| 7 | Sequential number of check performed | | |
| 8 | Date of the activity | | |
| 9 | PN of tool or component (part of tool) checked/affected by issue | | |
| 10 | Typology or description of checks /issue | | |
| 11 | Check frequency | | |
| 12 | Check result | | |
| 13 | Check remarks | | |
| 14 | Performance certification | | |
| 15 | Stamp and signature of the personnel which performs the check | | |
| 16 | Section related to the final approval | | |
| 17 | Stamp and signature of the personnel which performs the final approval | | |
| 18 | Date on which the final check was made | | |
| 19 | Sequential number of performed used of the tool | | |