

INCORPORATED DATA	ACTION
INTRODUCTION, LOEP PAGE 1-1	
1. General	NIL CHANGES
A. Statement of Purpose	
B. Maintenance Practices	NIL CHANGES
2. Airframe or Engine Modifications	
A. Propeller Stress Levels	NIL CHANGES
B. Engine Modifications	
3. Restrictions and Placards	NIL CHANGES
A. Important Information	
4. Reference Publications	NIL CHANGES
A. Hartzell Propeller Inc. Publications	
B. Vendor Publications	NIL CHANGES
5. Personnel Requirements	
A. Service and Maintenance Procedures in this Manual	NIL CHANGES
6. Special Tooling and Consumable Materials	
A. Special Tooling	NIL CHANGES
B. Consumable Materials	
7. Safe Handling of Paints and Consumable Materials	NIL CHANGES
A. Instructions for Use	
8. Calendar Limits and Long Term Storage	NIL CHANGES
A. Calendar Limits	
B. Long Term Storage	NIL CHANGES
9. Component Life and Overhaul	
A. Component Life	NIL CHANGES
B. Overhaul	
10. Damage/Repair Types	NIL CHANGES
A. Airworthy/Unairworthy Damage	
B. Minor/Major Repair	NIL CHANGES
11. Propeller Critical Parts	
A. Propeller Critical Parts	NIL CHANGES
12. Warranty Service	
A. Warranty Claims	NIL CHANGES
13. Hartzell Propeller Inc. Contact Information	
A. Product Support Department	NIL CHANGES
B. Technical Publications Department	
C. Recommended Facilities	NIL CHANGES
14. Definitions	
15. Abbreviations	NIL CHANGES
DESCRIPTION AND OPERATION, LOEP PAGE 2-1	
1. Description of Propellers and Systems	NIL CHANGES
E. Propeller Model Designation	
2. Propeller Blades	NIL CHANGES
A. Description of Aluminum Blades	
B. Blade Model Designation	NIL CHANGES
3. Governors	
B. Governor Model Designation	NIL CHANGES
4. Propeller Ice Protection Systems	
A. System Description	NIL CHANGES
INSTALLATION AND REMOVAL, LOEP PAGE 3-1	
1. Tools, Consumables, and Expendables	NIL CHANGES
A. Tooling	
B. Consumables	
C. Expendables	

2. Pre-Installation	
A. Inspection of Shipping Package	
B. Uncrating	NIL CHANGES
C. Inspection after Shipment	
D. Reassembly of a Propeller Disassembled for Shipment	
3. Propeller Mounting Hardware and Torque Information	
A. Propeller Mounting Hardware	NIL CHANGES
B. Torque Information	
4. Propeller Installation	
A. Precautions	NIL CHANGES
B. Installing HC-B(3, 5)()(-2() Propeller on the Aircraft Engine	N/A DUE TO PROP. SERIAL NUMBER
C. Installing HC-B(3,4,5)()(A,N,P)-3() Propeller on the Aircraft Engine	NIL CHANGES
D. Installing HC-B(3,4)()W-3() Propeller on the Aircraft Engine	N/A DUE TO PROP. SERIAL NUMBER
E. Installing HC-B(3,4)()(-5() Propeller, with a One-piece Spinner Mounting Plate, on the Aircraft Engine	N/A DUE TO PROP. SERIAL NUMBER
F. Installing HC-B(3,4,5)()(-5() Propeller, with a Two-piece Spinner Mounting Plate, on the Aircraft Engine	N/A DUE TO PROP. SERIAL NUMBER
G. Installing HC-()3()(-7() Propeller on the Allison Engine	N/A DUE TO PROP. SERIAL NUMBER
5. Spinner Dome Installation	
A. Installation Procedure	NIL CHANGES
6. Post-Installation Check	NIL CHANGES
7. Spinner Removal	NIL CHANGES
TESTING AND TROUBLESHOOTING, LOEP PAGE 4-1	
1. Operational Checks	
A. Operational Checks	NIL CHANGES
2. Propeller Ice Protection Systems	
A. Operational Checks and Troubleshooting	NIL CHANGES
3. Troubleshooting	
E. Failure to Unfeather	NIL CHANGES
F. Start Lock Units Fail to Latch	
INSPECTION AND CHECK, LOEP PAGE 5-1	
4. Required Periodic Inspections and Maintenance	
A. Periodic Inspections	ALL TASK UPDATED TO NEW REV. 18 DATED MARCH 2021
E. Overhaul Periods	NIL CHANGES
MAINTENANCE PRACTICES, LOEP PAGE 6-1	
1. Cleaning	
A. General Cleaning	NIL CHANGES
B. Spinner Cleaning and Polishing	
2. Lubrication	
A. Lubrication Intervals	NIL CHANGES
B. Lubrication Procedure	ALL TASK UPDATED TO NEW REV. 18 DATED MARCH 2021
C. Approved Lubricants	NIL CHANGES
3. Corrosion Inhibitor	
A. Application Intervals	NIL CHANGES
B. Application Procedure	ALL TASK UPDATED TO NEW REV. 18 DATED MARCH 2021
4. Beta Feedback Block Assemblies	
A. Inspection	
B. Replacement of A-3026 Carbon Block Unit in the A-3044 Beta Feedback Block Assembly	NIL CHANGES

C. Installation of the A-3044 Beta Feedback Block Assembly	
5. Aluminum Blades	
A. Important Information	NIL CHANGES
B. Repair of Nicks and Gouges	
C. Repair of Bent Blades	
6. Blade Paint Touch-Up	
A. Important Information	NIL CHANGES
B. Paint	
C. Procedure	
7. Dynamic Balance	
A. Overview	NIL CHANGES
B. Inspection Procedures Before Balancing	
C. Modifying Spinner Bulkhead to Accommodate Dynamic Balance Weights	
D. Placement of Balance Weights for Dynamic Balance	
8. Hydraulic Low Pitch Stop Setting	NIL CHANGES
9. Feathering Pitch Stop Settings	NIL CHANGES
10. Reverse Pitch Stop Settings	NIL CHANGES
11. Propeller Ice Protection Systems	NIL CHANGES
12. Tachometer Calibration	
A. Important Information	NIL CHANGES
B. Tachometer Calibration	
LIST OF FIGURES	
Lubrication Fitting Figure 6-1	NIL CHANGES
Lubrication Label Figure 6-2	NIL CHANGES
Applying Corrosion Inhibitor CM352 Figure 6-3	ALL TASK UPDATED TO NEW REV. 18 DATED MARCH 2021
Beta Feedback Block Assembly and Beta Ring Clearance Figure 6-4	NIL CHANGES
Beta Feedback Block Assembly Figure 6-5	NIL CHANGES
Repair Limitations Figure 6-6	NIL CHANGES
LIST OF TABLES	
Touch-up Paints Table 6-1	NIL CHANGES
ANTI-ICE AND DE-ICE SYSTEMS, LOEP PAGE 7-1	
1. Anti-ice System Description	
A. Overview of an Anti-ice System	NIL CHANGES
B. Components of an Anti-ice System	
C. Anti-ice System Operation	
2. De-ice System Description	
A. Overview of a De-ice System	NIL CHANGES
B. Components of a De-ice System	
C. De-ice System Operation	
3. Operational Checks	NIL CHANGES
4. Troubleshooting	NIL CHANGES
5. Periodic Inspections	NIL CHANGES
RECORDS, LOEP PAGE 8-1	
1. Record Keeping	
A. General	NIL CHANGES
B. Information to be Recorded	