

New and Changed data module, involved in this MM issue 006, dated 2021-04-15 as follows:

HIGHLIGHTS

(DMC-429-A-00-00-00-00A-00UA-A, Issue 006 - 2021/04/15, ECCN EAR99)

The listed changes are introduced in issue 006, dated 2021-04-15, of this publication.

C = Changed data module, N = New data module

N/C	Data module
Front Matter:	
C	DMC-BHT-A-00-00-00-00A-018A-A , Use of a S1000D publication - Introduction
Chapter 01 - General Information:	
C	DMC-429-A-00-00-00-00A-096A-A , General Information - Critical Parts
Chapter 09 - Towing:	
C	DMC-429-A-09-10-00-00A-174A-A , Towing - Skid Landing Gear Towing Procedure
C	DMC-429-A-09-10-00-20A-174A-A , Hydraulic Jack - Repair
C	DMC-429-A-09-10-00-22A-174A-A , Towing - Wheeled Landing Gear
Chapter 10 - Parking And Mooring:	
C	DMC-429-A-10-30-00-00A-810A-A , Storage - Flyable Storage
Chapter 11 - Placards And Markings:	
C	DMC-429-A-11-00-00-00A-028A-A , Placards and Markings - General
C	DMC-429-A-11-00-00-00A-067A-A , Placards and Markings - Application of Decals
C	DMC-429-A-11-30-00-00A-067A-A , Placards and Markings - Instrument Panel Placards and Markings
C	DMC-429-A-11-20-00-00A-067A-A , Placards and Markings - Danger - Do Not Pass Marking - Application
Chapter 12 - Servicing:	
C	DMC-429-A-12-00-00-14A-234A-A , Servicing - Servicing Intervals
Chapter 18 - Vibration Analysis:	
C	DMC-429-A-18-10-00-07A-271A-A , Main Rotor Autorotation RPM - Adjustment
Chapter 21 - Air Distribution:	
C	DMC-429-A-21-00-00-00A-422A-A , Air Distribution - Troubleshooting
C	DMC-429-A-21-00-00-02A-042A-A , Cockpit Plenum Assembly - Description
C	DMC-429-A-21-00-00-00A-530A-A , Cockpit Plenum Assembly - Disassembly
C	DMC-429-A-21-00-00-00A-310A-A , Cockpit Plenum Assembly - Inspection
C	DMC-429-A-21-00-00-00A-600A-A , Cockpit Plenum Assembly - Repair
C	DMC-429-A-21-00-00-00A-710A-A , Cockpit Plenum Assembly - Assembly
C	DMC-429-A-21-00-00-03A-042A-A , Defog/Vent Blower - Description
C	DMC-429-A-21-00-00-00A-720A-A , Defog/Vent Blower - Installation
C	DMC-429-A-21-00-00-04A-042A-A , Flapper Valve - Description
C	DMC-429-A-21-00-00-01A-520A-A , Flapper Valve - Removal
C	DMC-429-A-21-00-00-01A-720A-A , Flapper Valve - Installation
C	DMC-429-A-21-00-00-05A-042A-A , Air Outlet Valves - Description
C	DMC-429-A-21-00-00-06A-042A-A , Defog Nozzle - Description
C	DMC-429-A-21-00-00-03A-720A-A , Defog Nozzle - Installation
C	DMC-429-A-21-00-00-07A-042A-A , Cockpit Ventilation and Defog Ducts - Description
C	DMC-429-A-21-00-00-04A-720A-A , Cockpit Ventilation and Defog Ducts - Installation
C	DMC-429-A-21-00-00-08A-042A-A , Cockpit Ventilation and Defog Control Cables - Description
C	DMC-429-A-21-00-00-05A-520A-A , Cockpit Ventilation and Defog Control Cables - Removal
C	DMC-429-A-21-00-00-06A-310A-A , Cockpit Ventilation and Defog Control Cables - Inspection
C	DMC-429-A-21-00-00-05A-720A-A , Cockpit Ventilation and Defog Control Cables - Installation
C	DMC-429-A-21-00-00-04A-600A-A , Cabin Plenum Assembly - Repair
C	DMC-429-A-21-00-00-06A-720A-A , Cabin Plenum Assembly - Installation
C	DMC-429-A-21-00-00-12A-042A-A , Cabin Ventilation Control Assembly - Description
C	DMC-429-A-21-00-00-08A-720A-A , Cabin Ventilation Control Assembly - Installation
C	DMC-429-A-21-00-00-09A-520A-A , Avionics Blower - Removal
Chapter 22 - Automatic Flight Control System (AFCS):	
C	DMC-429-A-22-00-00-01A-913A-A , AFCS System - General Troubleshooting
Chapter 26 - Fire Protection:	
C	DMC-429-A-26-20-00-00A-720A-A , Portable Fire Extinguisher - Installation
Chapter 28 - Fuel System:	
C	DMC-429-A-28-40-00-02A-720A-A , Mid-aft Fuel Quantity Probe and Low Level Sensor - Installation
Chapter 32 - Landing Gear:	
C	DMC-429-A-32-00-00-04A-310A-A , Aft Crosstube Assembly - Inspection
C	DMC-429-A-32-00-00-05A-310A-A , Aft Pivot Assembly - Inspection

(Cont..)

Chapter 53 - Fuselage:

C [DMC-429-A-53-00-00-34A-720A-A](#), Tailboom Assembly - Installation

Chapter 62 - Main Rotor:

C [DMC-429-A-62-00-00-07A-310A-A](#), Main Rotor - Main Rotor Hub Assembly - Special Inspection - 1 to 3 Flight Hours Torque Check After Installation

C [DMC-429-A-62-10-00-00A-310A-A](#), Main Rotor Blade Assemblies - Inspection

C [DMC-429-A-62-20-00-00A-310A-A](#), Main Rotor Hub Assembly - Inspection

C [DMC-429-A-62-20-00-00A-720A-A](#), Main Rotor Hub Assembly - Installation

Chapter 63 - Main Rotor Drive System:

C [DMC-429-A-63-00-00-05A-421A-A](#), Main Rotor Drive System - Trouble No. 6 - Chip Detectors

Chapter 65 - Tail Rotor Drive System:

C [DMC-429-A-65-10-00-02A-710A-A](#), Hanger Assembly - Assembly

Chapter 67 - Flight Controls:

C [DMC-429-A-67-10-00-00A-280A-A](#), Collective Control System - Rigging Check

C [DMC-429-A-67-10-00-11A-520A-A](#), Cyclic Control Linkage - Removal

C [DMC-429-A-67-10-00-11A-720A-A](#), Cyclic Control Linkage - Installation

Chapter 95 - Instruments:

C [DMC-429-A-95-72-10-00A-913A-A](#), Integrated Display System - Initiated Bit Testing (IBIT)

Chapter 96 - Electrical:

C [DMC-429-A-96-60-00-00A-320A-A](#), Battery and External DC Power System - Operational Check

C [DMC-429-A-96-00-00-49A-042A-A](#), Utility Light - Description

C [DMC-429-A-96-00-00-12A-520A-A](#), Horizontal Stabilizer Position Lights - Removal

C [DMC-429-A-96-00-00-12A-720A-A](#), Horizontal Stabilizer Position Lights - Installation

C [DMC-429-A-96-00-00-40A-320A-A](#), Airframe Mounted Fuel Shutoff Valve System - Operational Check

Chapter 97 - Avionics:

C [DMC-429-A-97-20-00-04A-320A-A](#), CHFD - Operational Check

Chapter 98 - Wiring Diagrams:

C [DMC-429-A-98-00-00-07A-028A-A](#), Wiring Diagrams - Electrical, Avionics, and Kit Component Reference Designator Index Table and Location figure

C [DMC-429-A-98-00-00-09A-028A-A](#), Wiring Diagrams - Electrical Load Analysis

C [DMC-429-A-98-00-00-90A-051A-A](#), Avionics System - Audio Selector Panel (PMA 7000H) (S/N 57001 Through 57080) - Wiring Diagram

C [DMC-429-A-98-00-00-91A-051A-A](#), Avionics System - Audio Selector Panel (PMA 7000H) (S/N 57081 and Subsequent) - Wiring Diagram

Chapter 99 - Kits:

C [DMC-429-A-05-40-00-01A-281B-A](#), Scheduled Inspections - 24-Month Inspection
