 


ADVANCED RELEASE

- TO: Holders of RR300 Series Operations and Maintenance Manual, Publication CSP 21009.
- Reason: Revised cleaning procedure.
- Component: Compressor Front Bearing Oil Seal
- Remarks: Contact Rolls-Royce



EXPORT CONTROLLED



ADVANCED COPY

COMPRESSOR FRONT BEARING OIL SEAL

CLEANING

TASK 72-30-17-100-801

- 1. Clean the Compressor Front Bearing Oil Seal
 - A. General

This task gives you the procedure to clean the compressor front bearing oil seal.

B. Materials

None

C. Consumable Materials

None

D. Expendable Parts

None

E. Special Tools and Equipment

None

- F. References
 - (1) TASK 70-11-17-100-801, Clean with the Solvent in a Spray Booth, SPM.
 - (2) TASK 70-11-19-100-801, Clean with the Solvent in a Tank, SPM.
- G. Procedure

SUBTASK 72-30-17-110-001

- (1) Clean the compressor front bearing oil seal.
 - (a) Use the solvent in a spray booth or in a tank to clean the compressor front bearing oil seal (REF. TASK 70-11-17-100-801 or TASK 70-11-19-100-801).

EFFECTIVITY: ALL