



HELICOPTER COMPANY 2901 Airport Drive, Torrance, California 90505

Phone (310) 539-0508 Fax (310) 539-5198

COMPONENT RECORD

Part Number Descript F029-1 Tail Ro			ription Rotor Blade		Serial Numb			facture 22	Maximum Service Life 2000 Hours or 12 Years	Overhaul Interval N/A
Date Helicopter Model			Helicopter Serial Number		lelicopter e in Service	Component Time Since New or Overhaul	Action		Remarks	
10/JUN/2022	R66		1153 0		.00 Hours	New	REMOVAL INSTALLATION	MAINTENANCE OTHER		
							REMOVAL	MAINTENANCE	A. 100 - 100 - 100 - 100 - 100 - 100 - 100 - 100 - 100 - 100 - 100 - 100 - 100 - 100 - 100 - 100 - 100 - 100 -	
							☐ INSTALLATION	OTHER		
							REMOVAL	MAINTENANCE		
							INSTALLATION	OTHER		
							REMOVAL	MAINTENANCE		
							INSTALLATION	OTHER		
							REMOVAL	MAINTENANCE		
							INSTALLATION	OTHER		
							REMOVAL	MAINTENANCE		
							INSTALLATION	OTHER		
							REMOVAL	MAINTENANCE	1937 - 1937 - 1938 - 1948 - 19	
							INSTALLATION	OTHER		
							REMOVAL	MAINTENANCE		
							INSTALLATION	OTHER		
							REMOVAL	MAINTENANCE		
							INSTALLATION	OTHER		
130							REMOVAL	MAINTENANCE		
					<u> </u>		INSTALLATION	OTHER		
							REMOVAL	MAINTENANCE		
							INSTALLATION	OTHER		
							REMOVAL	MAINTENANCE		
							INSTALLATION	OTHER		
							REMOVAL	MAINTENANCE		
							INSTALLATION	OTHER		W All
							REMOVAL	MAINTENANCE		
							INSTALLATION	OTHER		
							REMOVAL	MAINTENANCE		
							INSTALLATION	OTHER		
							REMOVAL	MAINTENANCE		
I .	I			1		1	DINGTALL ATION	C OTHER		



HELICOPTER COMPANY 2901 Airport Drive, Torrance, California 90505

Phone (310) 539-0508 Fax (310) 539-5198

COMPONENT RECORD

Part Number F029-1		Description			Serial Number 2899		facture	Maximum Service Life	Overhaul Interval
		Tail Rotor B	lade	2899			22	2000 Hours or 12 Years	N/A
Date	Helicopt Model		opter Number T	Helicopter ime in Service	Component Time Since New or Overhaul	Action		Remarks	
						REMOVAL	MAINTENANCE		
						INSTALLATION	OTHER		
						REMOVAL	MAINTENANCE		
						INSTALLATION	OTHER		
						REMOVAL	MAINTENANCE		
	-					INSTALLATION	OTHER		
						REMOVAL	MAINTENANCE		
						INSTALLATION	OTHER		
						REMOVAL	MAINTENANCE		
						INSTALLATION	OTHER		
						REMOVAL	MAINTENANCE		
						INSTALLATION	OTHER		
			ľ			REMOVAL	MAINTENANCE		
						INSTALLATION	OTHER		
						REMOVAL	MAINTENANCE		
						INSTALLATION	OTHER		
						REMOVAL	MAINTENANCE		
						INSTALLATION	OTHER		
						REMOVAL	MAINTENANCE		
						INSTALLATION	OTHER		
						REMOVAL	MAINTENANCE		
						INSTALLATION	OTHER		
						REMOVAL	MAINTENANCE		
						INSTALLATION	OTHER		
						REMOVAL	MAINTENANCE		
						INSTALLATION	OTHER		
						REMOVAL	MAINTENANCE		
						INSTALLATION	OTHER		
						REMOVAL	MAINTENANCE		-

INSTALLATION OTHER

☐ INSTALLATION ☐ OTHER

REMOVAL

MAINTENANCE