



TEMPORARY REVISION

Manual: Owner's Manual (INSTRUCTIONS FOR CONTINUED AIRWORTHINESS)
P/N 6AB1WNM-2-20 (INSTALLATION MANUAL, MAINTENANCE MANUAL AND ILLUSTRATED PARTS BREAKDOWN)

First Issue: 23 September 2010

Revision DA: 12 September 2023

TR 2023-005: 27 September 2023

INSTRUCTIONS


1. Before adding present change be sure that manual is valid.
Check existing List of Effective Page of the manual to be sure that all previous revisions are inserted.
(Do not insert this change if previous revisions are not inserted).
2. Insert this page before the LOEP.
3. Insert present change removing pages superseded and insert new pages as listed:

Temporary Revision

Number/ Data	Section/Appendix	Page	Page Revision
*TR 2023-005 / 27 th September 2023	APPENDIX CL		
	SECTION 05	5-3	TR-2023-005
	SECTION 05	5-4	REV. DA
	SECTION 05	5-11	TR-2023-005
	SECTION 05	5-12	TR-2023-005
	SECTION 05	5-13	TR-2023-005
	SECTION 05	5-14	REV. DA


* Shows the last issued Temporary Revision

INTENTIONALLY LEFT BLANK

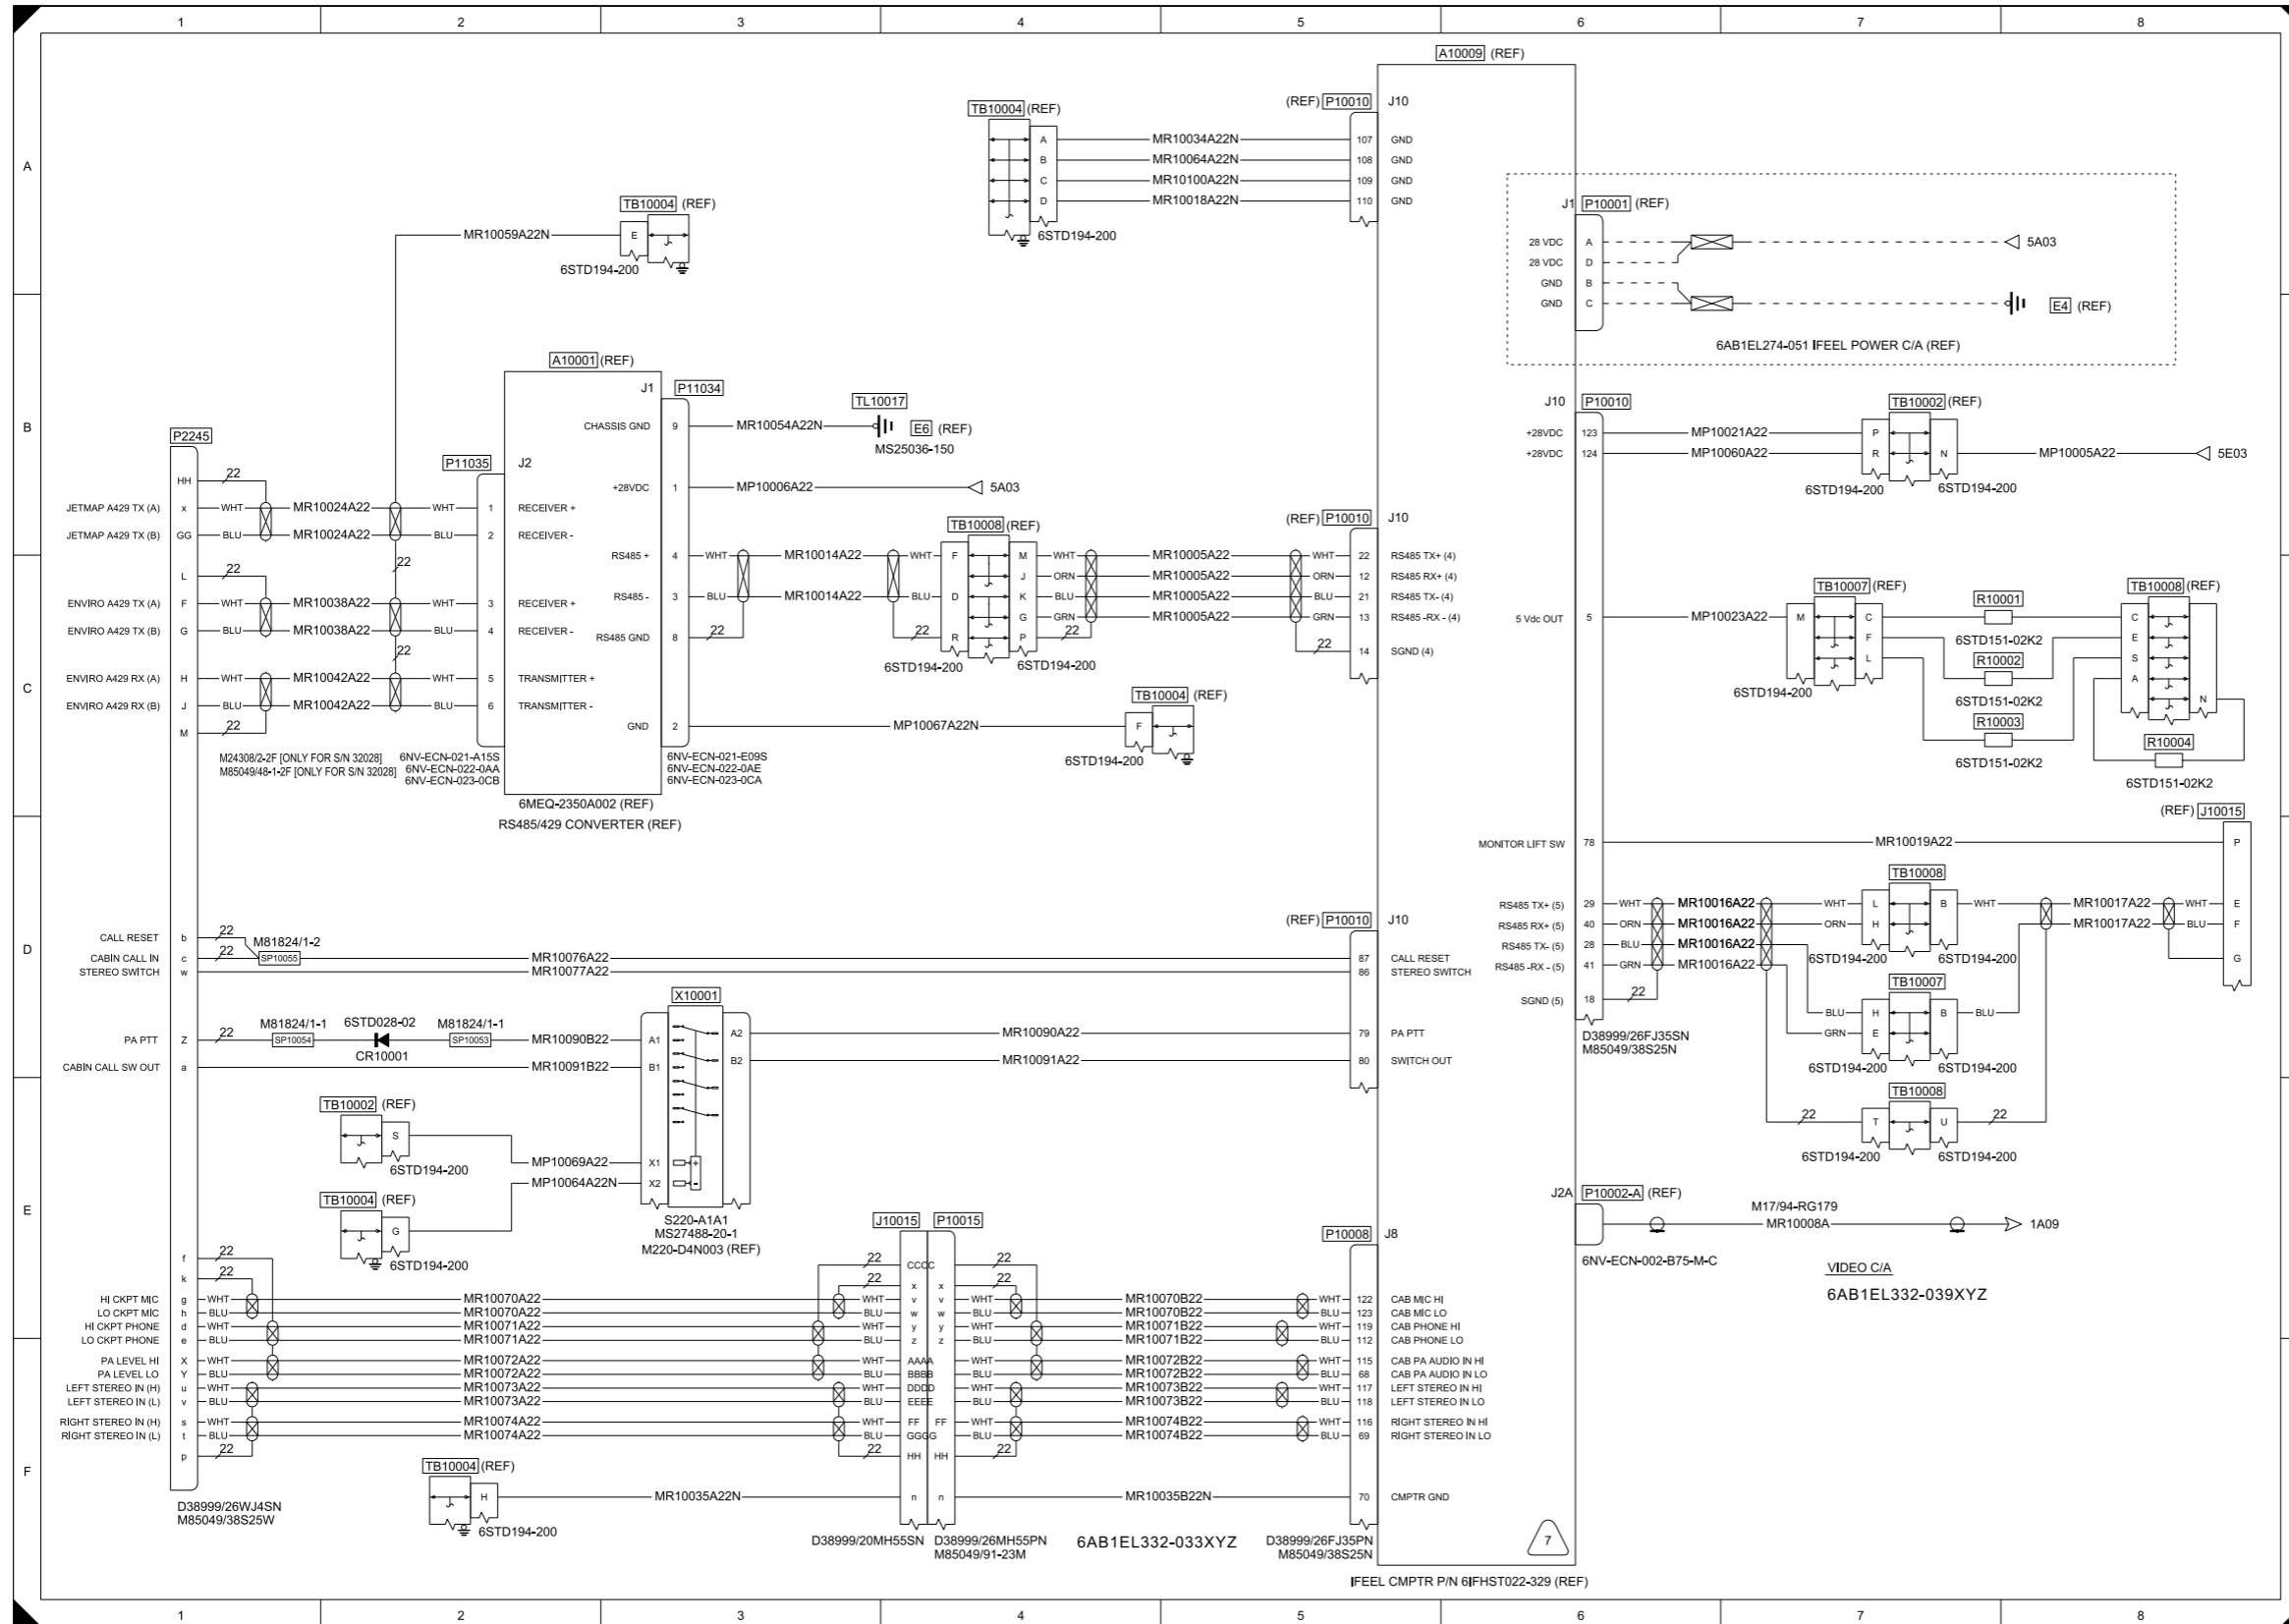


6AB1EL332-SH01-A
6AB1EL332-081A_WNM-2-20_3345A

Figure 5-1 32028 wiring diagrams (Sheet 1 of 11).

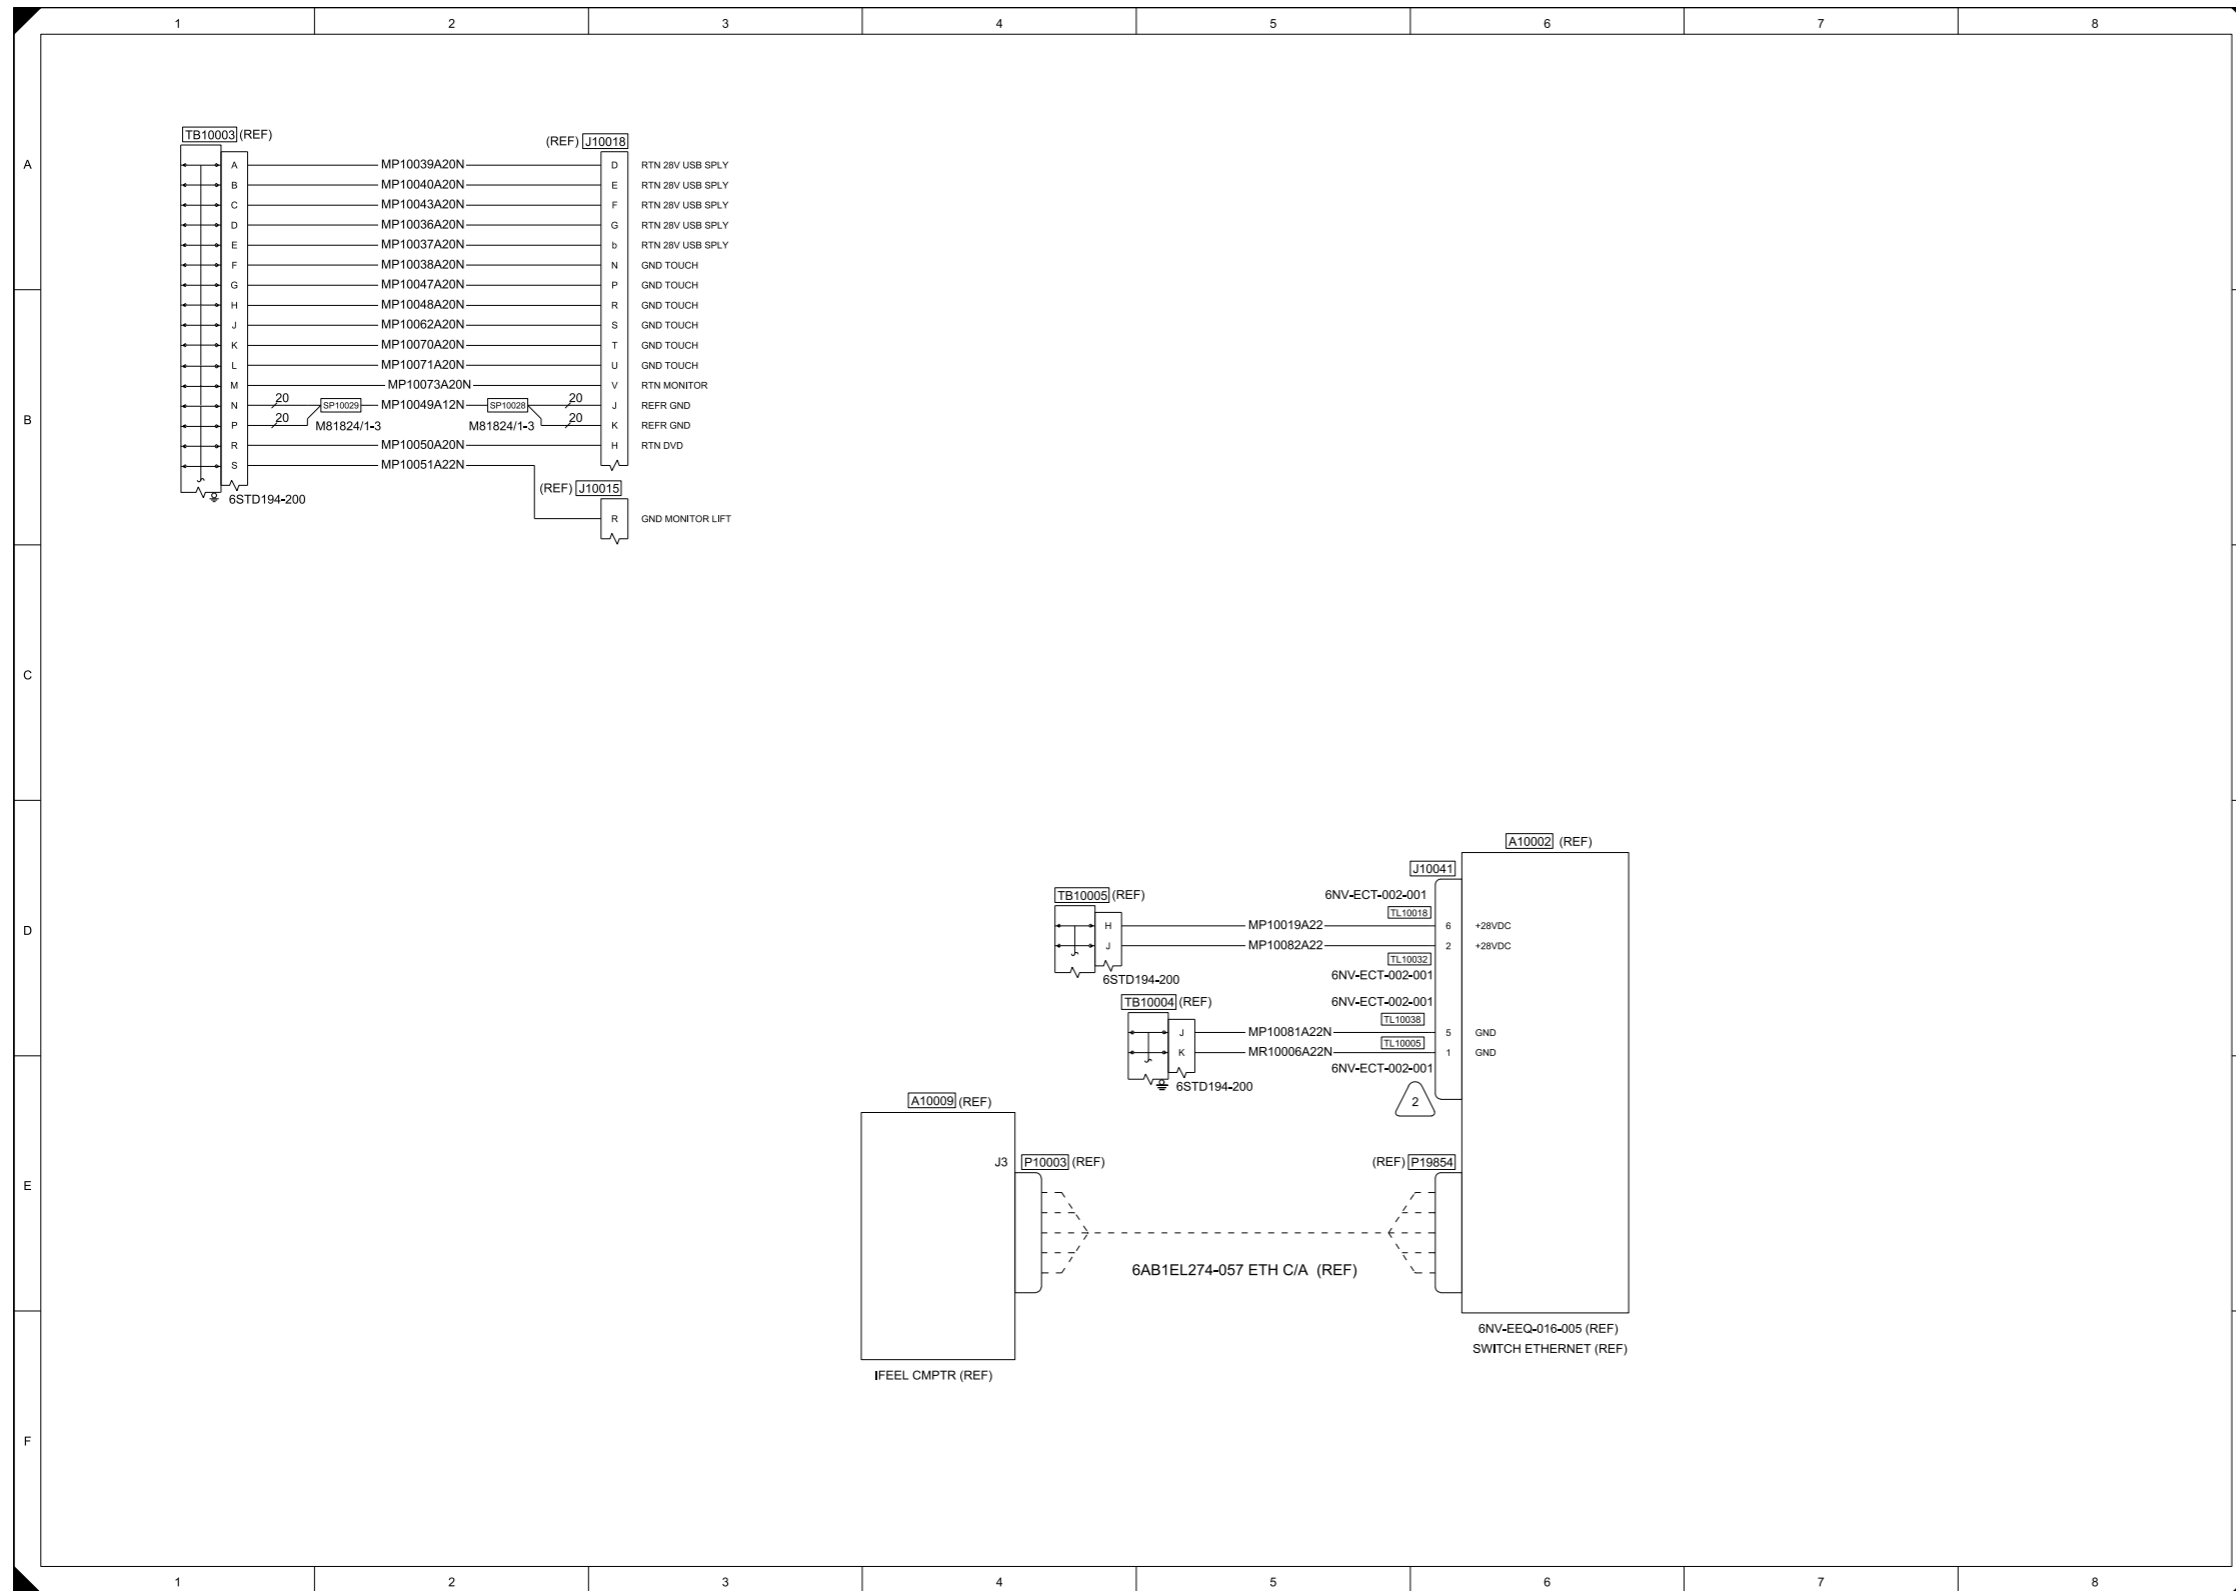


6AB1EL332-SH02-A
6AB1EL332-081A_WNM-2-20_3346A

Figure 5-1 32028 wiring diagrams (Sheet 2 of 11).

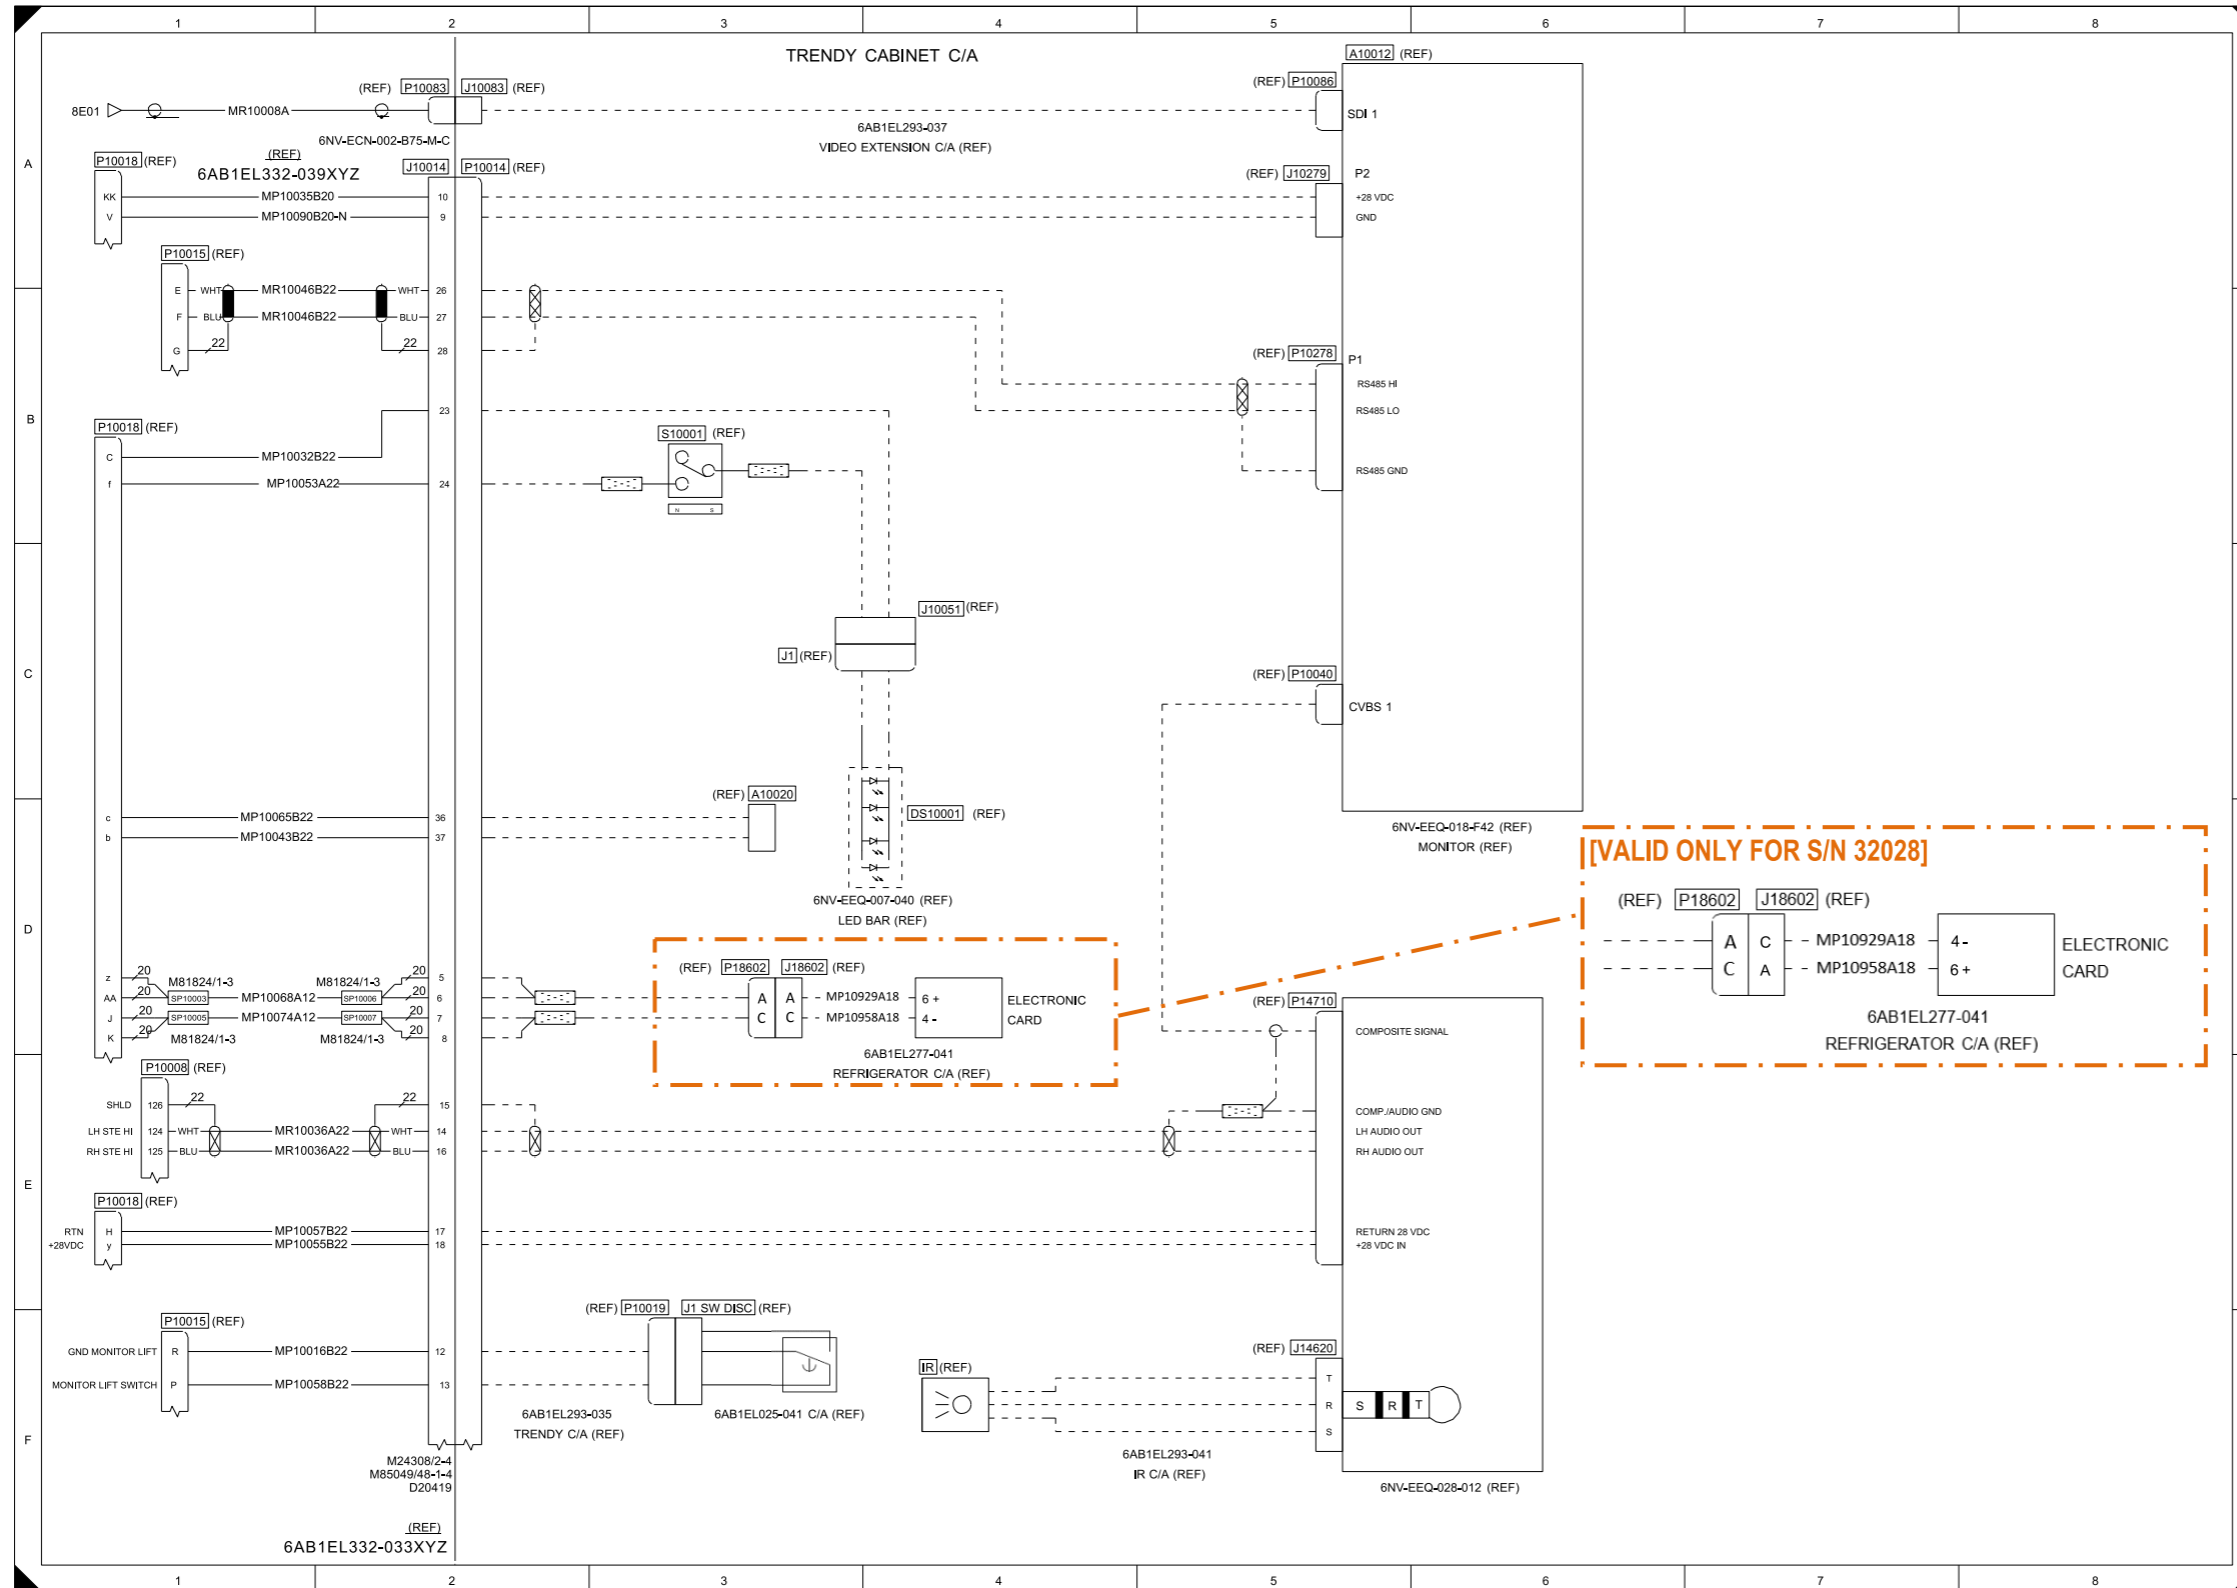


6AB1EL332-SH09-A
6AB1EL332-081A_WNM-2-20_3353A

Figure 5-1 32028 wiring diagrams (Sheet 9 of 11)

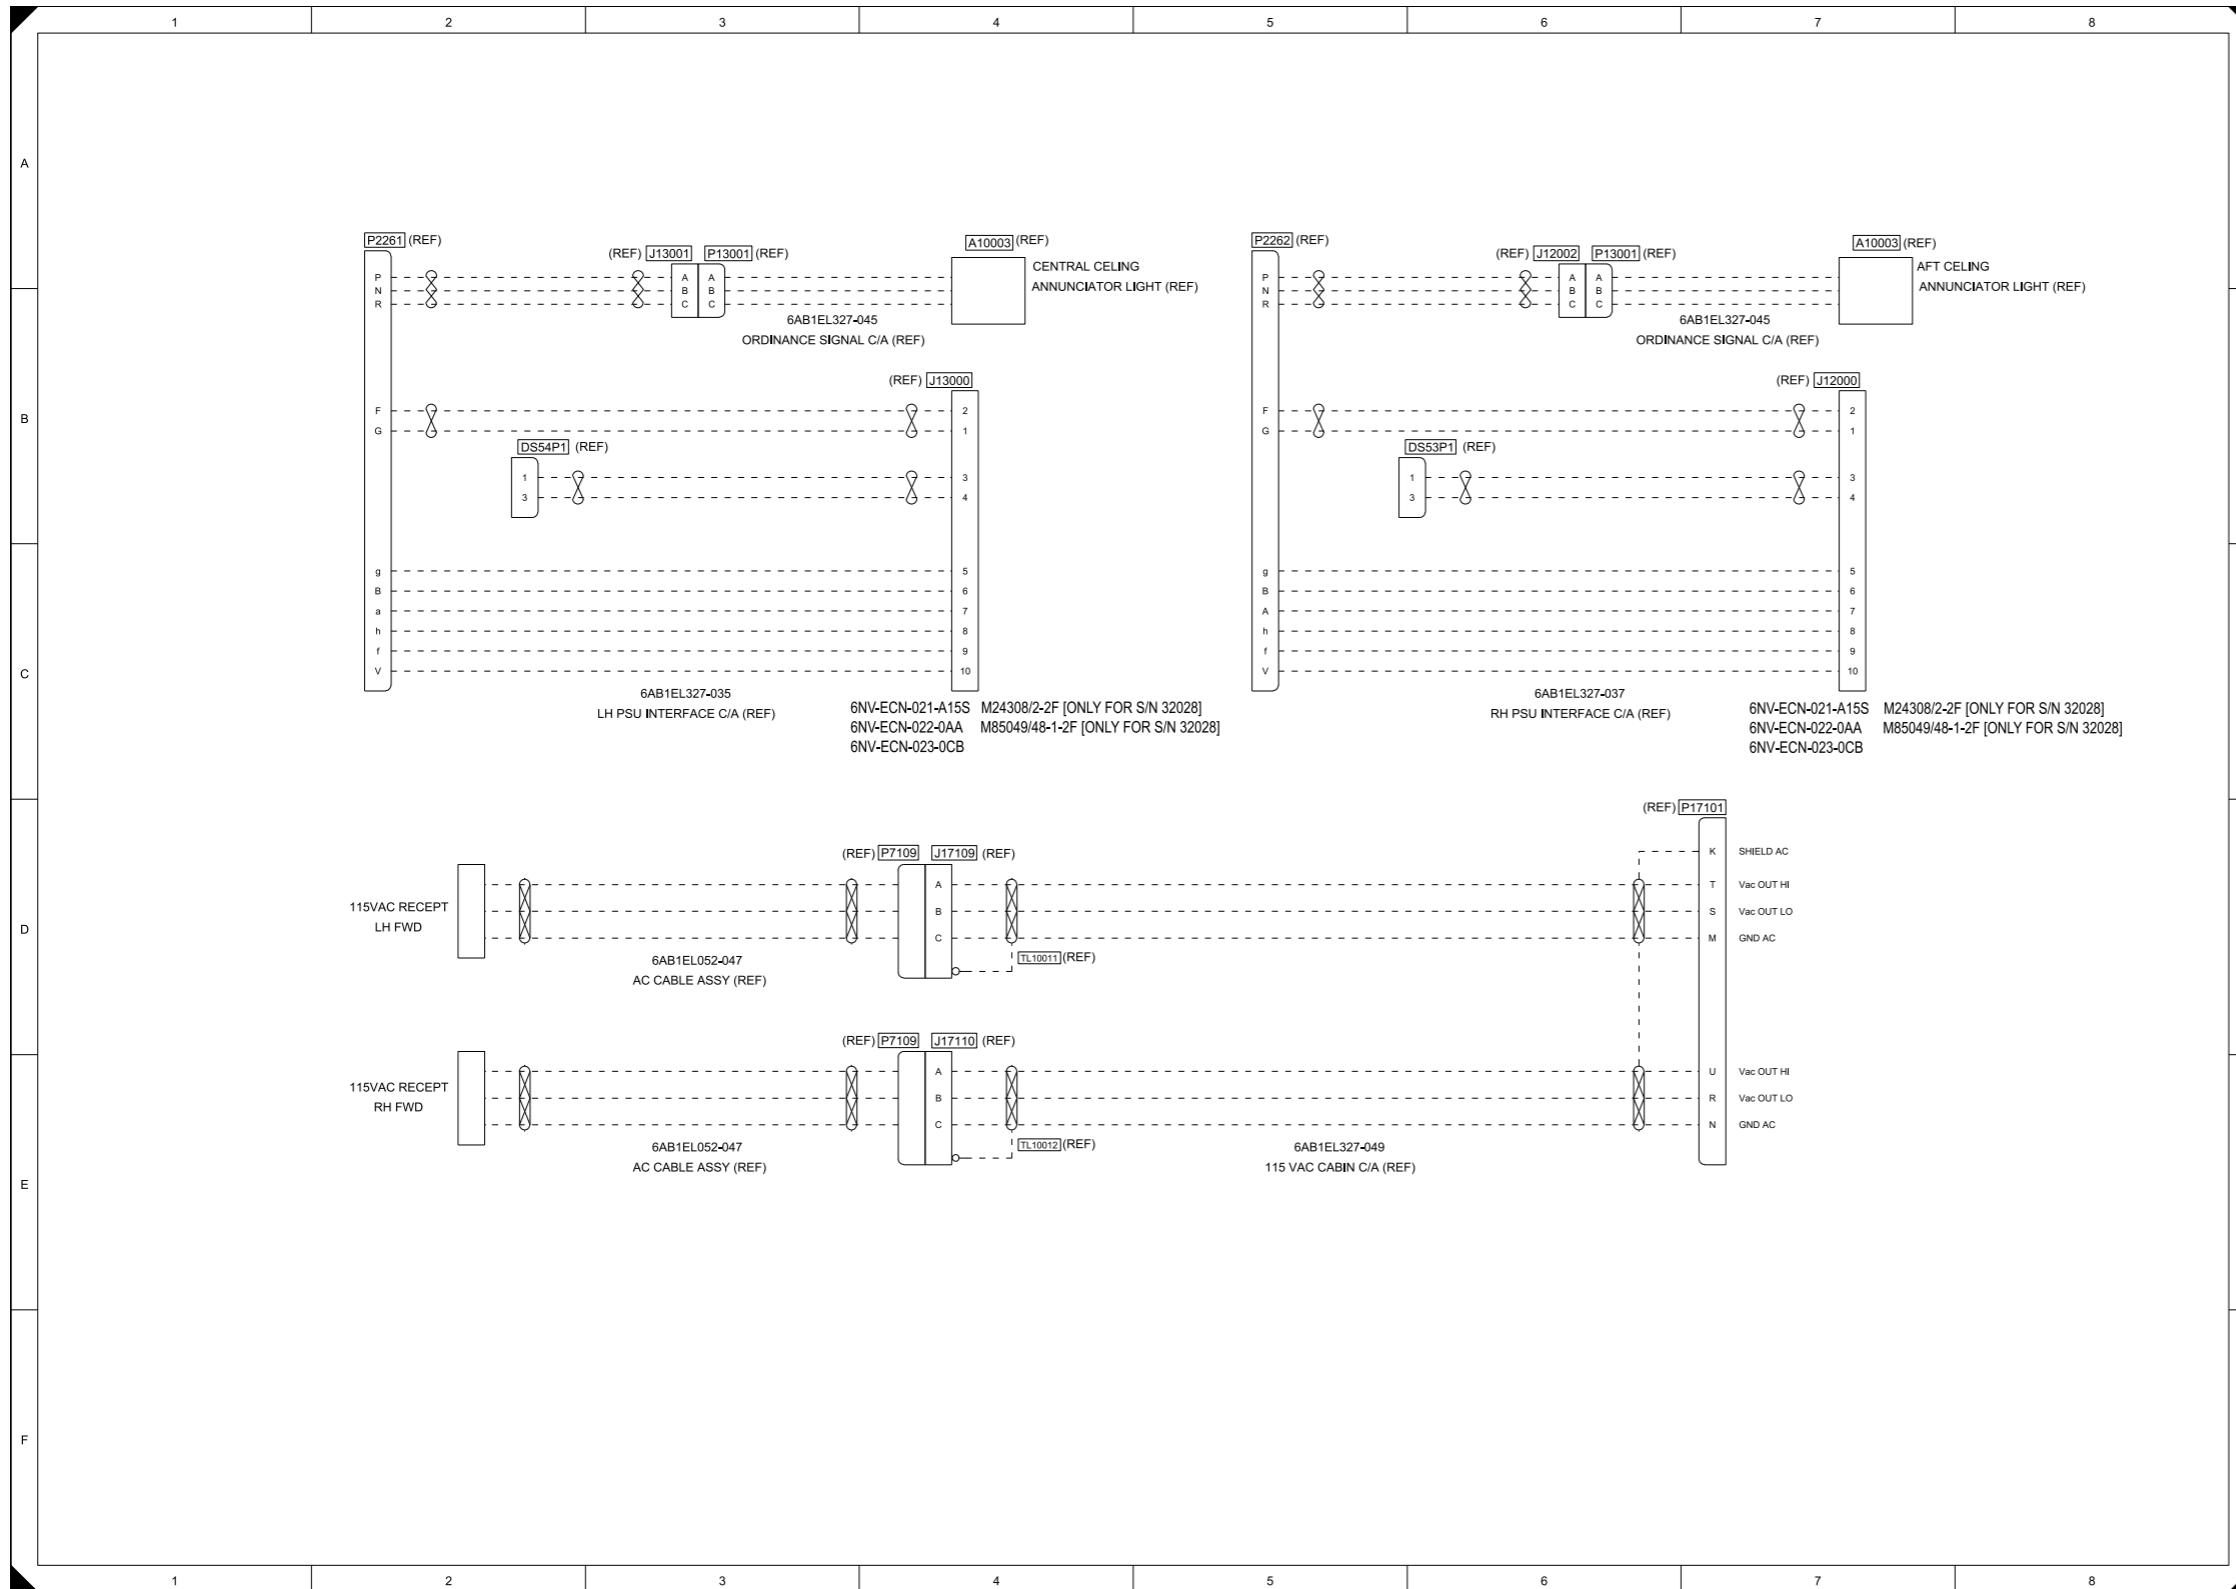

6AB1EL332-SH10-A
6AB1EL332-081A_WNM-2-20_3354A

Figure 5-1 32028 wiring diagrams (Sheet 10 of 11).

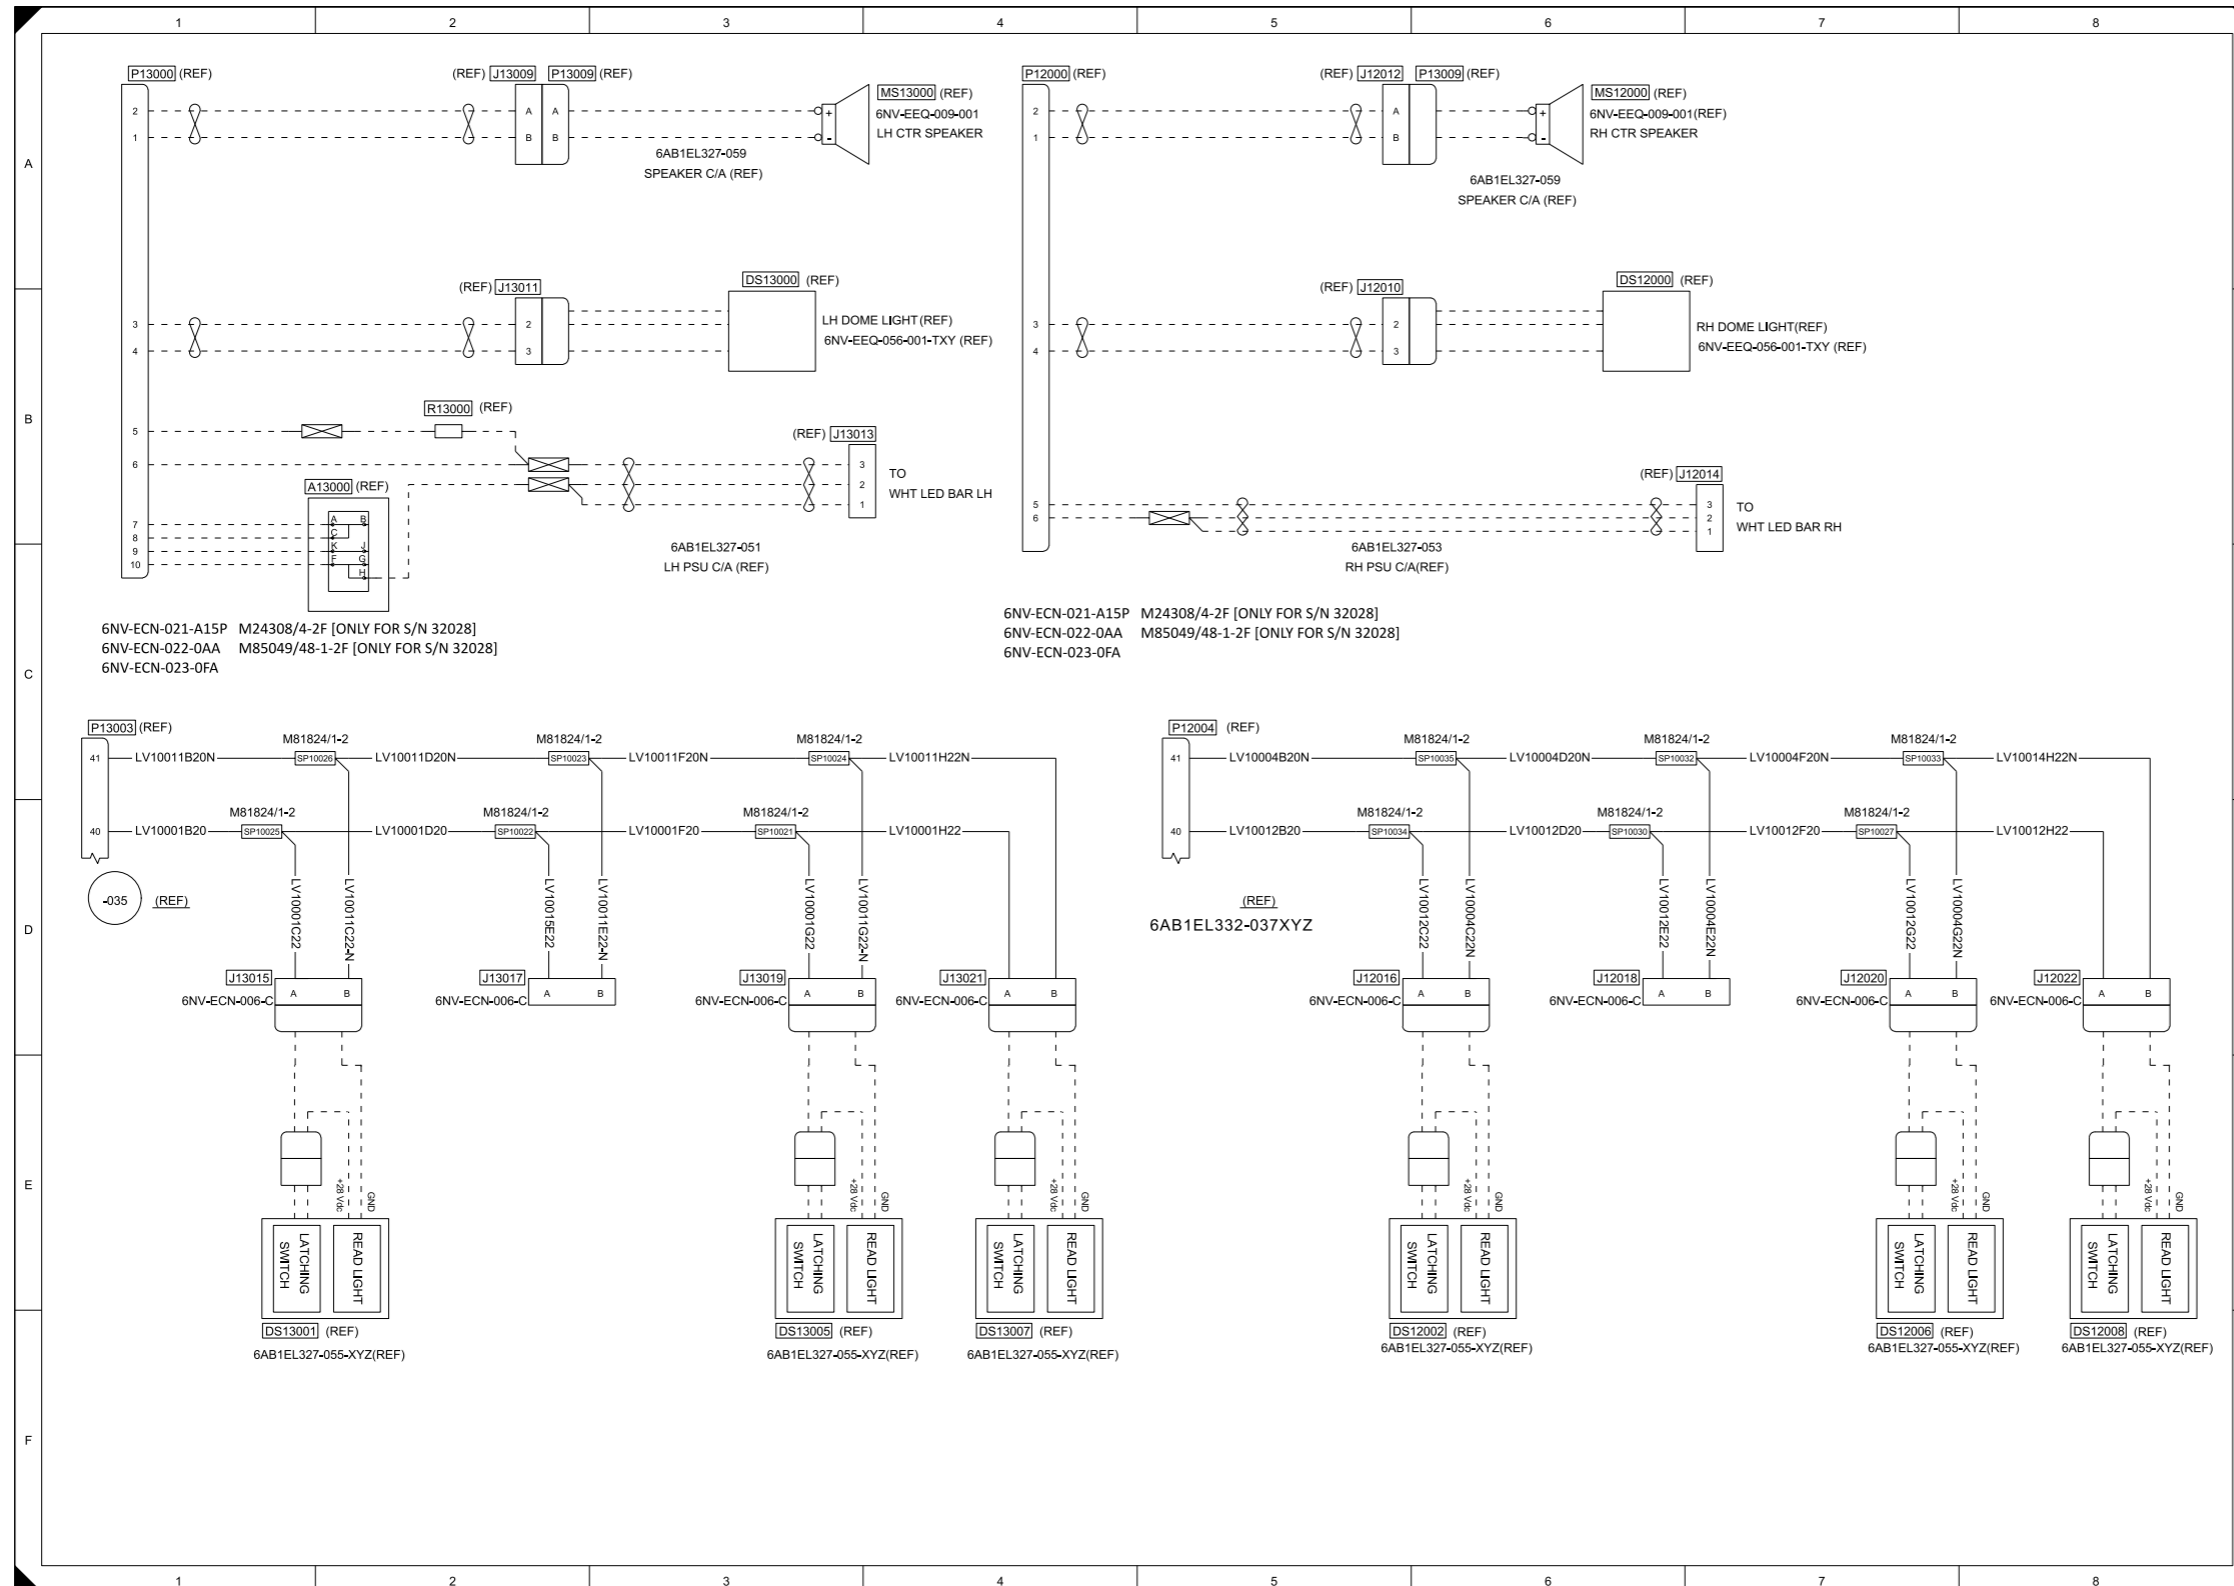

6AB1EL332-SH11-A
 6AB1EL332-081A_WNM-2-20_3354A

Figure 5-1 32028 wiring diagrams (Sheet 11 of 11).

INTENTIONALLY BLANK PAGE